


2012 - Mazda6 - Brakes

DSC OFF SWITCH REMOVAL/ INSTALLATION

1. Remove the following parts:

- a. Front scuff plate (driver-side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
- b. Front side trim (driver-side) (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
- c. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
- d. Decoration panel (driver-side) (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
- e. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
- f. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
- g. Lower panel (driver-side) (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))

2. Press the tabs.

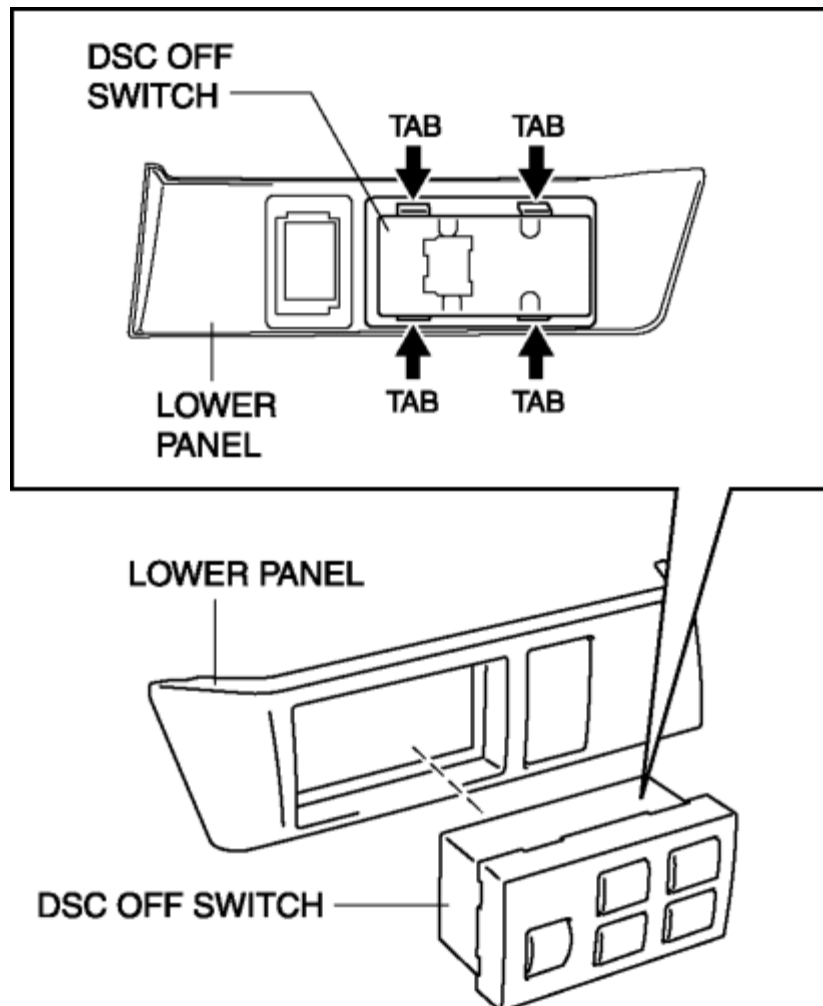

3. Remove the DSC OFF switch.
4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Brakes

DSC OFF SWITCH REMOVAL/ INSTALLATION

1. Remove the following parts:

- a. Front scuff plate (driver-side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
- b. Front side trim (driver-side) (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
- c. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
- d. Decoration panel (driver-side) (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
- e. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
- f. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
- g. Lower panel (driver-side) (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))

2. Press the tabs.

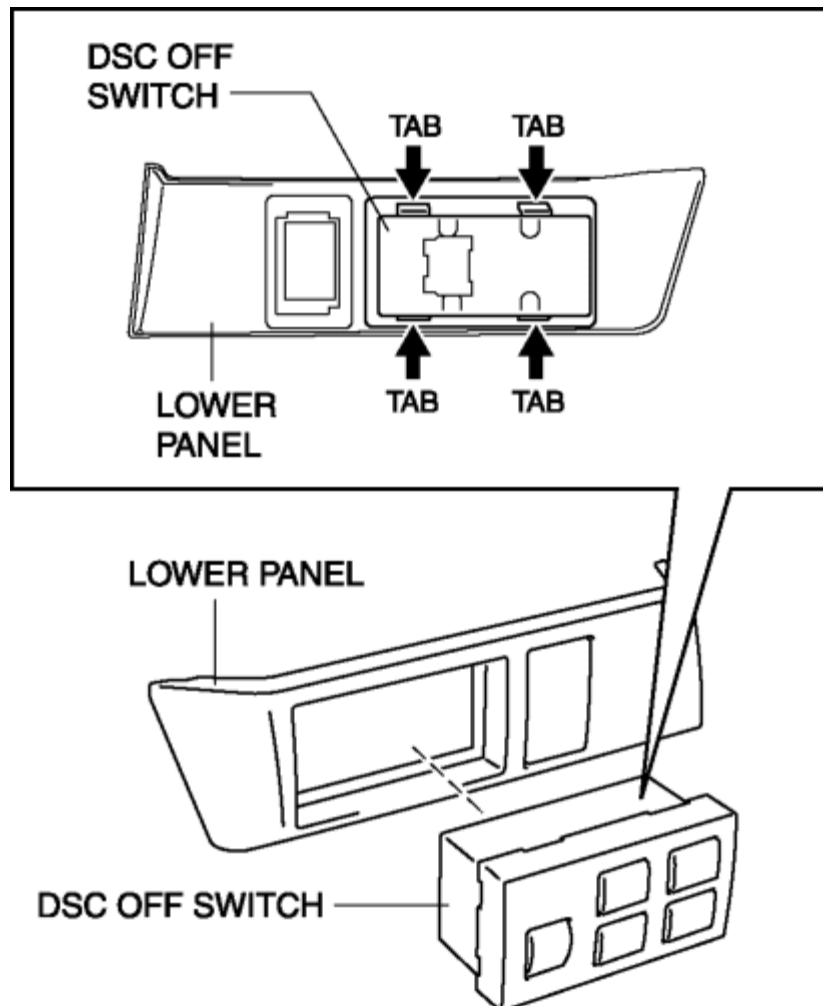

3. Remove the DSC OFF switch.
4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.