
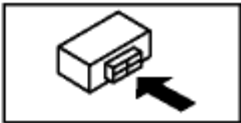
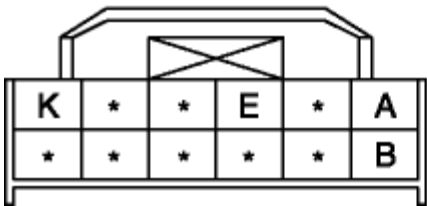


2012 - Mazda6 - Brakes

DSC OFF SWITCH INSPECTION

- 1. Remove the DSC OFF switch. (See [DSC OFF SWITCH REMOVAL/ INSTALLATION.](#))
- 2. Verify that the continuity between the DSC OFF switch terminals is as indicated in the table.
 - If not as indicated in the table, replace the DSC OFF switch.

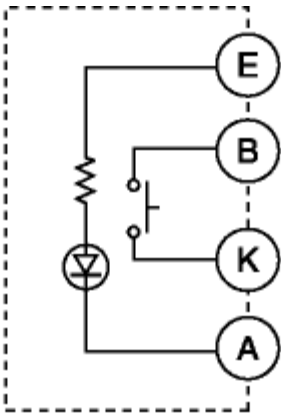

○—○: Continuity




Condition	Terminal	
	B	K
Switch pressed	○—○	○—○
Switch released		

- 3. Apply battery voltage to DSC OFF switch terminal E, and connect terminal A to ground.
- 4. Verify that the LED illuminates.
 - If there is any malfunction, replace the DSC OFF switch.

2012 - Mazda6 - Brakes

DSC OFF SWITCH INSPECTION

- 1. Remove the DSC OFF switch. (See [DSC OFF SWITCH REMOVAL/ INSTALLATION.](#))
- 2. Verify that the continuity between the DSC OFF switch terminals is as indicated in the table.
 - If not as indicated in the table, replace the DSC OFF switch.

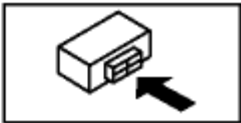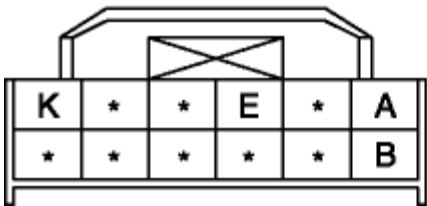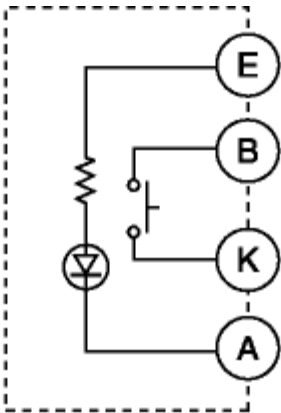

○—○: Continuity

Condition	Terminal	
	B	K
Switch pressed	○—○	○—○
Switch released		

- 3. Apply battery voltage to DSC OFF switch terminal E, and connect terminal A to ground.
- 4. Verify that the LED illuminates.
 - If there is any malfunction, replace the DSC OFF switch.

