


2012 - Mazda6 - Brakes

DSC LOCATI ON INDEX

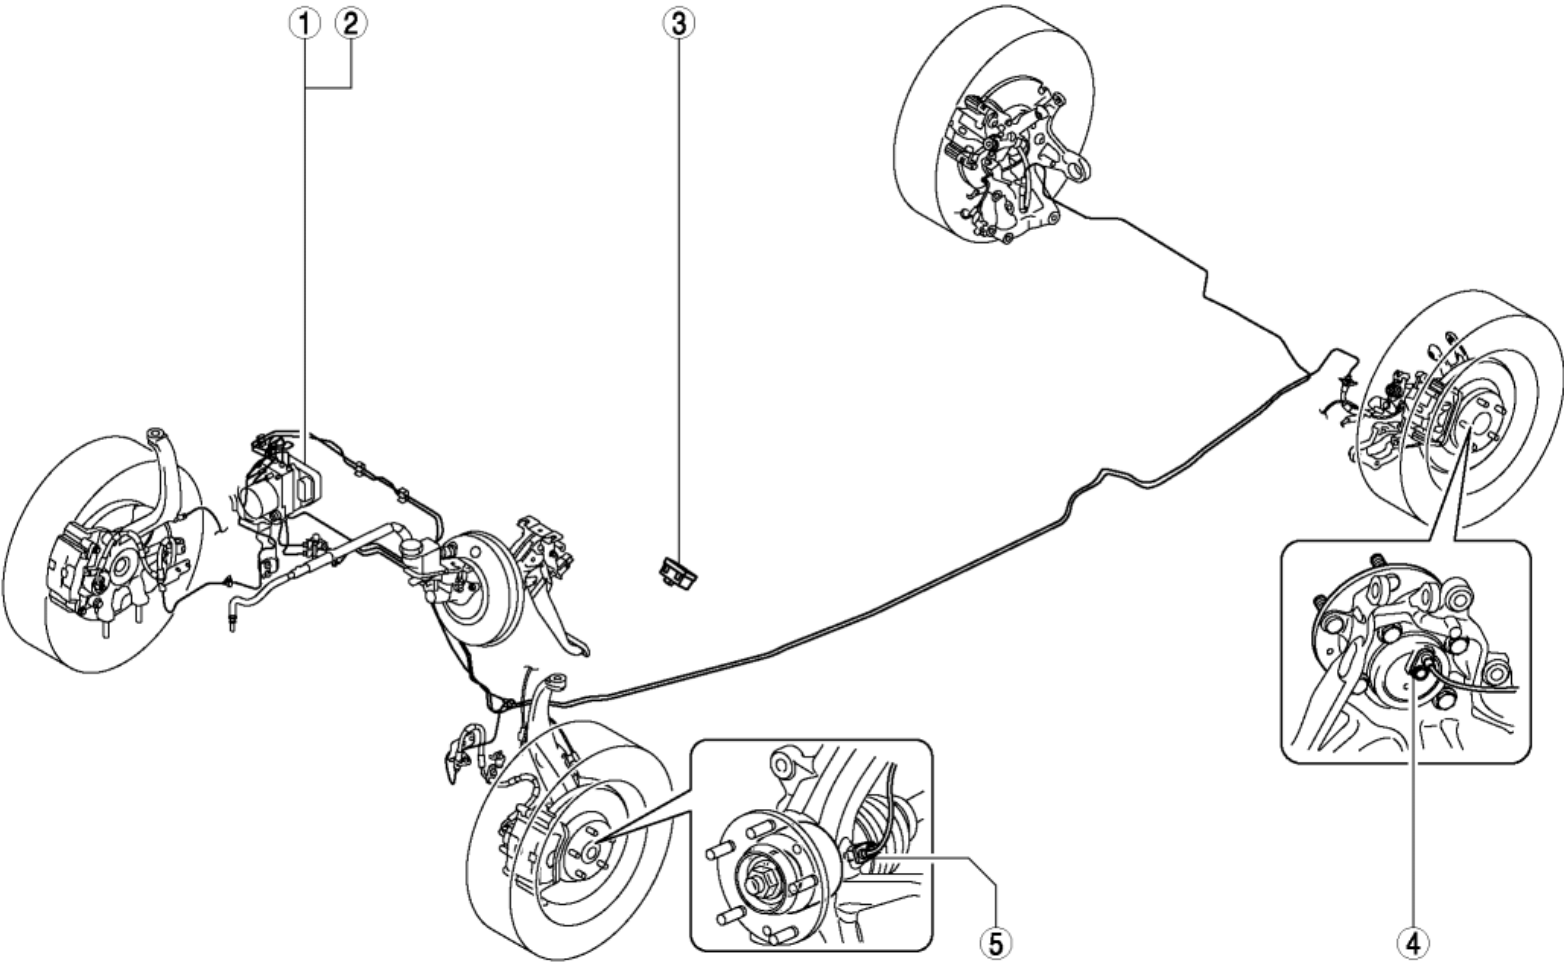

1	DSC HU/CM (See DSC HU/ CM REMOVAL/ INSTALLATION .) (See DSC CONFIGURATION .) (See DSC HU/ CM INSPECTI ON .)
2	Brake fluid pressure sensor (Built into DSC HU/CM) (See BRAKE FLUID PRESSURE SENSOR I NSPECTI ON .)
3	DSC OFF switch (See DSC OFF SWITCH REMOVAL/ INSTALLATI ON .) (See DSC OFF SWITCH I NSPECTI ON .)
4	Rear ABS wheel-speed sensor (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATI ON .) (See REAR ABS WHEEL-SPEED SENSOR I NSPECTI ON .)
5	

5Front ABS wheel-speed sensor

(See [FRONT ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION](#).)

(See [FRONT ABS WHEEL-SPEED SENSOR INSPECTION](#).)


[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Brakes

DSC LOCATI ON INDEX

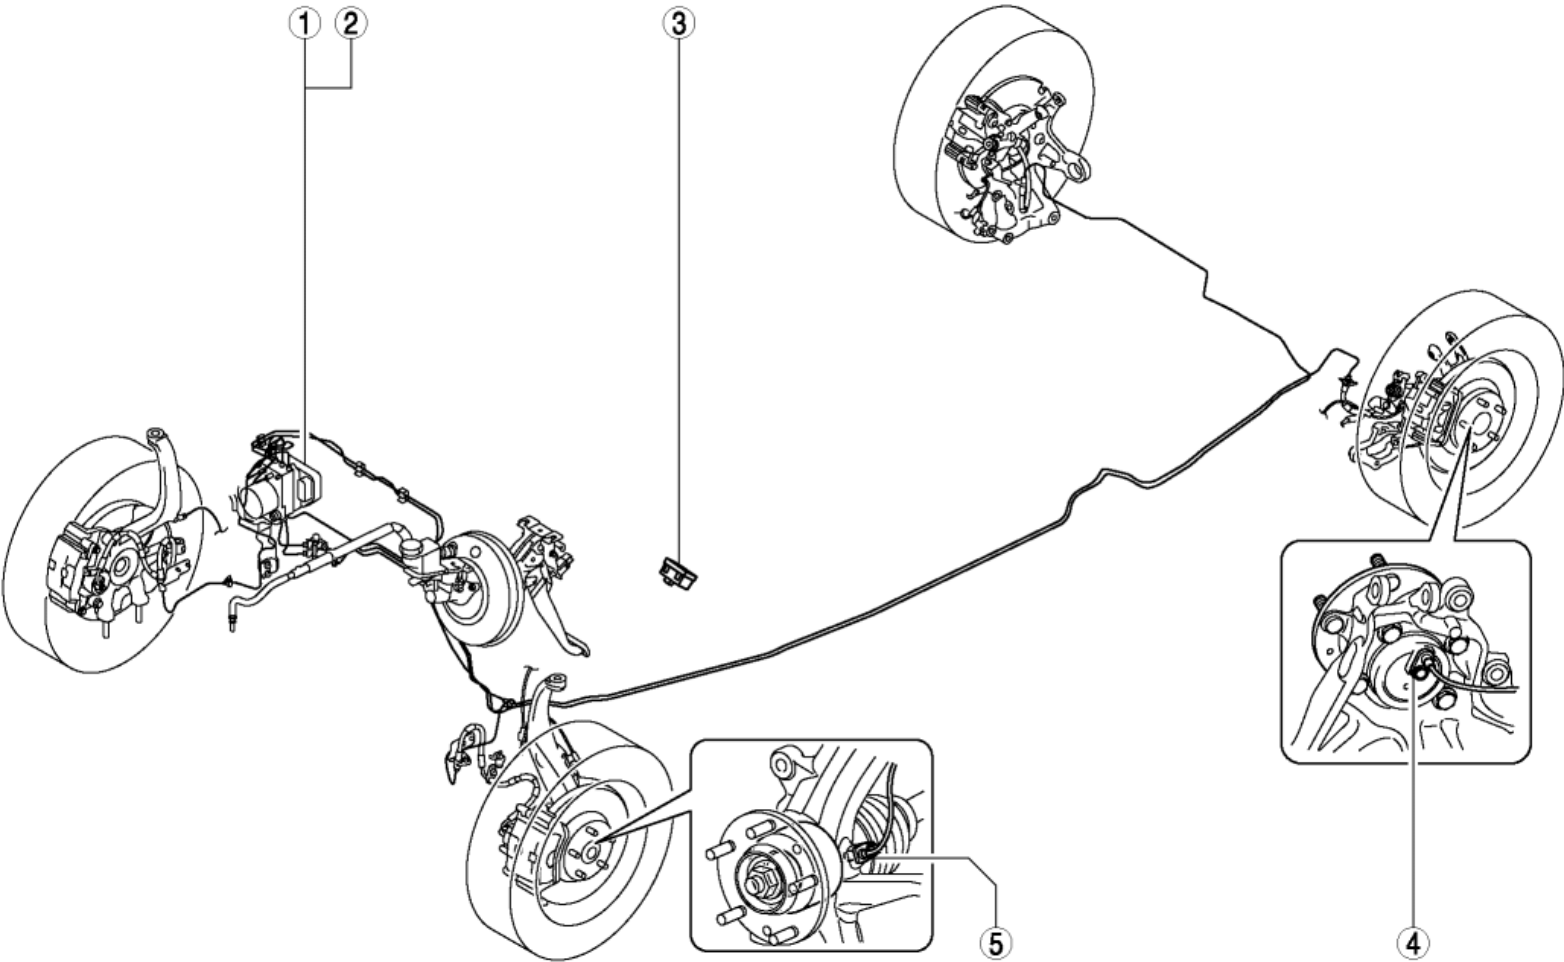

1	DSC HU/CM (See DSC HU/ CM REMOVAL/ INSTALLATION .) (See DSC CONFIGURATION .) (See DSC HU/ CM INSPECTI ON .)
2	Brake fluid pressure sensor (Built into DSC HU/CM) (See BRAKE FLUID PRESSURE SENSOR I NSPECTI ON .)
3	DSC OFF switch (See DSC OFF SWITCH REMOVAL/ INSTALLATI ON .) (See DSC OFF SWITCH I NSPECTI ON .)
4	Rear ABS wheel-speed sensor (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATI ON .) (See REAR ABS WHEEL-SPEED SENSOR I NSPECTI ON .)
5	

5Front ABS wheel-speed sensor

(See [FRONT ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION](#).)

(See [FRONT ABS WHEEL-SPEED SENSOR INSPECTION](#).)

[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)