

2012 - Mazda6 - Transmission/ Transaxle

DTC P0883:00 [FS5A-EL]

DTC P0883:00	Battery voltage high
DETECTION CONDITION	- The TCM detects that battery voltage is 16.01 V or more for 5 s. Diagnostic support note - The MIL illuminates if the TCM detects the above malfunction condition during the first drive cycle. - The AT warning light illuminates. - PENDING CODE is available. - FREEZE FRAME DATA is available. - The DTC is stored in the TCM memory.
POSSIBLE CAUSE	- Generator malfunction - TCM malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	VERIFY FREEZE FRAME DATA HAS BEEN RECORDED Has the FREEZE FRAME DATA been recorded on the repair order?	Yes Go to the next step.
		No Record the FREEZE FRAME DATA on the repair order, then go to the next step.
2	VERIFY RELATED REPAIR INFORMATION AVAILABILITY - Verify related Service Bulletins and/or on-line repair information availability. - Is any related repair information available?	Yes Perform repair or diagnosis according to the available repair information. If the vehicle is not repaired, go to the next step.
		No Go to the next step.
3	VERIFY DTC IS PRESENT	Yes Perform the "DTC P2504:00

	• Switch the ignition to ON (Engine off). • Read the DTC in the PCM. • Is the DTC P2504:00 output?		Troubleshooting". (See DTC P2504:00 [MZR 2.5] .)
		No	Go to the next step.
4	VERIFY TROUBLESHOOTING OF DTC P0883:00 COMPLETED • Make sure to reconnect all the disconnected connectors. • Clear the DTC using the M-MDS. • Perform the following procedure to ensure that the DTC has been resolved: ◦ Start the engine. ◦ Idle the engine for 5 s or more. • Is the same DTC present?	Yes	Replace the TCM, then go to the next step. (See TCM REMOVAL/ INSTALLATION [FS5A-EL] .)
		No	Go to the next step.
5	VERIFY NO DTCs ARE PRESENT • Perform the "Reading DTCs Procedure". (See ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [FS5A-EL].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [FS5A-EL] .)
		No	DTC troubleshooting completed.

2012 - Mazda6 - Transmission/ Transaxle

DTC P0883:00 [FS5A-EL]

DTC P0883:00	Battery voltage high
DETECTION CONDITION	- The TCM detects that battery voltage is 16.01 V or more for 5 s. Diagnostic support note - The MIL illuminates if the TCM detects the above malfunction condition during the first drive cycle. - The AT warning light illuminates. - PENDING CODE is available. - FREEZE FRAME DATA is available. - The DTC is stored in the TCM memory.
POSSIBLE CAUSE	- Generator malfunction - TCM malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	VERIFY FREEZE FRAME DATA HAS BEEN RECORDED Has the FREEZE FRAME DATA been recorded on the repair order?	Yes Go to the next step.
		No Record the FREEZE FRAME DATA on the repair order, then go to the next step.
2	VERIFY RELATED REPAIR INFORMATION AVAILABILITY - Verify related Service Bulletins and/or on-line repair information availability. - Is any related repair information available?	Yes Perform repair or diagnosis according to the available repair information. If the vehicle is not repaired, go to the next step.
		No Go to the next step.
3	VERIFY DTC IS PRESENT	Yes Perform the "DTC P2504:00

	- Switch the ignition to ON (Engine off). - Read the DTC in the PCM. - Is the DTC P2504:00 output?		Troubleshooting". (See DTC P2504:00 [MZR 2.5] .)
		No	Go to the next step.
4	VERIFY TROUBLESHOOTING OF DTC P0883:00 COMPLETED - Make sure to reconnect all the disconnected connectors. - Clear the DTC using the M-MDS. - Perform the following procedure to ensure that the DTC has been resolved: - Start the engine. - Idle the engine for 5 s or more. - Is the same DTC present?	Yes	Replace the TCM, then go to the next step. (See TCM REMOVAL/ INSTALLATION [FS5A-EL] .)
		No	Go to the next step.
5	VERIFY NO DTCs ARE PRESENT - Perform the "Reading DTCs Procedure". (See ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [FS5A-EL].) - Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [FS5A-EL] .)
		No	DTC troubleshooting completed.