

2012 - Mazda6 - Transmission/ Transaxle

NO.21 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN D, M OR IN R POSITION [FS5A-EL]

21	Noise occurs at idle when vehicle is stopped in D, M or in R position
DESCRIPTION	• Transaxle is noisy in D, M or in R position when vehicle is idling.
POSSIBLE CAUSE	• Although the malfunction is basically the same as No.20 "NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN ALL POSITIONS", other causes may include selector lever position disparity or TR switch position disparity.

2012 - Mazda6 - Transmission/ Transaxle

NO.21 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN D, M OR IN R POSITION [FS5A-EL]

21	Noise occurs at idle when vehicle is stopped in D, M or in R position
DESCRIPTION	• Transaxle is noisy in D, M or in R position when vehicle is idling.
POSSIBLE CAUSE	• Although the malfunction is basically the same as No.20 "NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN ALL POSITIONS", other causes may include selector lever position disparity or TR switch position disparity.