


2012 - Mazda6 - Transmission/ Transaxle

FOREWORD [FS5A-EL]

- When the customer reports a vehicle malfunction, inspect the malfunction indicator lamp (MIL) indication, AT warning indicator light flash, and diagnostic trouble code (DTC), then diagnose the malfunction according to following flowchart.
 - If a DTC exists, diagnose the applicable DTC inspection. (See **ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [FS5A-EL]**.)
 - If a DTC does not exist, the MIL does not illuminate and the AT warning indicator light illuminate, diagnose the applicable symptom troubleshooting. (See **SYMPTOM TROUBLESHOOTING ITEM TABLE [FS5A-EL]**.)

NOTE:

- If a tire of a different diameter from the standard tire is installed, the TCM determines that the driving mode is the AAS mode, and may change to a different shift timing from the normal timing.

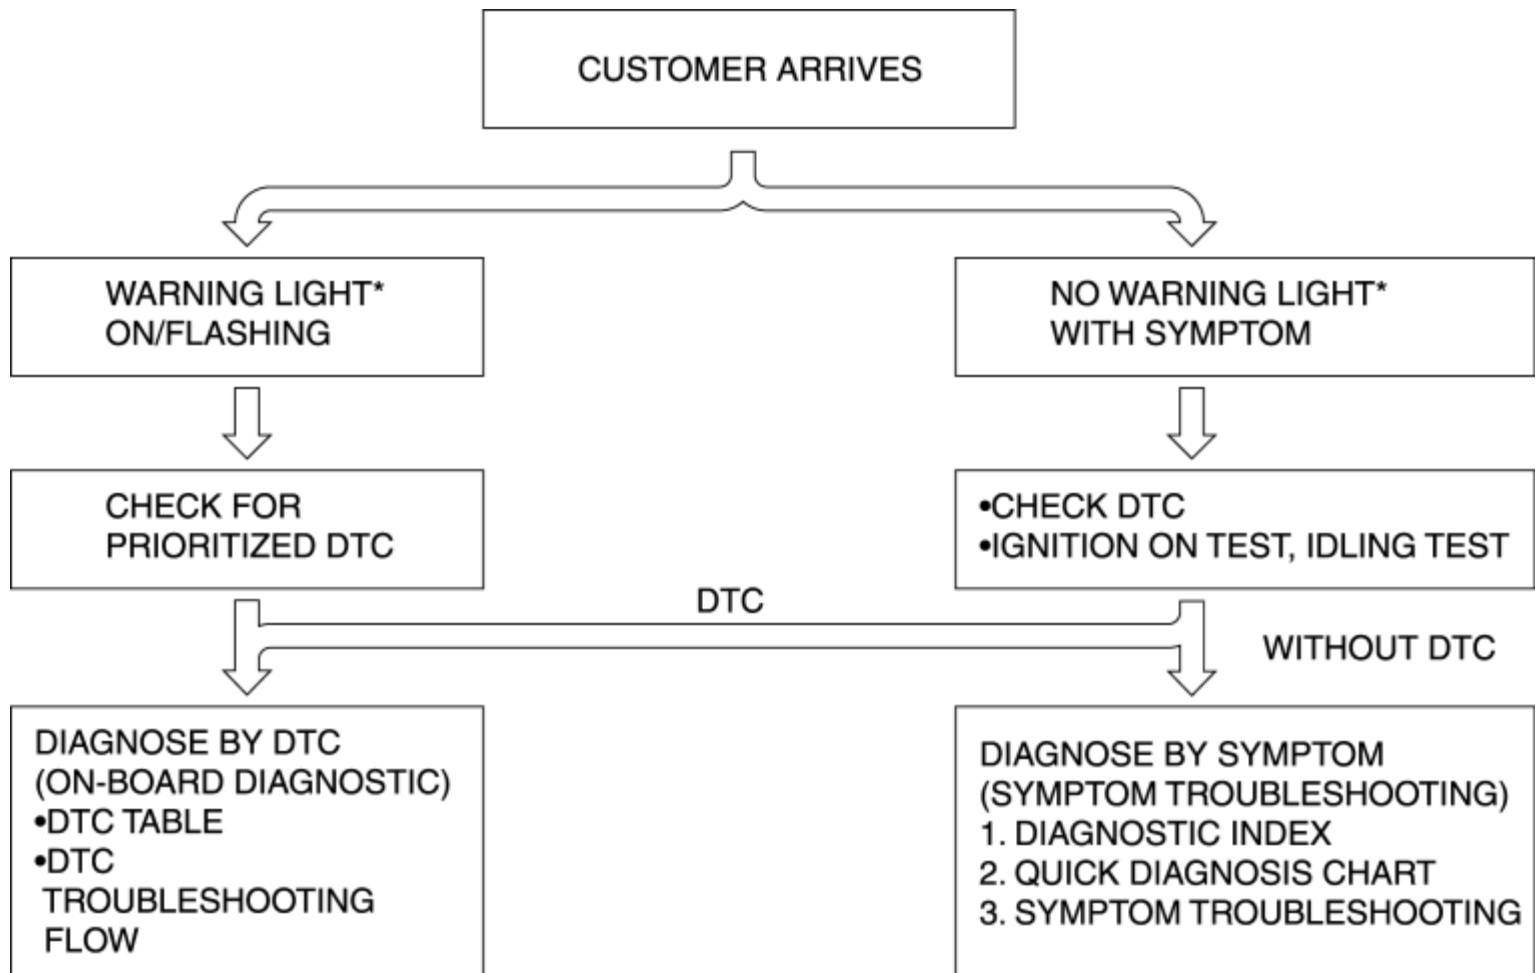

*: Malfunction Indicator Lamp (MIL), AT warning light.


2012 - Mazda6 - Transmission/ Transaxle

FOREWORD [FS5A-EL]

- When the customer reports a vehicle malfunction, inspect the malfunction indicator lamp (MIL) indication, AT warning indicator light flash, and diagnostic trouble code (DTC), then diagnose the malfunction according to following flowchart.
 - If a DTC exists, diagnose the applicable DTC inspection. (See **ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [FS5A-EL]**.)
 - If a DTC does not exist, the MIL does not illuminate and the AT warning indicator light illuminate, diagnose the applicable symptom troubleshooting. (See **SYMPTOM TROUBLESHOOTING ITEM TABLE [FS5A-EL]**.)

NOTE:

- If a tire of a different diameter from the standard tire is installed, the TCM determines that the driving mode is the AAS mode, and may change to a different shift timing from the normal timing.

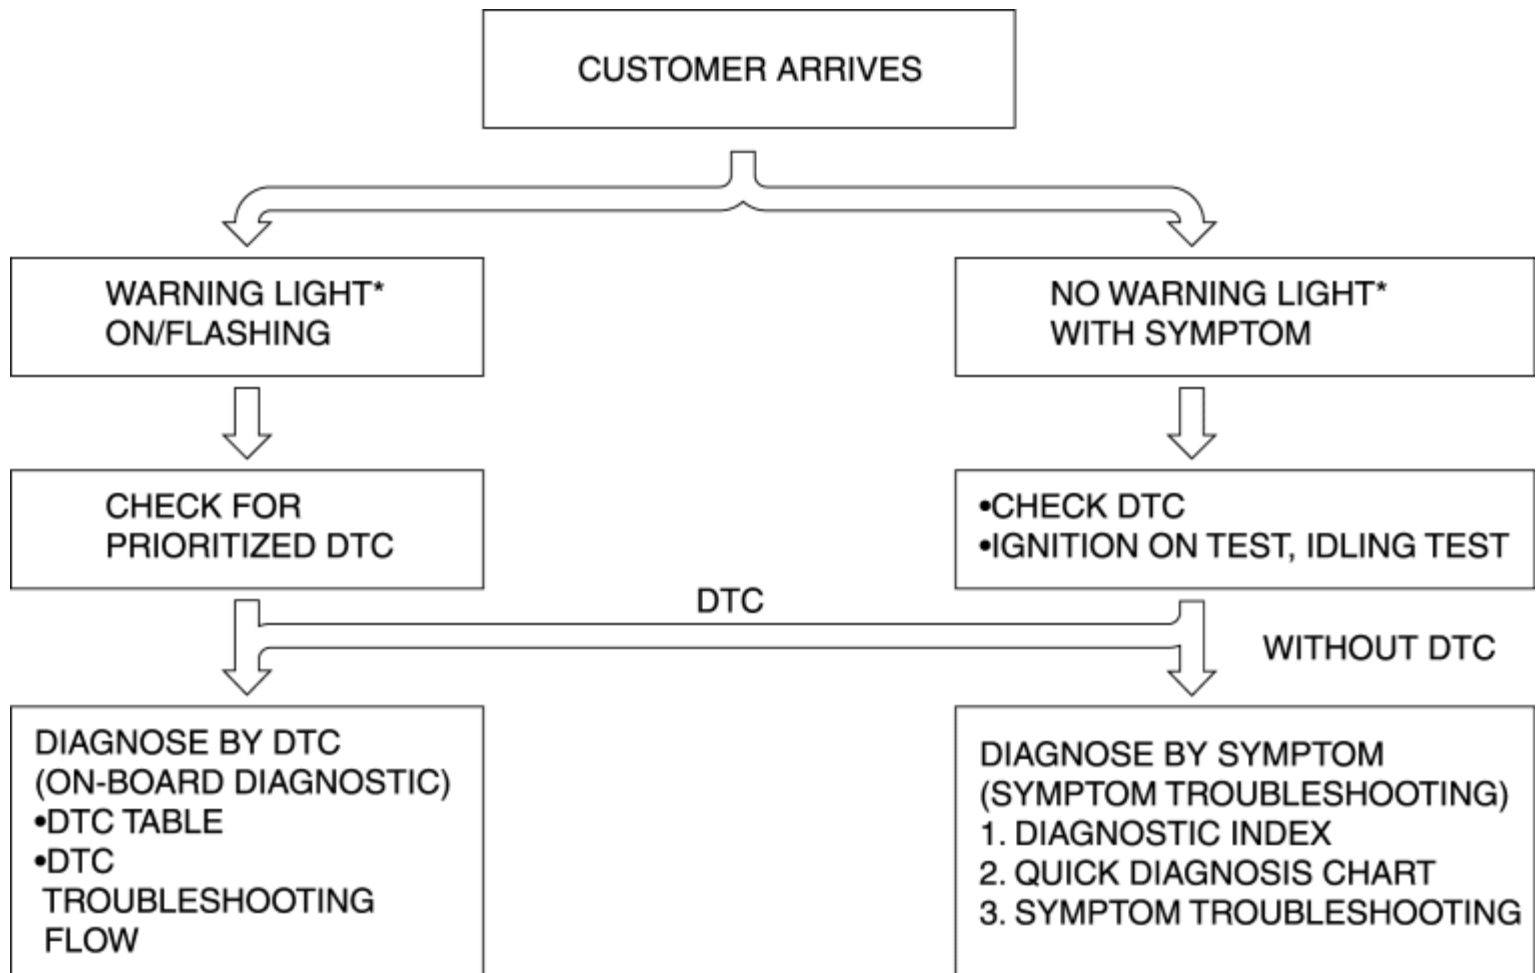

*: Malfunction Indicator Lamp (MIL), AT warning light.

