

QUICK DIAGNOSIS CHART [FS5A-EL]

X : Applied

[illegible]

Symptom	ATX inner parts						components			
	Cause of trouble									
	Shift solenoid E malfunction									
	Shift solenoid F malfunction									
	Shift solenoid A malfunction									
	Shift solenoid B malfunction									
	Shift solenoid C malfunction									
	Pressure control solenoid B malfunction									
	Pressure control solenoid A malfunction									
	Control valve is not operating properly									
	Forward accumulator is not operating properly									
	Servo apply accumulator is not operating properly									
	Oil pressure switch malfunction									
	Oil cooler is not operating properly									
	Slipping (Brake, clutch)									
	Burnt (Brake, clutch)									
	Torque converter is not operating properly									
	TCC burnt inspection method									
	Tire malfunction (diameter, air pressure other than standard)									
	Incorrect installation of ATX external part									
	Sealing deterioration or damage									

QUICK DIAGNOSIS CHART [FS5A-EL]

X : Applied

[illegible]

Symptom	ATX inner parts						components			
	Cause of trouble									
	Shift solenoid E malfunction									
	Shift solenoid F malfunction									
	Shift solenoid A malfunction									
	Shift solenoid B malfunction									
	Shift solenoid C malfunction									
	Pressure control solenoid B malfunction									
	Pressure control solenoid A malfunction									
	Control valve is not operating properly									
	Forward accumulator is not operating properly									
	Servo apply accumulator is not operating properly									
	Oil pressure switch malfunction									
	Oil cooler is not operating properly									
	Slipping (Brake, clutch)									
	Burnt (Brake, clutch)									
	Torque converter is not operating properly									
	TCC burnt inspection method									
	Tire malfunction (diameter, air pressure other than standard)									
	Incorrect installation of ATX external part									
	Sealing deterioration or damage									