

2012 - Mazda6 - Transmission/ Transaxle

NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [FS5A-EL]

3	Vehicle moves in P position, or parking gear does not disengage when P is disengaged
DESCRIPTION	• Vehicle rolls on a downward slope in P position. • Tires are locked when P is disengaged. Vehicle does not move in D, M and R position when the accelerator pedal is depressed, and the engine remains in a stalled condition.
POSSIBLE CAUSE	1. Parking mechanism malfunction (May have effect on noise or shock from transaxle) 2. Improper adjustment of selector cable 3. If vehicle moves in N position, perform No.2 "VEHICLE MOVES IN N POSITION"

2012 - Mazda6 - Transmission/ Transaxle

NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [FS5A-EL]

3	Vehicle moves in P position, or parking gear does not disengage when P is disengaged
DESCRIPTION	• Vehicle rolls on a downward slope in P position. • Tires are locked when P is disengaged. Vehicle does not move in D, M and R position when the accelerator pedal is depressed, and the engine remains in a stalled condition.
POSSIBLE CAUSE	1. Parking mechanism malfunction (May have effect on noise or shock from transaxle) 2. Improper adjustment of selector cable 3. If vehicle moves in N position, perform No.2 "VEHICLE MOVES IN N POSITION"