

2012 - Mazda6 - Transmission/ Transaxle

NO.4 EXCESSIVE CREEP [FS5A-EL]

4	Excessive creep
DESCRIPTION	• Vehicle accelerates in D, M and R position when accelerator pedal is not depressed.
POSSIBLE CAUSE	1. Engine idle speed is high (transaxle system is not cause of problem) 2. Go to No.9 "FAST IDLE/RUNS ON" (See NO.9 FAST IDLE/ RUNS ON [MZR 2.5].)

2012 - Mazda6 - Transmission/ Transaxle

NO.4 EXCESSIVE CREEP [FS5A-EL]

4	Excessive creep
DESCRIPTION	• Vehicle accelerates in D, M and R position when accelerator pedal is not depressed.
POSSIBLE CAUSE	1. Engine idle speed is high (transaxle system is not cause of problem) 2. Go to No.9 "FAST IDLE/RUNS ON" (See NO.9 FAST IDLE/ RUNS ON [MZR 2.5].)