

## 2012 - Mazda6 - Transmission/ Transaxle

### NO.13 NO KICKDOWN [FS5A-EL]

|                |                                                                                                                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13             | No kickdown                                                                                                                                                                                                            |
| DESCRIPTION    | <ul style="list-style-type: none"><li>• Does not downshift when accelerator pedal is fully depressed within kickdown range.</li></ul>                                                                                  |
| POSSIBLE CAUSE | <ul style="list-style-type: none"><li>• If transaxle does not downshift though shifting is normal, the malfunction is in the APP sensor circuit (including sensor GND, sensor wiring harness and connector).</li></ul> |

## 2012 - Mazda6 - Transmission/ Transaxle

### NO.13 NO KICKDOWN [FS5A-EL]

|                |                                                                                                                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13             | No kickdown                                                                                                                                                                                                            |
| DESCRIPTION    | <ul style="list-style-type: none"><li>• Does not downshift when accelerator pedal is fully depressed within kickdown range.</li></ul>                                                                                  |
| POSSIBLE CAUSE | <ul style="list-style-type: none"><li>• If transaxle does not downshift though shifting is normal, the malfunction is in the APP sensor circuit (including sensor GND, sensor wiring harness and connector).</li></ul> |