

## 2012 - Mazda6 - Transmission/ Transaxle

### NO.15 ENGINE FLARES UP OR SLIPS WHEN ACCELERATING VEHICLE [FS5A-EL]

|                       |                                                                                                                                                                                                                                          |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>15</b>             | <b>Engine flares up or slips when accelerating the vehicle</b>                                                                                                                                                                           |
| <b>DESCRIPTION</b>    | <ul style="list-style-type: none"><li>• Engine flares up when the accelerator pedal is depressed for upshifting.</li><li>• Engine flares up suddenly when the accelerator pedal is depressed for downshifting.</li></ul>                 |
| <b>POSSIBLE CAUSE</b> | <ul style="list-style-type: none"><li>• The malfunction is basically the same as for No.14 "ENGINE FLARES UP OR SLIPS WHEN UPSHIFTING OR DOWNSHIFTING". If conditions for No.14 worsen, the malfunction will develop to No.15.</li></ul> |

## 2012 - Mazda6 - Transmission/ Transaxle

### NO.15 ENGINE FLARES UP OR SLIPS WHEN ACCELERATING VEHICLE [FS5A-EL]

|                |                                                                                                                                                                                                                                          |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15             | Engine flares up or slips when accelerating the vehicle                                                                                                                                                                                  |
| DESCRIPTION    | <ul style="list-style-type: none"><li>• Engine flares up when the accelerator pedal is depressed for upshifting.</li><li>• Engine flares up suddenly when the accelerator pedal is depressed for downshifting.</li></ul>                 |
| POSSIBLE CAUSE | <ul style="list-style-type: none"><li>• The malfunction is basically the same as for No.14 "ENGINE FLARES UP OR SLIPS WHEN UPSHIFTING OR DOWNSHIFTING". If conditions for No.14 worsen, the malfunction will develop to No.15.</li></ul> |