


2012 - Mazda6 - Transmission/ Transaxle

M POSITION SWITCH INSPECTION [FS5A-EL]



CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
1. Disconnect the selector lever component connector.
 - a. Disconnect the negative battery cable.
 - b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - c. Disconnect the selector lever component connector.

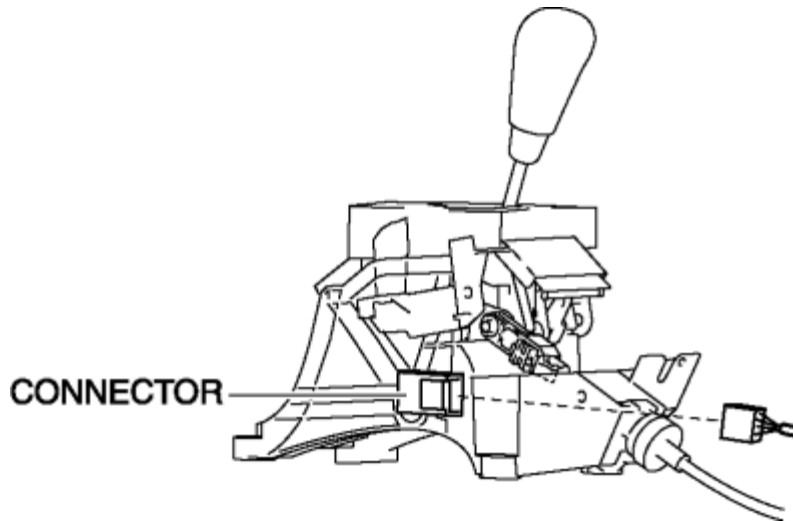

2. Measure the continuity between the selector lever component terminals A and H.

SELECTOR LEVER COMPONENT

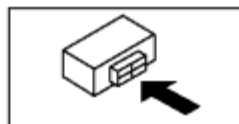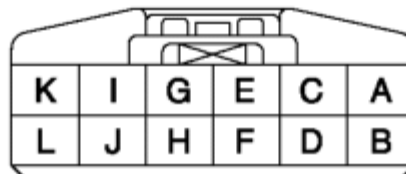

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

M position switch specification

Test condition	Continuity
M position	continuity
Except M position	No continuity

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Transmission/ Transaxle

M POSITION SWITCH INSPECTION [FS5A-EL]



CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
1. Disconnect the selector lever component connector.
 - a. Disconnect the negative battery cable.
 - b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - c. Disconnect the selector lever component connector.

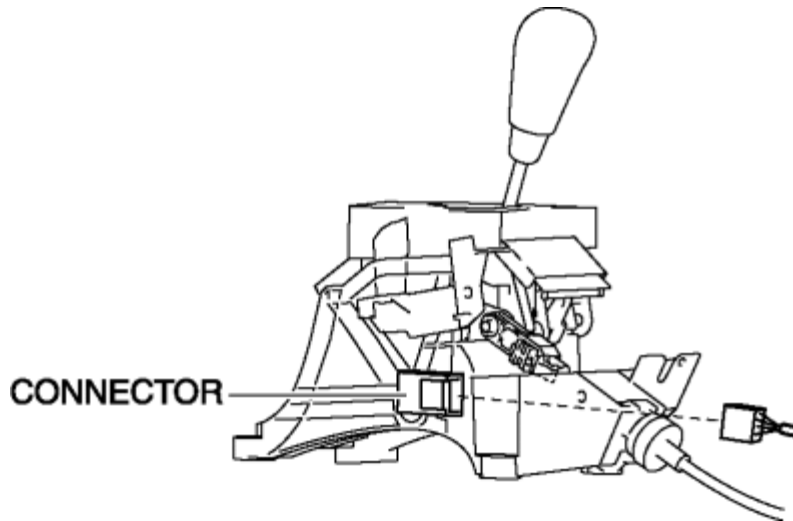

2. Measure the continuity between the selector lever component terminals A and H.

SELECTOR LEVER COMPONENT

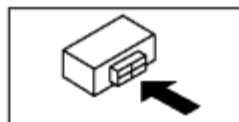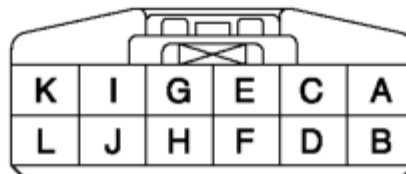

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

M position switch specification

Test condition	Continuity
M position	continuity
Except M position	No continuity

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.