
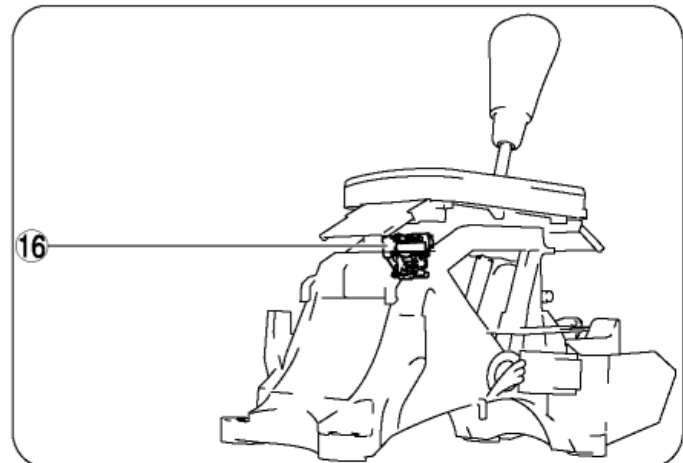
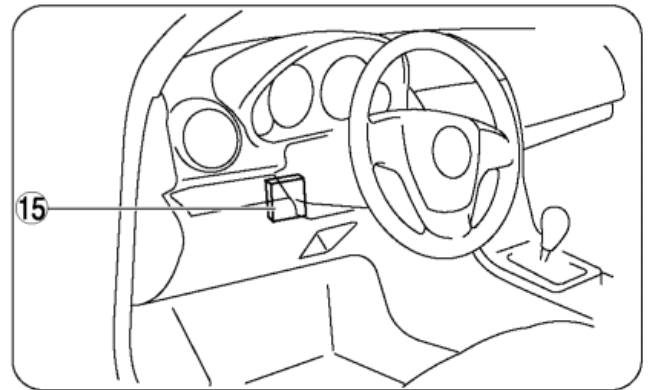
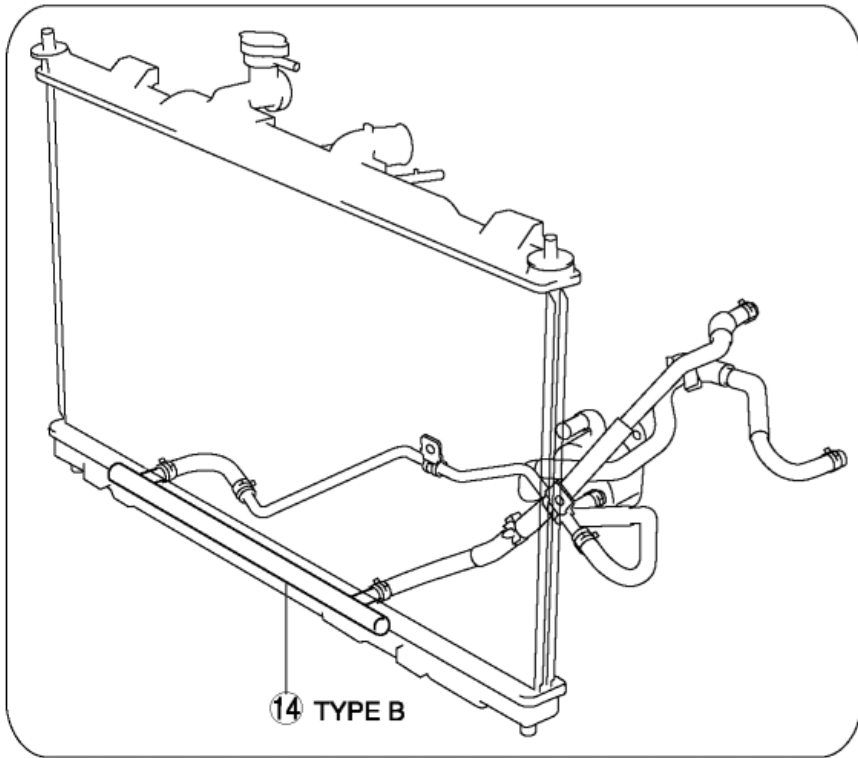


2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE LOCATION INDEX [FS5A-EL]




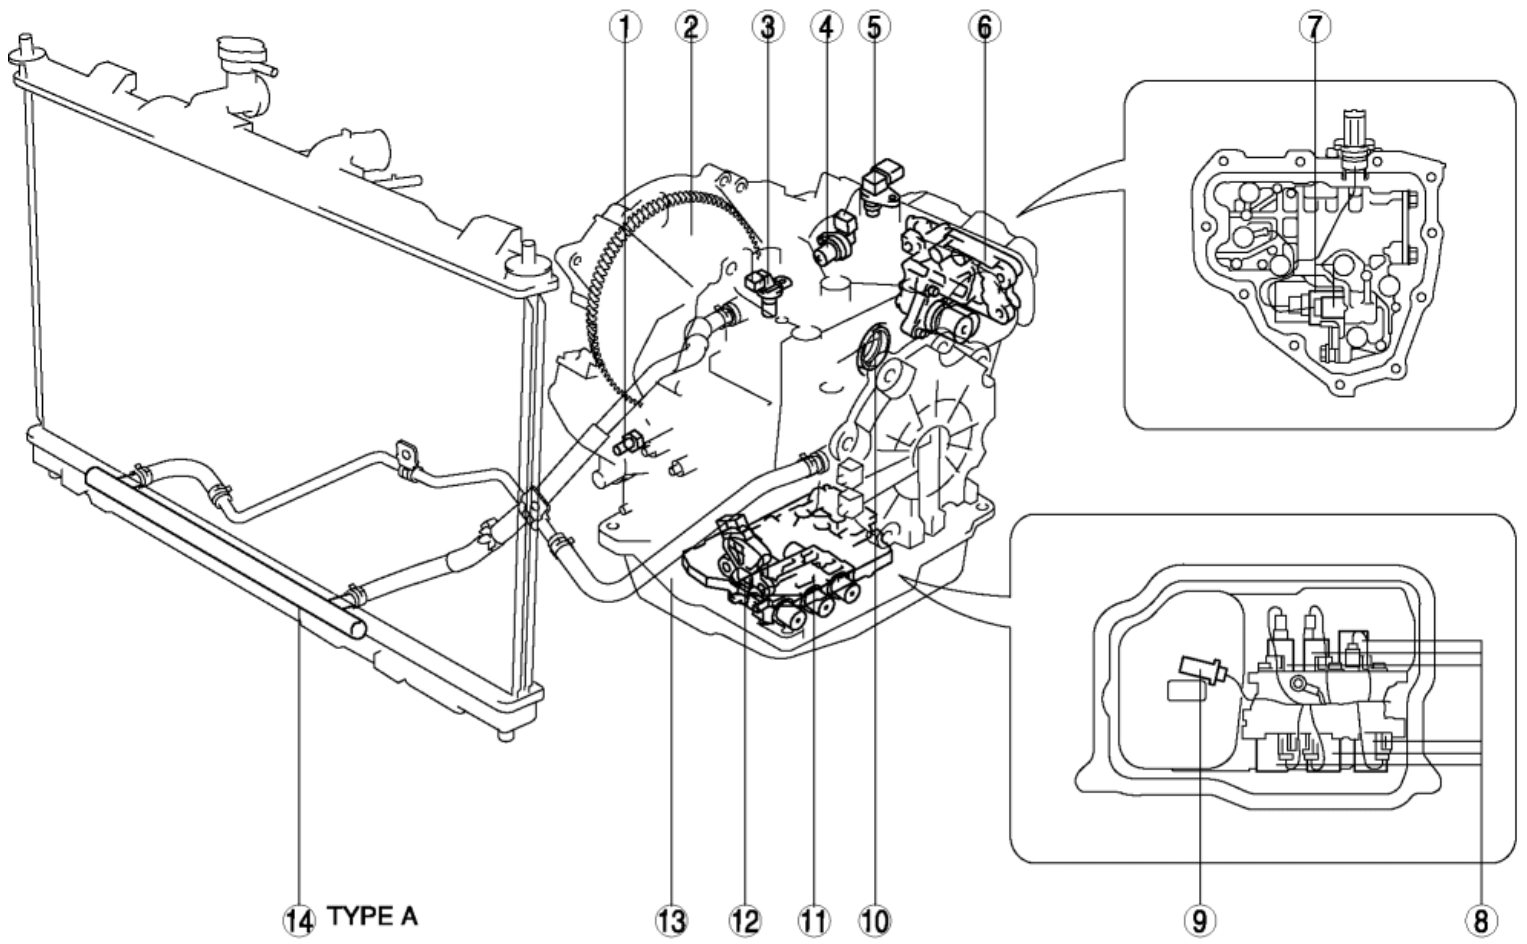


1	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION [FS5A-EL] .) (See OIL PRESSURE SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)
2	Drive plate (See DRIVE PLATE REMOVAL/ INSTALLATION [FS5A-EL] .)
3	Input/turbine speed sensor (See INPUT/ TURBINE SPEED SENSOR INSPECTION [FS5A-EL] .) (See INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
4	VSS (See VEHICLE SPEED SENSOR (VSS) INSPECTION [FS5A-EL] .) (See VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [FS5A-EL] .)
5	Intermediate sensor (See INTERMEDIATE SENSOR INSPECTION [FS5A-EL] .) (See INTERMEDIATE SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
6	Secondary control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [FS5A-EL] .)
7	Pressure control solenoid B Shift solenoid F (See SOLENOID VALVE INSPECTION [FS5A-EL] .) (See SOLENOID VALVE REMOVAL/ INSTALLATION [FS5A-EL] .)
8	Pressure control solenoid A Shift solenoid A Shift solenoid B Shift solenoid C Shift solenoid D Shift solenoid E (See SOLENOID VALVE INSPECTION [FS5A-EL] .) (See SOLENOID VALVE REMOVAL/ INSTALLATION [FS5A-EL] .)
9	TFT sensor (See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [FS5A-EL] .) (See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
10	Oil seal (See OIL SEAL REPLACEMENT [FS5A-EL] .)
11	Primary control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [FS5A-EL] .)
12	TR switch (See TRANSAXLE RANGE (TR) SWITCH INSPECTION [FS5A-EL] .)

	(See TRANSAXLE RANGE (TR) SWITCH ADJUSTMENT [FS5A-EL] .) (See TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)
13	Automatic transaxle (See MECHANICAL SYSTEM TEST [FS5A-EL] .) (See ROAD TEST [FS5A-EL] .) (See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [FS5A-EL] .) (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FS5A-EL] .) (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [FS5A-EL] .)
14	Oil cooler (See OIL COOLER REMOVAL/ INSTALLATION [FS5A-EL] .) (See OIL COOLER FLUSHING [FS5A-EL] .)
15	TCM (See TCM INSPECTION [FS5A-EL] .) (See TCM REMOVAL/ INSTALLATION [FS5A-EL] .)
16	M position switch, up position, down position switch (See M POSITION SWITCH INSPECTION [FS5A-EL] .) (See M POSITION SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .) (See UP SWITCH INSPECTION [FS5A-EL] .) (See UP SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .) (See DOWN SWITCH INSPECTION [FS5A-EL] .) (See DOWN SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)

2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE LOCATION INDEX [FS5A-EL]

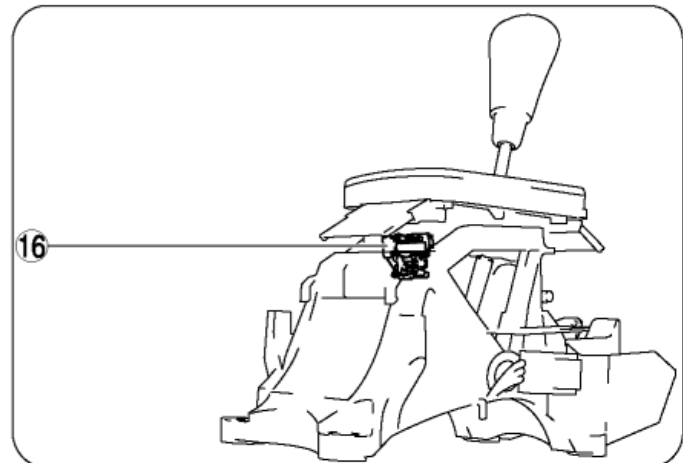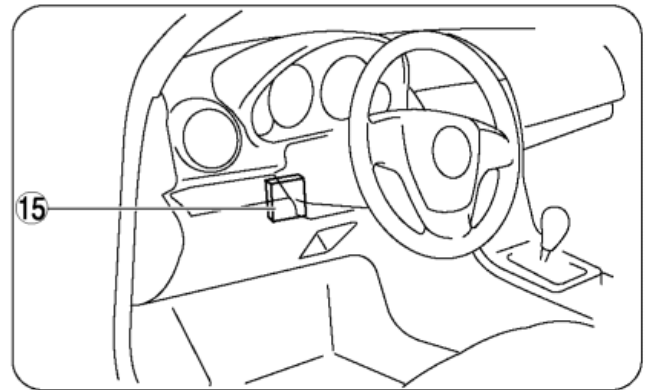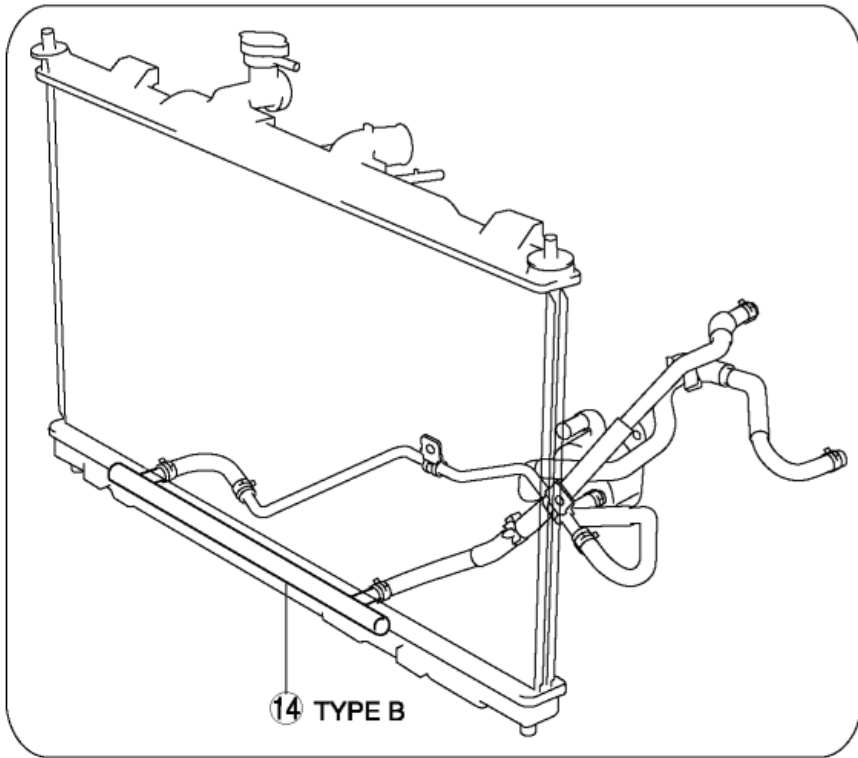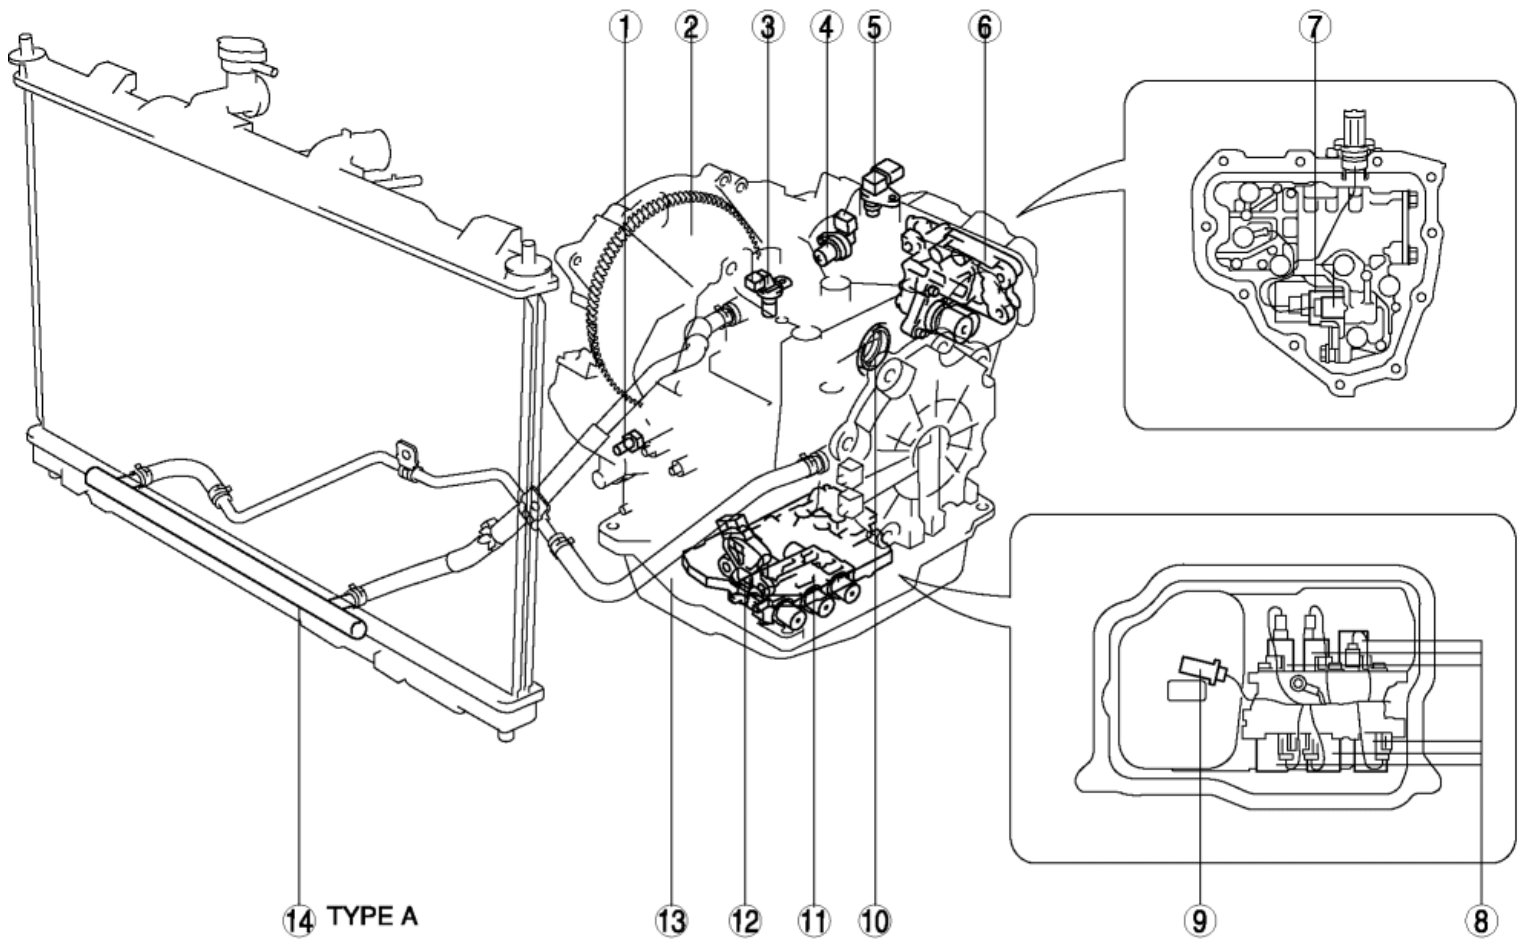

1	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION [FS5A-EL] .) (See OIL PRESSURE SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)
2	Drive plate (See DRIVE PLATE REMOVAL/ INSTALLATION [FS5A-EL] .)
3	Input/turbine speed sensor (See INPUT/ TURBINE SPEED SENSOR INSPECTION [FS5A-EL] .) (See INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
4	VSS (See VEHICLE SPEED SENSOR (VSS) INSPECTION [FS5A-EL] .) (See VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [FS5A-EL] .)
5	Intermediate sensor (See INTERMEDIATE SENSOR INSPECTION [FS5A-EL] .) (See INTERMEDIATE SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
6	Secondary control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [FS5A-EL] .)
7	Pressure control solenoid B Shift solenoid F (See SOLENOID VALVE INSPECTION [FS5A-EL] .) (See SOLENOID VALVE REMOVAL/ INSTALLATION [FS5A-EL] .)
8	Pressure control solenoid A Shift solenoid A Shift solenoid B Shift solenoid C Shift solenoid D Shift solenoid E (See SOLENOID VALVE INSPECTION [FS5A-EL] .) (See SOLENOID VALVE REMOVAL/ INSTALLATION [FS5A-EL] .)
9	TFT sensor (See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [FS5A-EL] .) (See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [FS5A-EL] .)
10	Oil seal (See OIL SEAL REPLACEMENT [FS5A-EL] .)
11	Primary control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [FS5A-EL] .)
12	TR switch (See TRANSAXLE RANGE (TR) SWITCH INSPECTION [FS5A-EL] .)

	(See TRANSAXLE RANGE (TR) SWITCH ADJUSTMENT [FS5A-EL] .) (See TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)
13	Automatic transaxle (See MECHANICAL SYSTEM TEST [FS5A-EL] .) (See ROAD TEST [FS5A-EL] .) (See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [FS5A-EL] .) (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FS5A-EL] .) (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [FS5A-EL] .)
14	Oil cooler (See OIL COOLER REMOVAL/ INSTALLATION [FS5A-EL] .) (See OIL COOLER FLUSHING [FS5A-EL] .)
15	TCM (See TCM INSPECTION [FS5A-EL] .) (See TCM REMOVAL/ INSTALLATION [FS5A-EL] .)
16	M position switch, up position, down position switch (See M POSITION SWITCH INSPECTION [FS5A-EL] .) (See M POSITION SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .) (See UP SWITCH INSPECTION [FS5A-EL] .) (See UP SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .) (See DOWN SWITCH INSPECTION [FS5A-EL] .) (See DOWN SWITCH REMOVAL/ INSTALLATION [FS5A-EL] .)