

2012 - Mazda6 - Transmission/ Transaxle

OIL PRESSURE SWITCH REMOVAL/ INSTALLATION [FS5A-EL]


WARNING:

- A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool.

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.

1. Disconnect the negative battery cable.
2. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

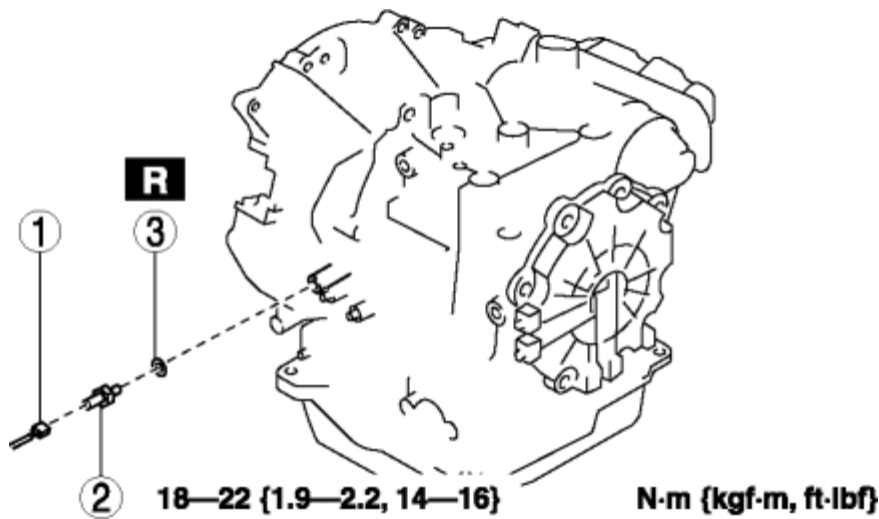

1	Connector
2	Oil pressure switch
3	Washer

2012 - Mazda6 - Transmission/ Transaxle

OIL PRESSURE SWITCH REMOVAL/ INSTALLATION [FS5A-EL]


WARNING:

- A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool.

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.

1. Disconnect the negative battery cable.
2. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

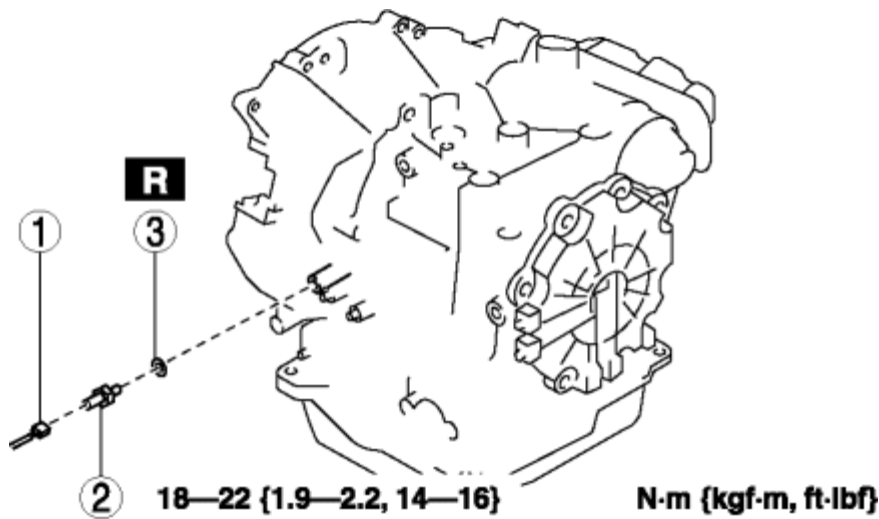

1	Connector
2	Oil pressure switch
3	Washer

