
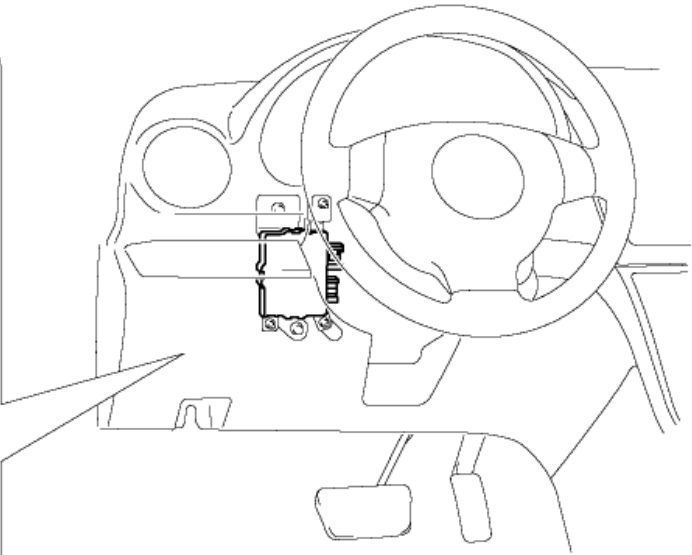


2012 - Mazda6 - Transmission/ Transaxle

TCM REMOVAL/ INSTALLATION [FS5A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
1. Disconnect the negative battery cable.
  2. Remove in the order indicated in the table.
  3. Install in the reverse order of removal.

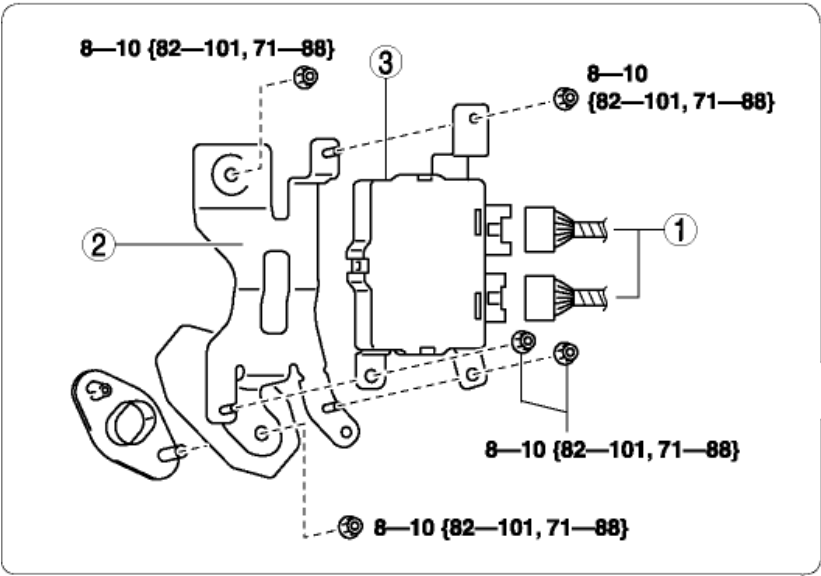

N·m {kgf·cm, In·lbf}



|   |           |
|---|-----------|
| 1 | Connector |
| 2 | Bracket   |
| 3 | TCM       |

2012 - Mazda6 - Transmission/ Transaxle

TCM REMOVAL/ INSTALLATION [FS5A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
1. Disconnect the negative battery cable.
  2. Remove in the order indicated in the table.
  3. Install in the reverse order of removal.

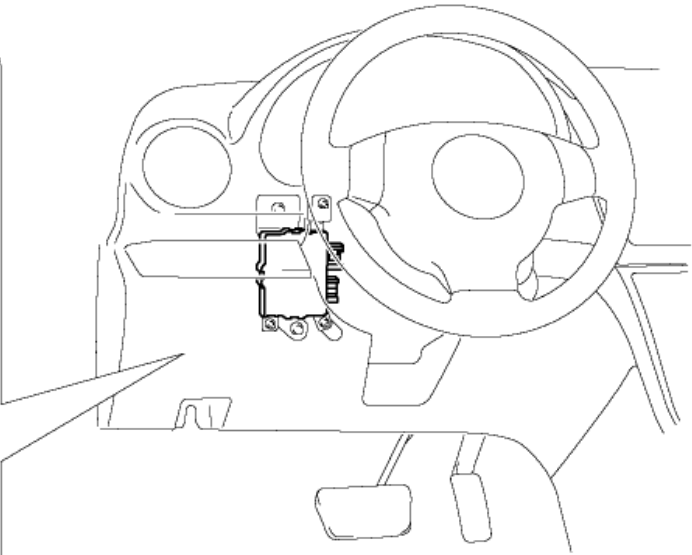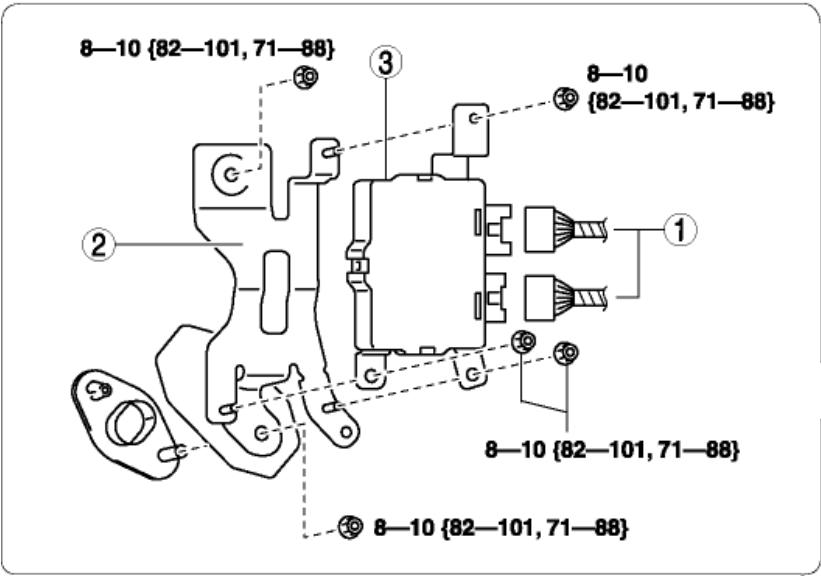

N·m {kgf·cm, In·lbf}

|   |           |
|---|-----------|
| 1 | Connector |
| 2 | Bracket   |
| 3 | TCM       |