


2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE SHIFT MECHANISM LOCATION INDEX

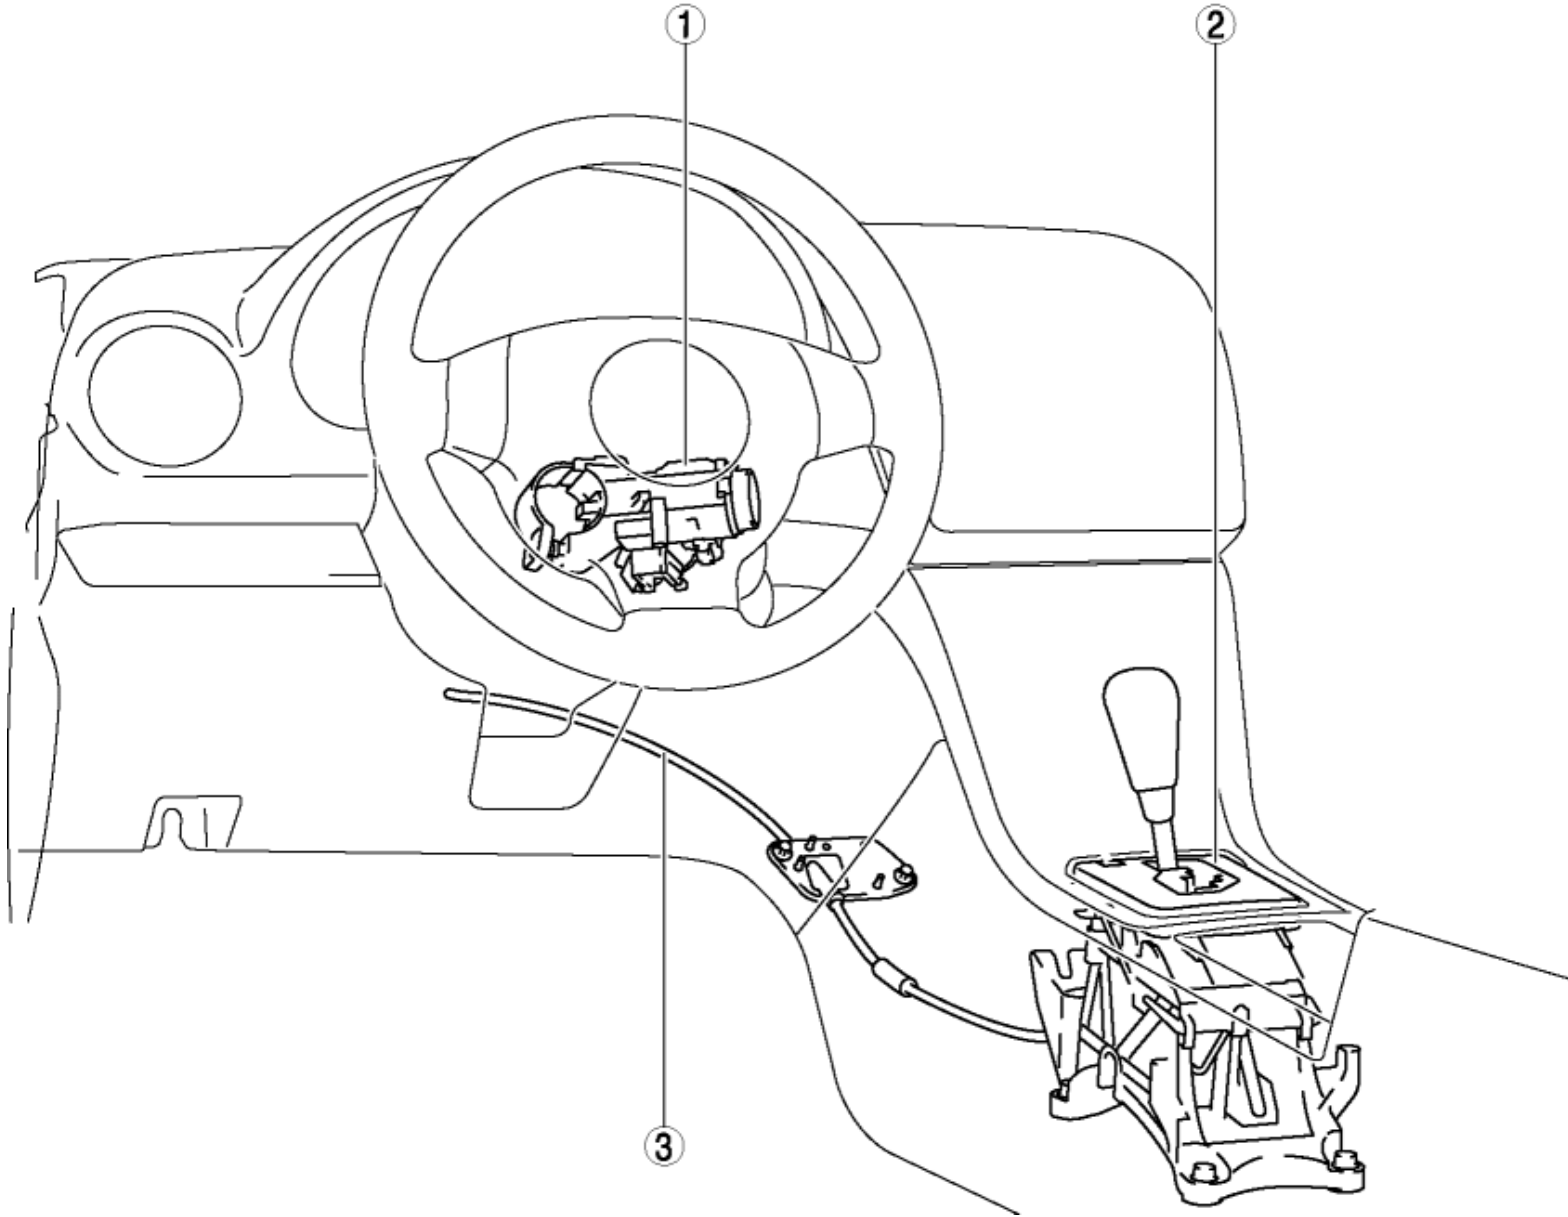

1 Steering lock

(See [KEY INTERLOCK SYSTEM INSPECTION.](#))

2 Selector lever component

(See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

(See [SELECTOR LEVER INSPECTION.](#))

(See [SHIFT-LOCK SYSTEM INSPECTION.](#))

3 Selector cable

(See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))


[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE SHIFT MECHANISM LOCATION INDEX

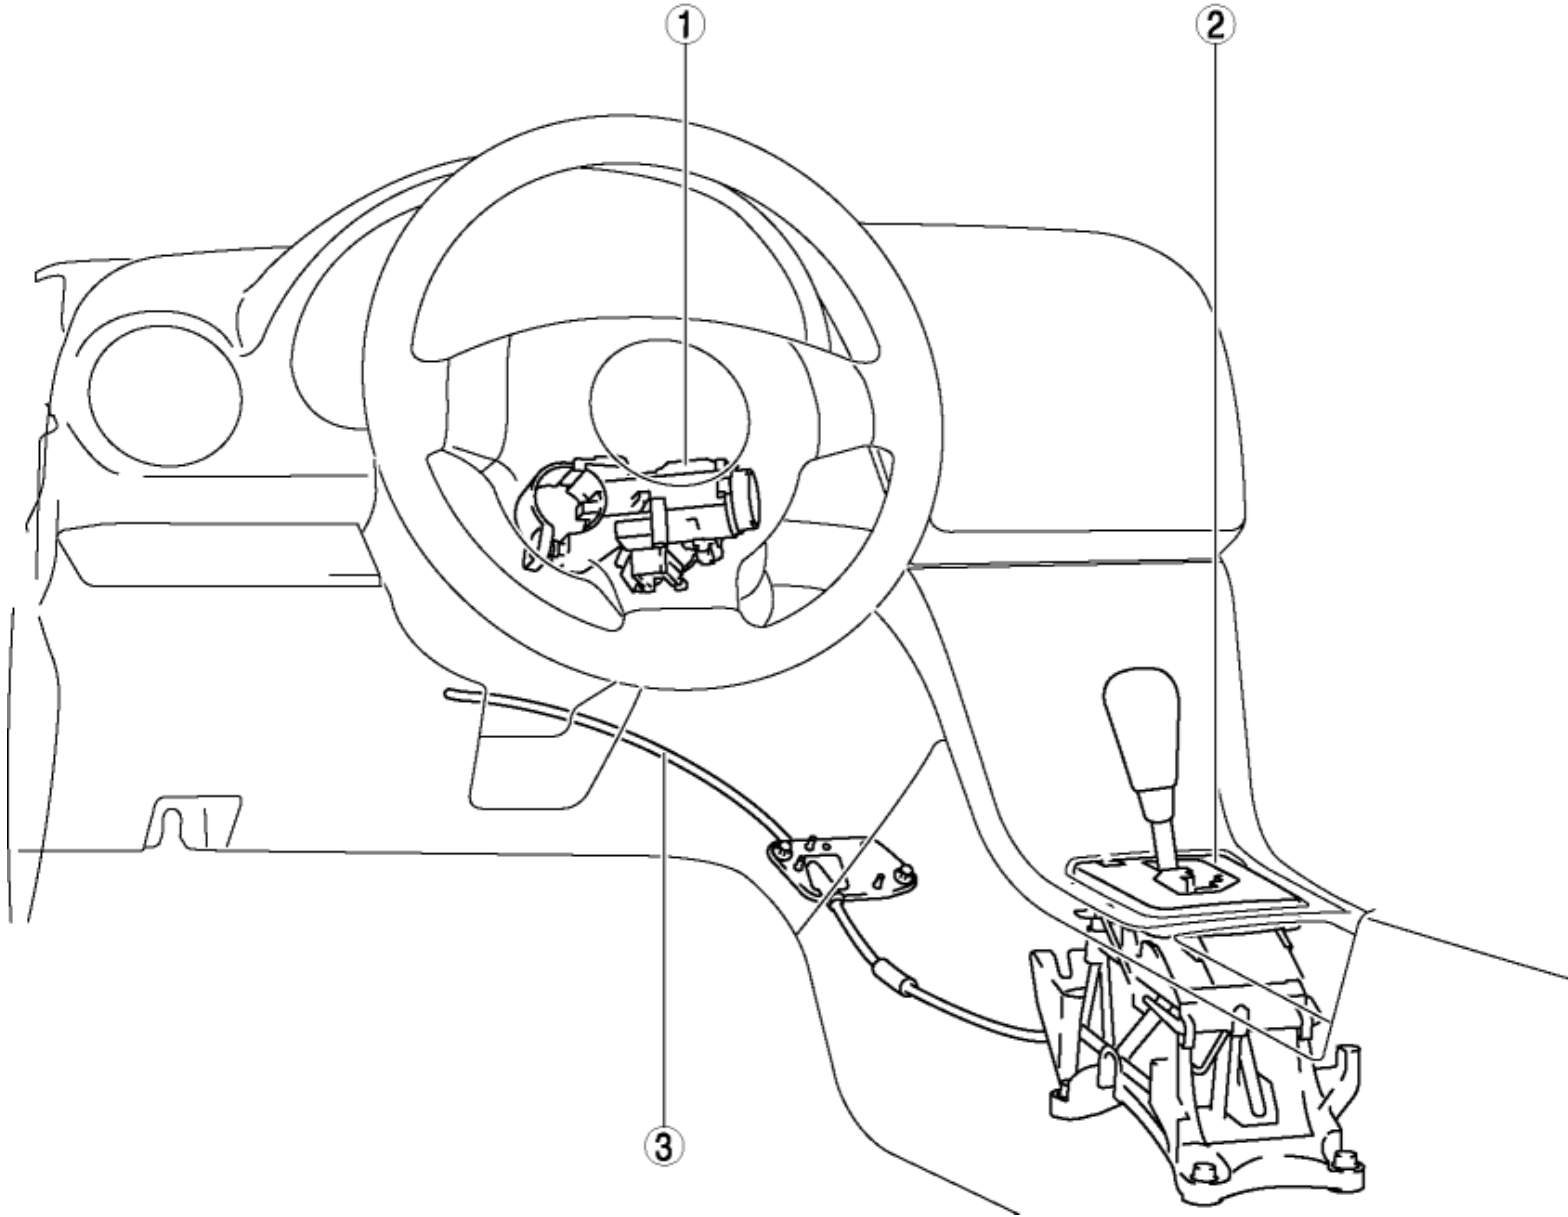

1 Steering lock

(See [KEY INTERLOCK SYSTEM INSPECTION.](#))

2 Selector lever component

(See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

(See [SELECTOR LEVER INSPECTION.](#))

(See [SHIFT-LOCK SYSTEM INSPECTION.](#))

3 Selector cable

(See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)