


2012 - Mazda6 - Transmission/ Transaxle

SELECTOR LEVER INSPECTION

1. Switch the ignition to ON.
2. Perform the following procedures to inspect the selector lever.
 - If there is any malfunction, adjust the selector cable. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
- a. Verify that the selector lever can be operated as shown in the figure.

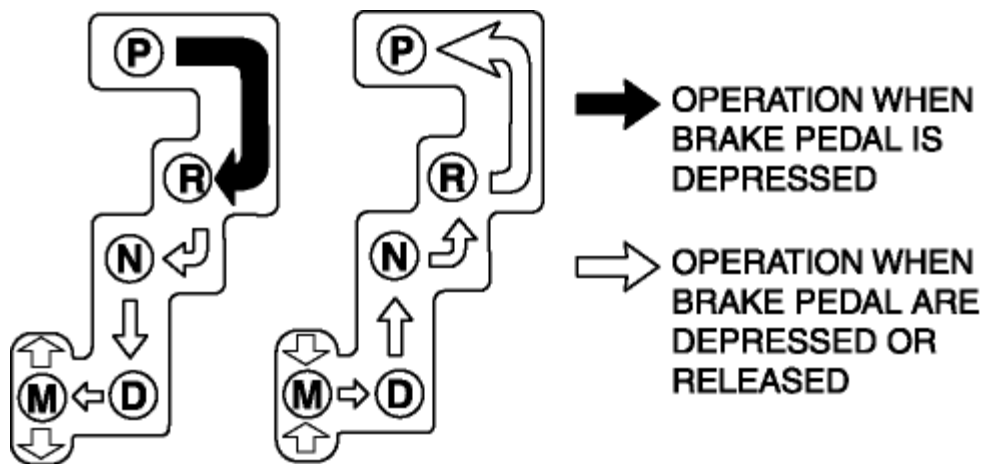


-
- b. Verify that the selector lever can be operated smoothly and moderately.

2012 - Mazda6 - Transmission/ Transaxle

SELECTOR LEVER INSPECTION

1. Switch the ignition to ON.
2. Perform the following procedures to inspect the selector lever.
 - If there is any malfunction, adjust the selector cable. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
- a. Verify that the selector lever can be operated as shown in the figure.

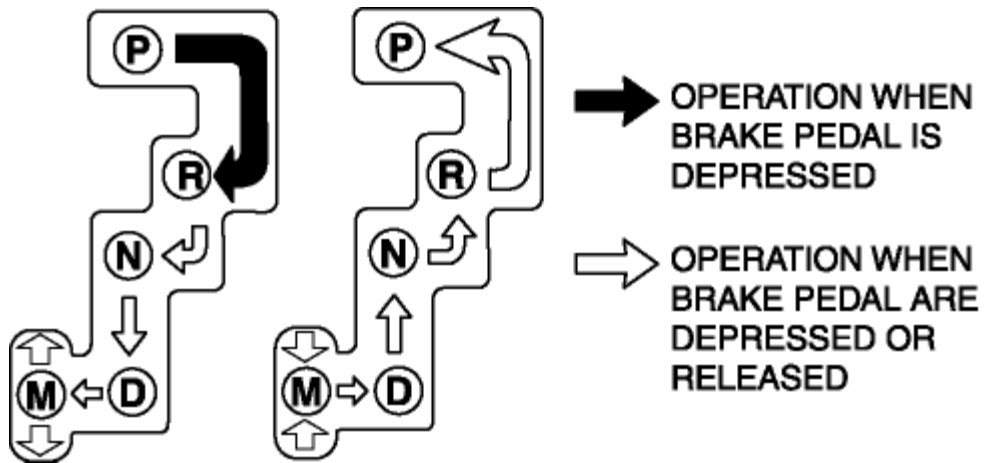

-
- b. Verify that the selector lever can be operated smoothly and moderately.