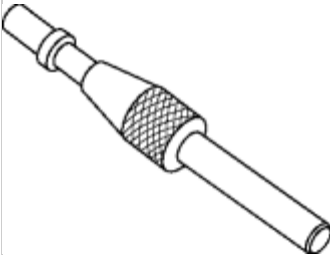 
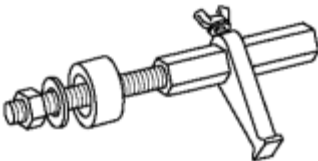 


[< Previous](#)

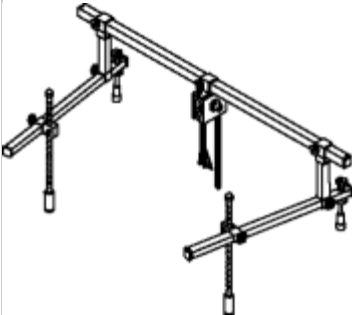 
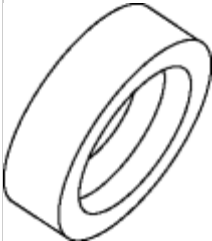 
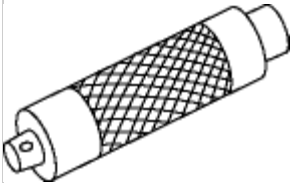 
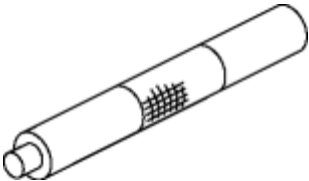 
2012 - Mazda6 - Transmission/ Transaxle

TRANSMISSION/ TRANSAXLE SST

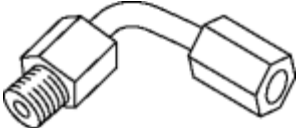 
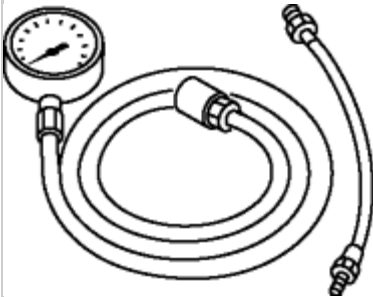 
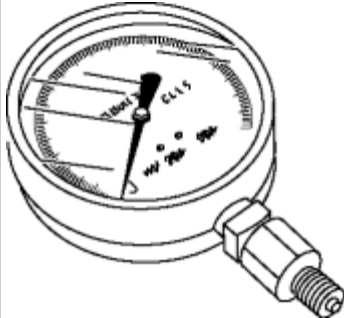 
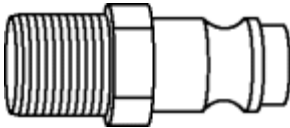 
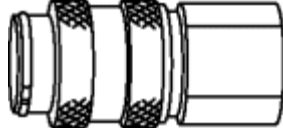 
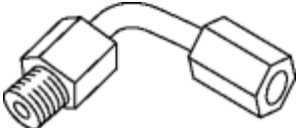 
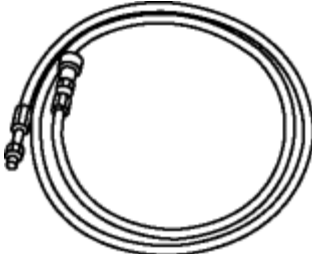 
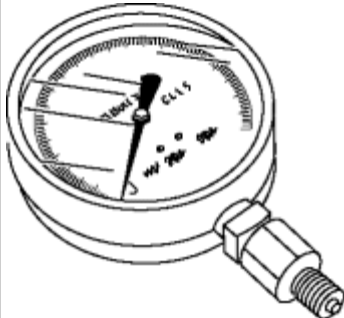 
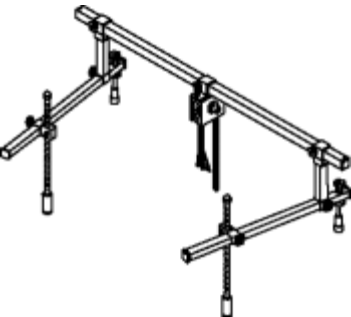 
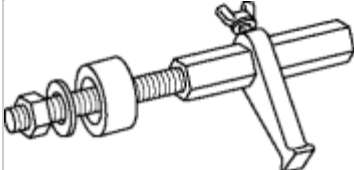 
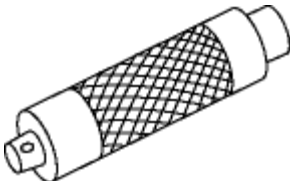 
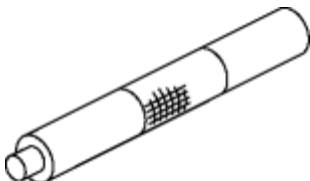 
Clutch [G66M-R]

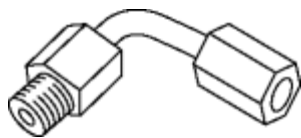 
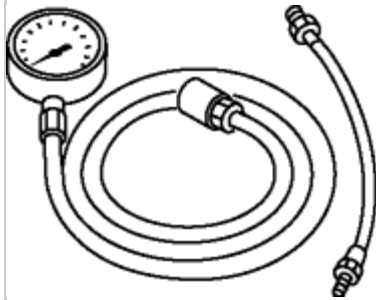 
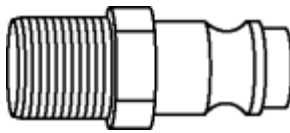 
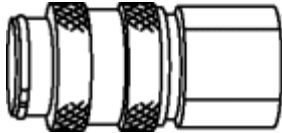 
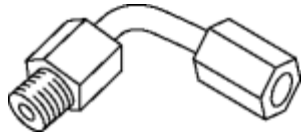 
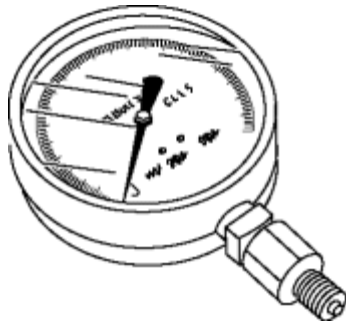 
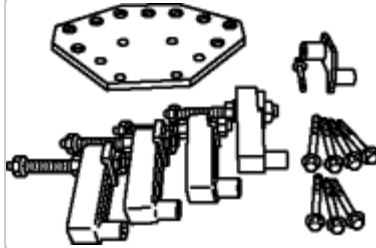 
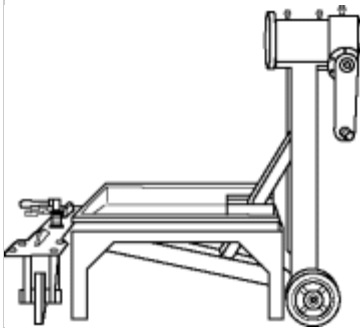 
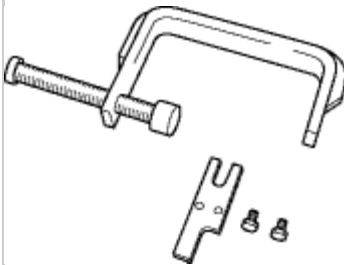 
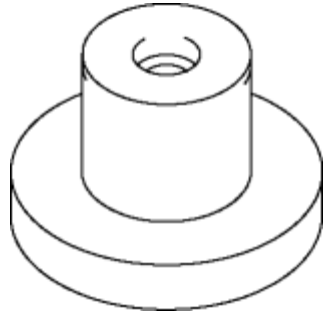 
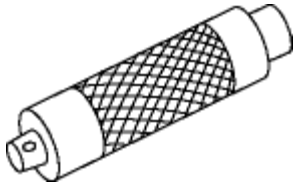 
49 SE01 310A Clutch disc center tool		49 E011 1A0 Ring gear brake set		49 1285 071 Bearing puller	
---	---	------------------------------------	--	-------------------------------	---

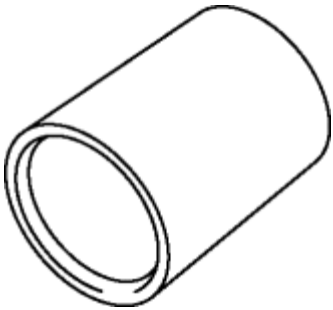 
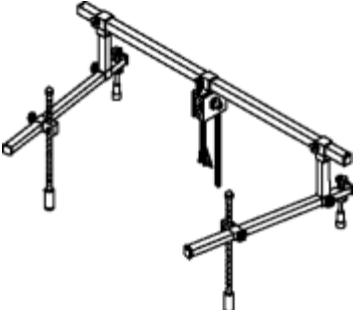 
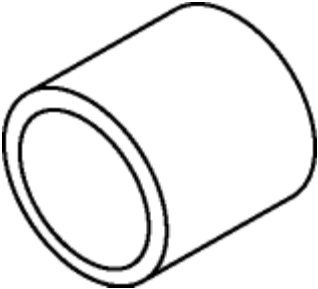 
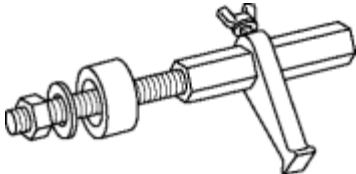 
Manual Transaxle [G66M-R]

49 C017 5A0 Engine support set		49 G030 796 Body		49 G030 797 Handle	
49 M005 797 Handle		-	-	-	-

Automatic Transaxle [FS5A-EL]

49 H019 002 Adapter		49 0378 400C Oil pressure gauge set		49 B019 901B Oil pressure gauge	
49 B019 902A Oil pressure gauge		49 D019 910 Adapter (Part of 49 D019 9A2)		49 D019 911 Adapter (Part of 49 D019 9A2)	
49 D019 913 Adapter (Part of 49 D019 9A2)		49 D019 909 Hose (Part of 49 D019 9A2)		49 D019 908 Gauge (Part of 49 D019 9A2)	
49 D019 907 Oil pressure gauge (Part of 49 D019 9A2)		49 C017 5A0 Engine support set		49 E011 1A0 Ring gear brake set	
49 G030 796 Body		49 G030 797 Handle		49 M005 797 Handle	

49 HD64 406A Adapter		49 0378 400C Oil pressure gauge set		49 B019 901B Oil pressure gauge	
49 B019 902A Oil pressure gauge		49 D019 910 Adapter (Part of 49 D019 9A2)		49 D019 911 Adapter (Part of 49 D019 9A2)	
49 D019 912 Adapter (Part of 49 D019 9A2)		49 D019 909 Hose (Part of 49 D019 9A2)		49 D019 908 Gauge (Part of 49 D019 9A2)	
49 D019 907 Oil pressure gauge (Part of 49 D019 9A2)		49 L010 1A0 Engine hanger set		49 0107 680A Engine stand	
49 T019 0A1 Servo piston lifter set		49 F026 102 Bearing installer		49 G030 797 Handle	

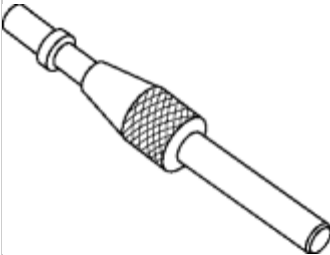 
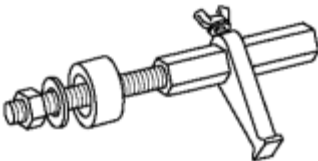 
49 H028 202 Block		49 F027 009 Attachment φ 68 and 77		49 C017 5A0 Engine support set	
49 U027 003 Oil seal installer		49 E011 1A0 Ring gear brake set		—	

[< Previous](#)

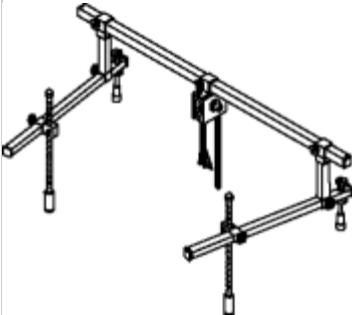 
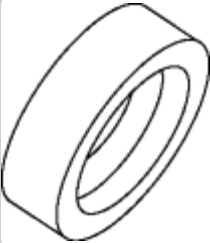 
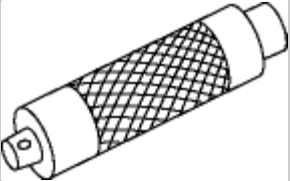 
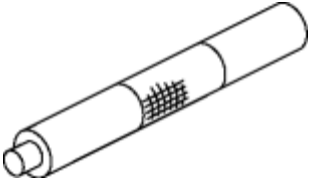 
2012 - Mazda6 - Transmission/ Transaxle

TRANSMISSION/ TRANSAXLE SST

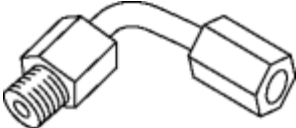 
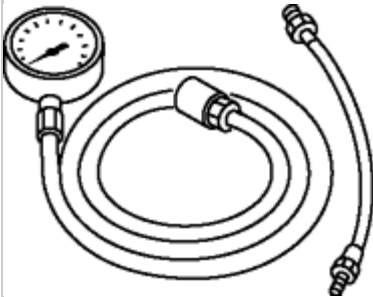 
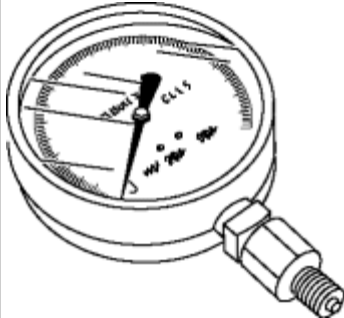 
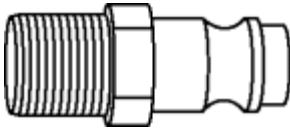 
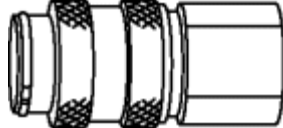 
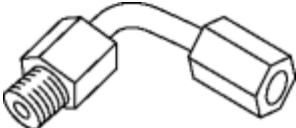 
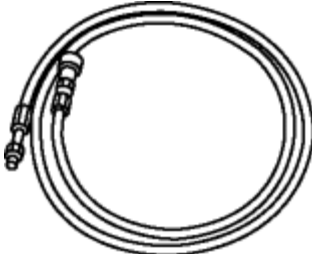 
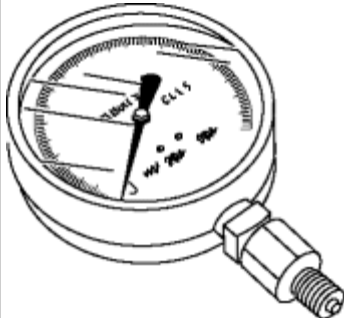 
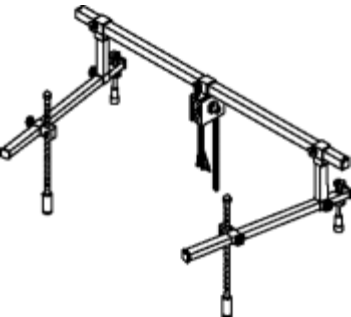 
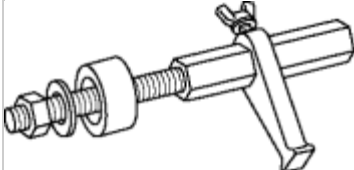 
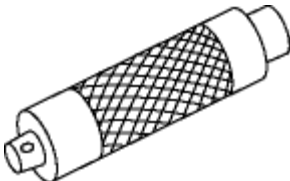 
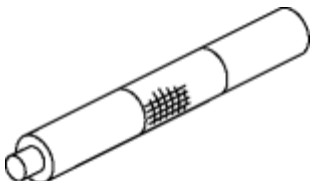 
Clutch [G66M-R]

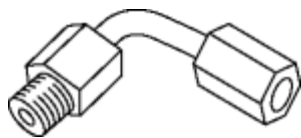 
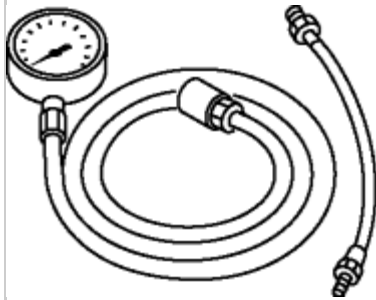 
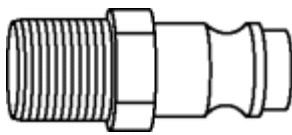 
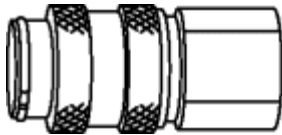 
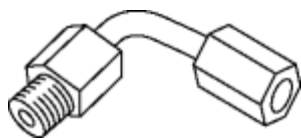 
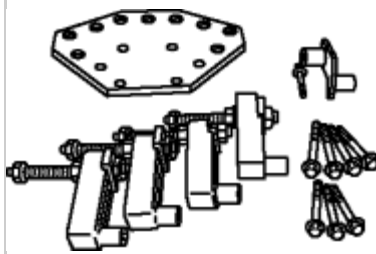 
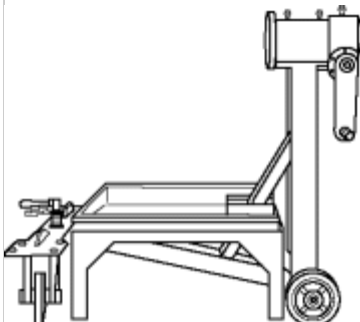 
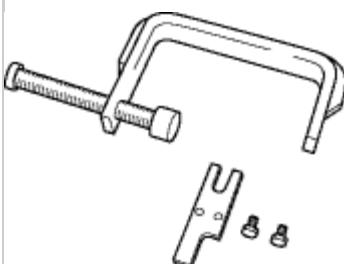 
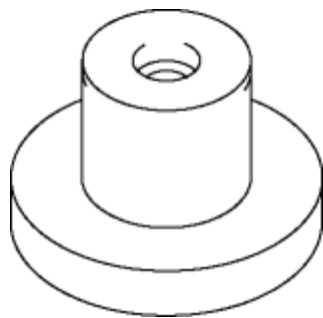 
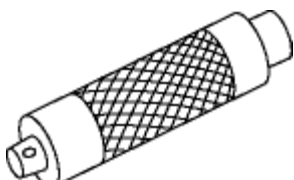 
49 SE01 310A Clutch disc center tool		49 E011 1A0 Ring gear brake set		49 1285 071 Bearing puller	
---	---	------------------------------------	--	-------------------------------	---

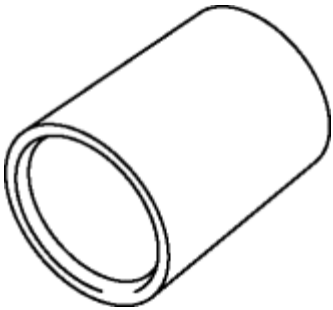 
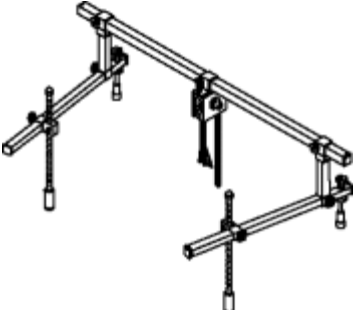 
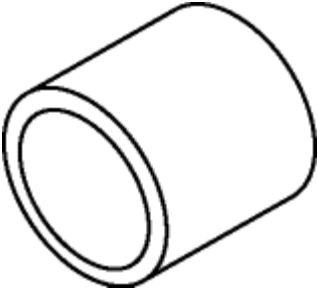 
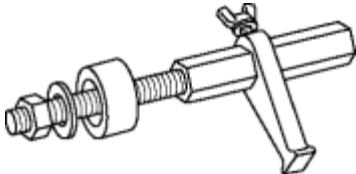 
Manual Transaxle [G66M-R]

49 C017 5A0 Engine support set		49 G030 796 Body		49 G030 797 Handle	
49 M005 797 Handle		-	-	-	-

Automatic Transaxle [FS5A-EL]

49 H019 002 Adapter		49 0378 400C Oil pressure gauge set		49 B019 901B Oil pressure gauge	
49 B019 902A Oil pressure gauge		49 D019 910 Adapter (Part of 49 D019 9A2)		49 D019 911 Adapter (Part of 49 D019 9A2)	
49 D019 913 Adapter (Part of 49 D019 9A2)		49 D019 909 Hose (Part of 49 D019 9A2)		49 D019 908 Gauge (Part of 49 D019 9A2)	
49 D019 907 Oil pressure gauge (Part of 49 D019 9A2)		49 C017 5A0 Engine support set		49 E011 1A0 Ring gear brake set	
49 G030 796 Body		49 G030 797 Handle		49 M005 797 Handle	

49 HD64 406A Adapter		49 0378 400C Oil pressure gauge set		49 B019 901B Oil pressure gauge	
49 B019 902A Oil pressure gauge		49 D019 910 Adapter (Part of 49 D019 9A2)		49 D019 911 Adapter (Part of 49 D019 9A2)	
49 D019 912 Adapter (Part of 49 D019 9A2)		49 D019 909 Hose (Part of 49 D019 9A2)		49 D019 908 Gauge (Part of 49 D019 9A2)	
49 D019 907 Oil pressure gauge (Part of 49 D019 9A2)		49 L010 1A0 Engine hanger set		49 0107 680A Engine stand	
49 T019 0A1 Servo piston lifter set		49 F026 102 Bearing installer		49 G030 797 Handle	

49 H028 202 Block		49 F027 009 Attachment φ 68 and 77		49 C017 5A0 Engine support set	
49 U027 003 Oil seal installer		49 E011 1A0 Ring gear brake set		—	