


2012 - Mazda6 - Steering

STEERING LOCATION INDEX

MZR 2.5

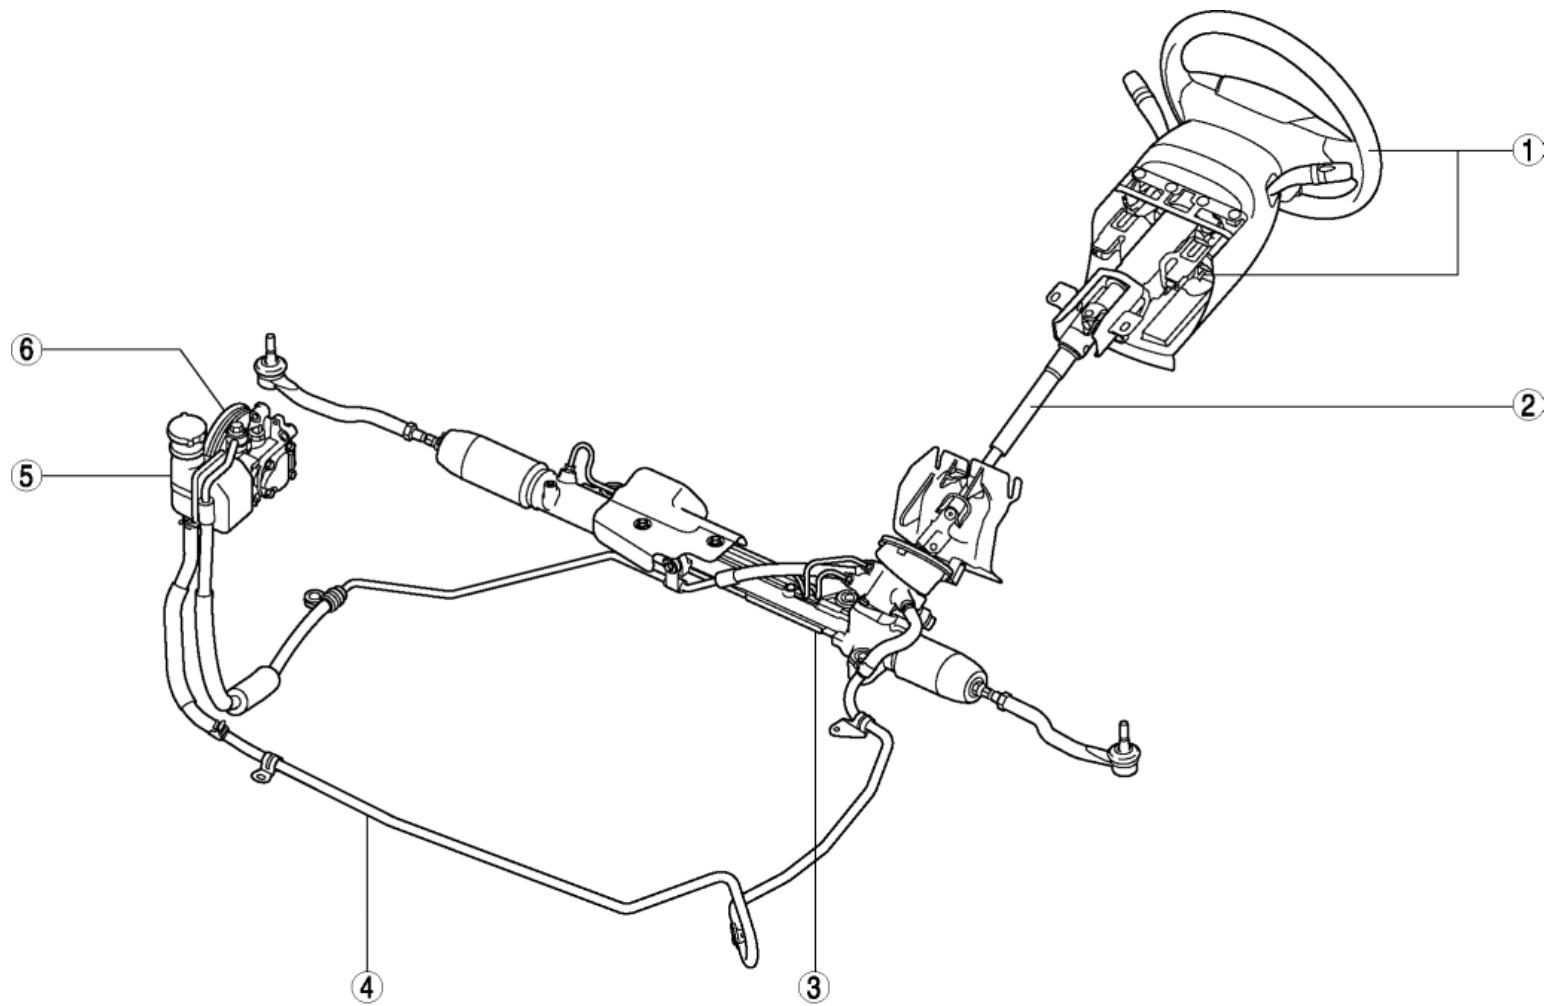

1Steering wheel and column
(See STEERING WHEEL AND COLUMN INSPECTION .)
(See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
(See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
2Steering shaft
(See STEERING SHAFT INSPECTION .)
3Steering gear and linkage
(See STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION [MZR 2.5] .)
(See STEERING GEAR AND LINKAGE DI SASSEMBLY .)
(See STEERING GEAR AND LINKAGE INSPECTION .)
(See STEERING GEAR AND LINKAGE ASSEMBLY .)

4Power steering fluid line component

(See [POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION \[MZR 2.5\]](#) .)

5Power steering fluid reservoir


(See [POWER STEERING FLUID INSPECTION](#) .)

6Power steering oil pump

(See [POWER STEERING OIL PUMP REMOVAL/ INSTALLATION \[MZR 2.5\]](#) .)

(See [POWER STEERING OIL PUMP DI SASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#) .)

MZI 3.7 V6

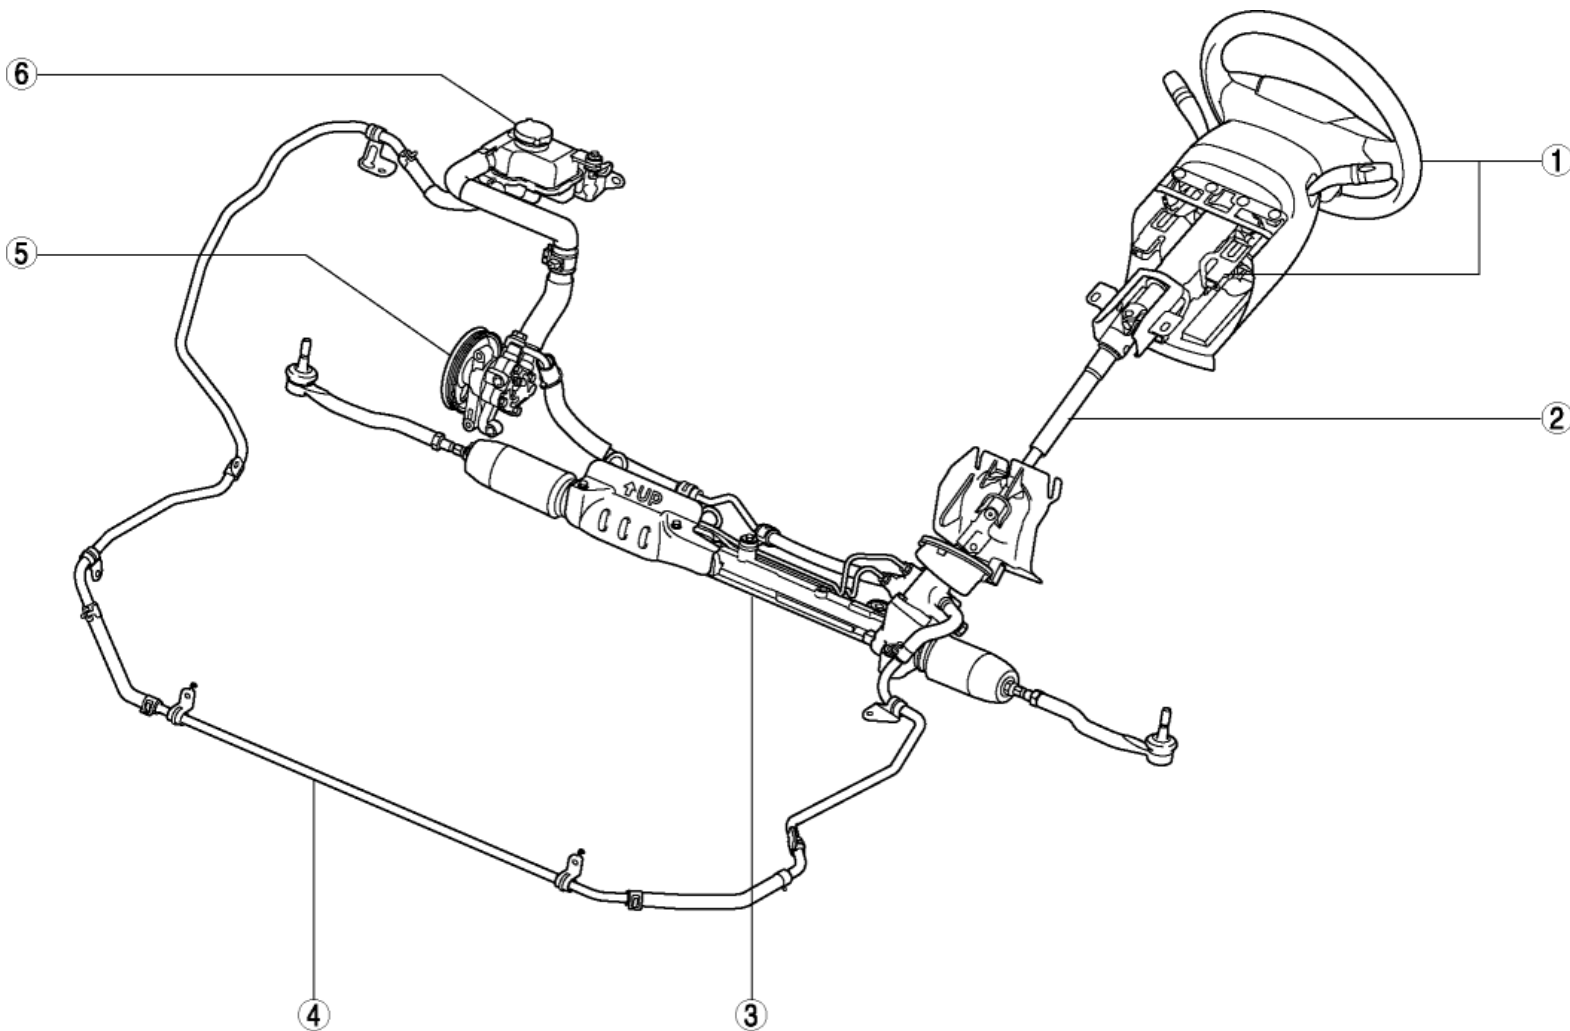

1Steering wheel and column

(See [STEERING WHEEL AND COLUMN INSPECTION](#) .)

(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)

(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)

2Steering shaft

(See [STEERING SHAFT INSPECTION](#) .)

3Steering gear and linkage


(See [STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)

	(See STEERING GEAR AND LINKAGE DISASSEMBLY .) (See STEERING GEAR AND LINKAGE INSPECTION .) (See STEERING GEAR AND LINKAGE ASSEMBLY .)
4	Power steering fluid line component (See POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Power steering oil pump (See POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6] .)
6	Power steering fluid reservoir (See POWER STEERING FLUID INSPECTION .)

2012 - Mazda6 - Steering

STEERING LOCATION INDEX

MZR 2.5

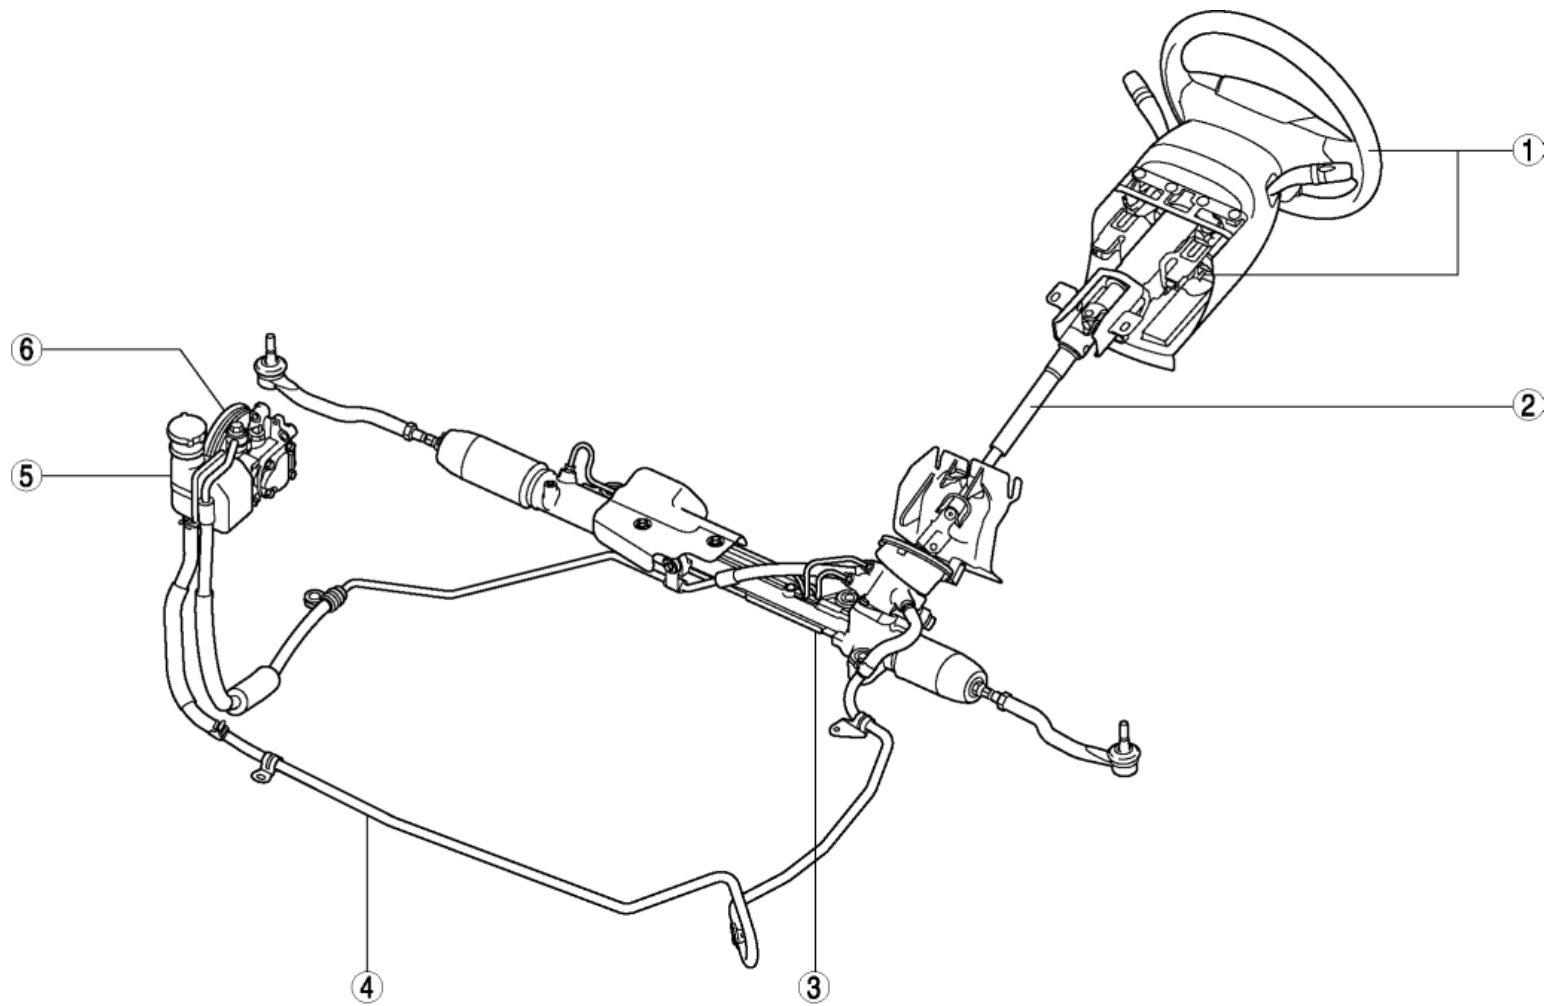

1Steering wheel and column
(See STEERING WHEEL AND COLUMN INSPECTION .)
(See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
(See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
2Steering shaft
(See STEERING SHAFT INSPECTION .)
3Steering gear and linkage
(See STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION [MZR 2.5] .)
(See STEERING GEAR AND LINKAGE DI SASSEMBLY .)
(See STEERING GEAR AND LINKAGE INSPECTION .)
(See STEERING GEAR AND LINKAGE ASSEMBLY .)

4Power steering fluid line component

(See [POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

5Power steering fluid reservoir


(See [POWER STEERING FLUID INSPECTION](#).)

6Power steering oil pump

(See [POWER STEERING OIL PUMP REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)

MZI 3.7 V6

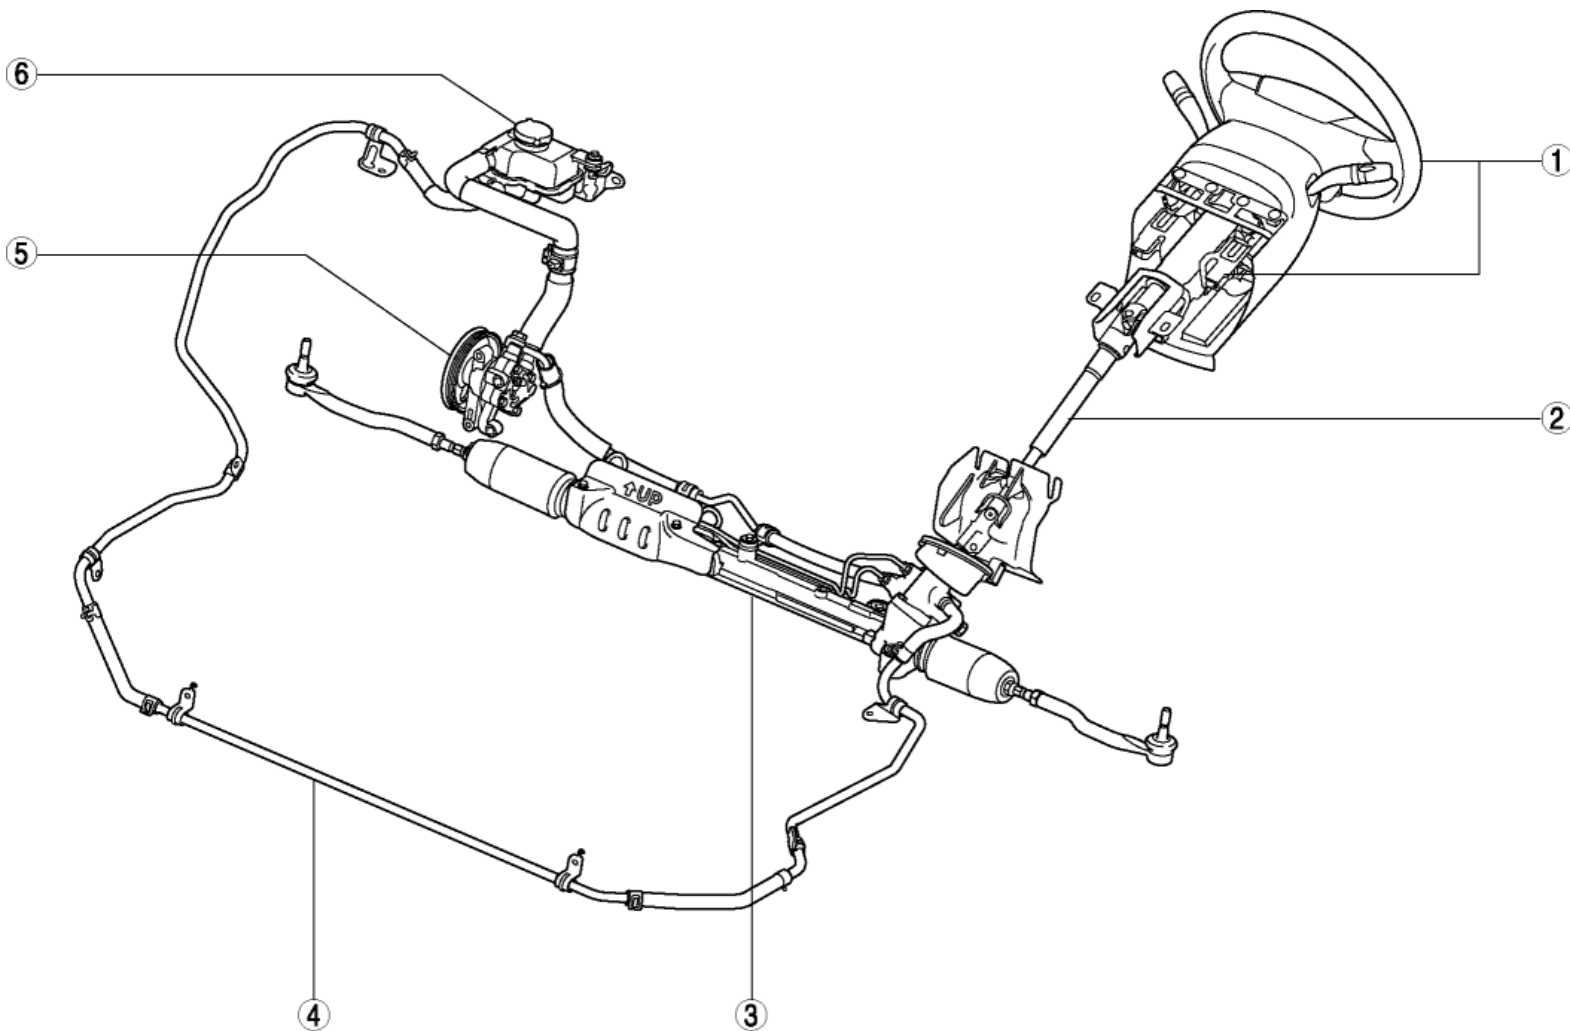

1Steering wheel and column

(See [STEERING WHEEL AND COLUMN INSPECTION](#).)

(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#).)

(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#).)

2Steering shaft

(See [STEERING SHAFT INSPECTION](#).)

3Steering gear and linkage

(See [STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

	(See STEERING GEAR AND LINKAGE DISASSEMBLY .) (See STEERING GEAR AND LINKAGE INSPECTION .) (See STEERING GEAR AND LINKAGE ASSEMBLY .)
4	Power steering fluid line component (See POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Power steering oil pump (See POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6] .)
6	Power steering fluid reservoir (See POWER STEERING FLUID INSPECTION .)