


2012 - Mazda6 - Steering

STEERING SHAFT INSPECTION

1. Inspect the following.
 - a. Column bearing for damage
 - b. Steering shaft length

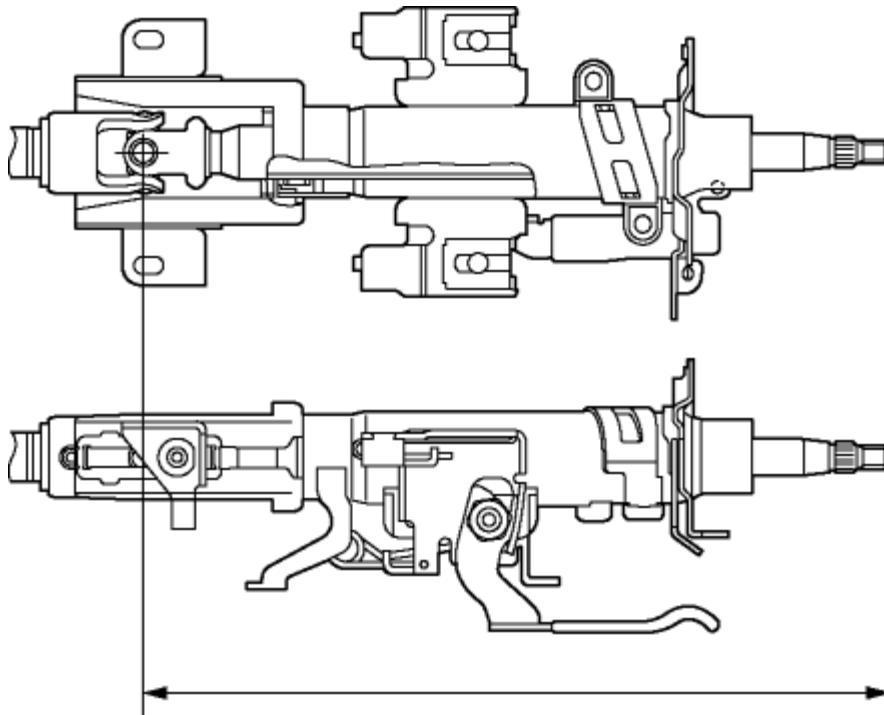


- Replace the steering shaft component as necessary.

Steering shaft length

- 394.5 mm {15.53 in}

2. Inspect the tilt and telescope operation.

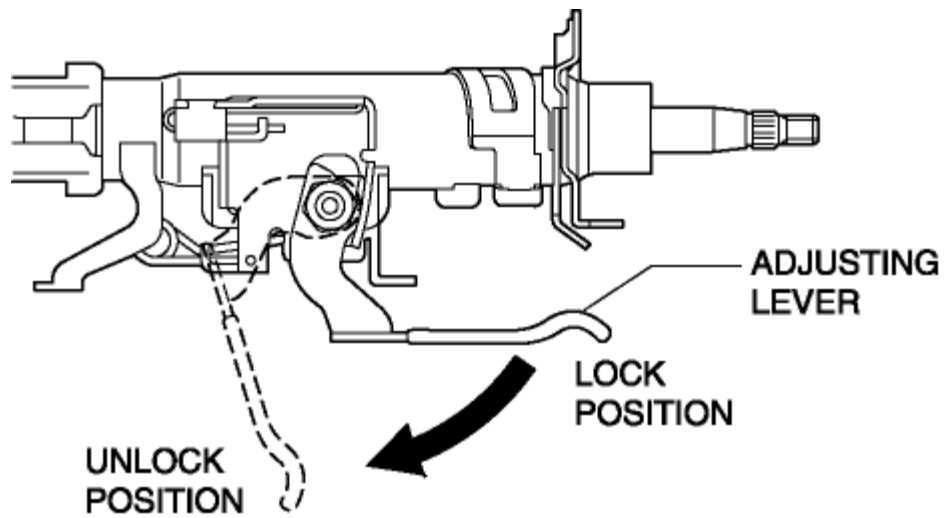

- a. Verify that the adjusting lever moves smoothly from unlock position to lock position.
- b. Verify that the steering shaft is fixed firmly when the adjusting lever is locked.
 - Replace the steering shaft component as necessary.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Steering

STEERING SHAFT INSPECTION

1. Inspect the following.
 - a. Column bearing for damage
 - b. Steering shaft length

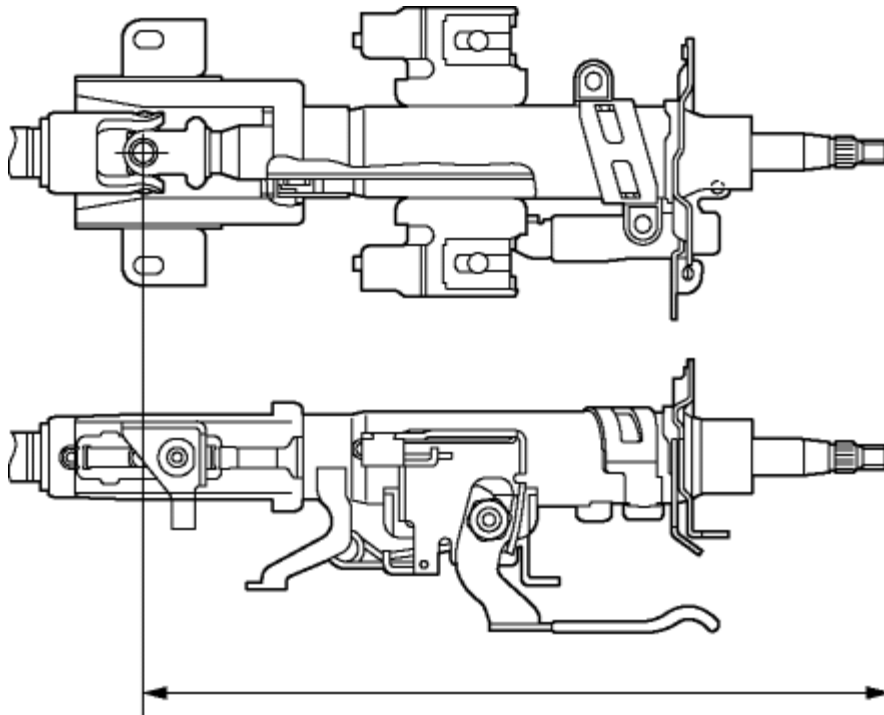


- Replace the steering shaft component as necessary.

Steering shaft length

- 394.5 mm {15.53 in}

2. Inspect the tilt and telescope operation.

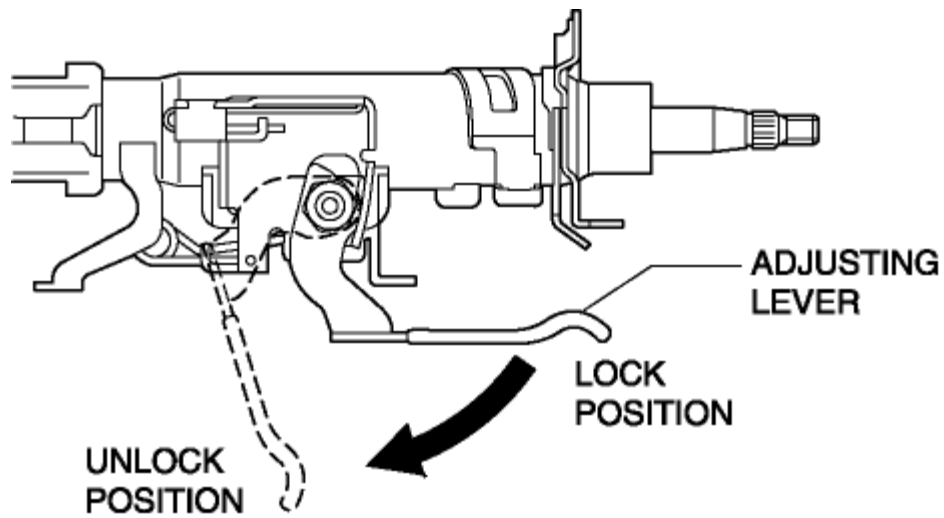

- a. Verify that the adjusting lever moves smoothly from unlock position to lock position.
- b. Verify that the steering shaft is fixed firmly when the adjusting lever is locked.
 - Replace the steering shaft component as necessary.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.