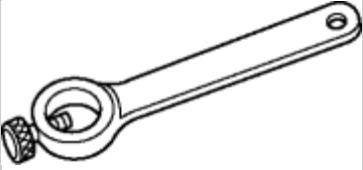
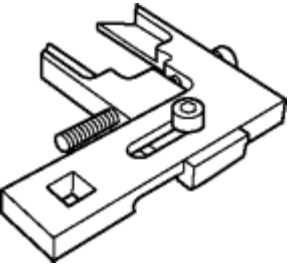
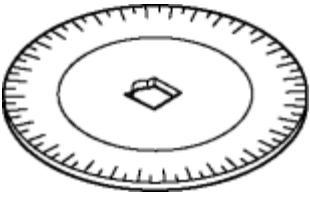
 
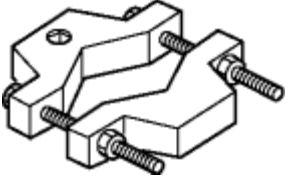
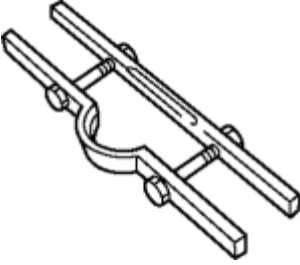
 
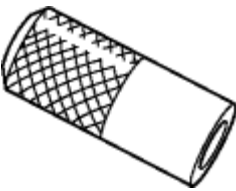
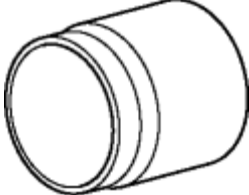
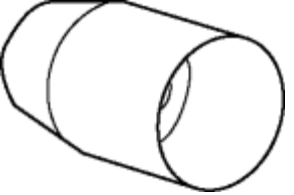
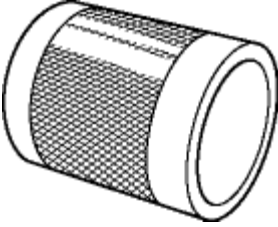
 
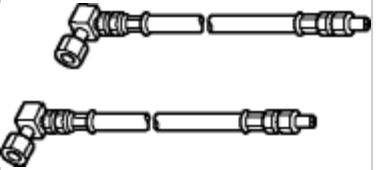
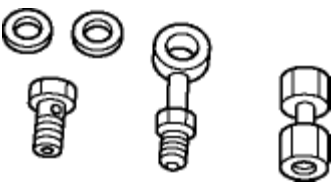
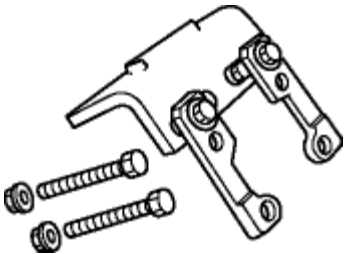
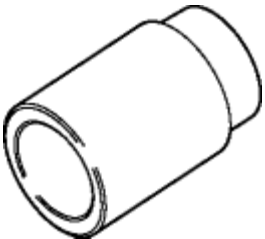
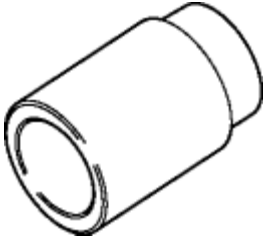
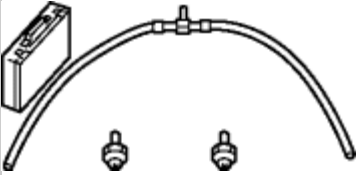
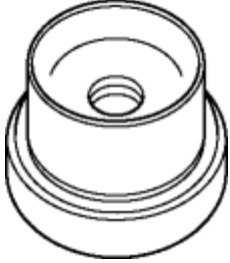
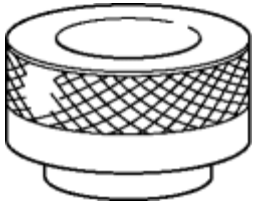
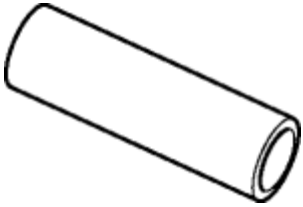
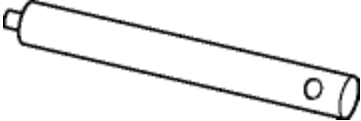
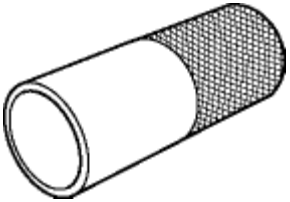
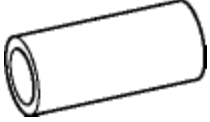


[< Previous](#)

2012 - Mazda6 - Steering

STEERING SST




 


 




 

49 0180 510B Preload measuring attachment		49 B032 317 Bearing & oil seal remover		49 E032 308 Wrench	
49 D032 316 Protractor		49 T025 001 Boot clamp crimpers		49 F017 1A0 Universal wrench	
49 N032 319A Support plate		49 B032 323 Rod seal remover body		49 F032 303 Handle	
49 G030 160 Valve seal pusher		49 E032 307 Slipper seal protector		49 E032 305 Slipper seal protector	
49 E032 306 Slipper seal front		49 1232 670B Power steering gauge set		49 H002 671 Adapter	
49 G032 3A4A		49 F032 301		49 F032 321	












Power steering gauge adapter set		Power steering pump hanger		Installer	
49 F032 320 Installer A (part of 49 F032 3A2)		49 G032 3A1 Joint hose set		49 S231 506 Body	
49 V001 525 Bearing installer		49 S501 062 Collar		49 G033 102 Handle	
49 W026 001 Oil seal installer		49 T032 302 Bearing installer		—	

[< Previous](#)

2012 - Mazda6 - Steering

STEERING SST

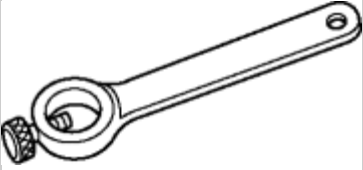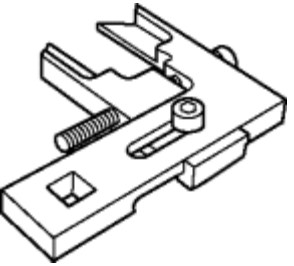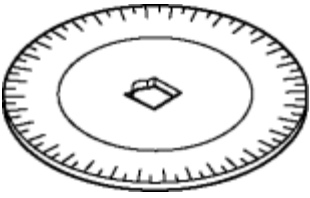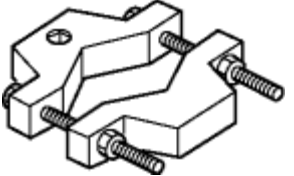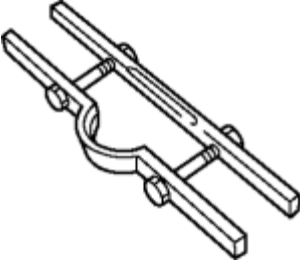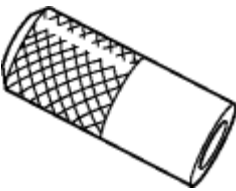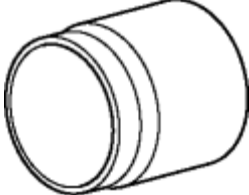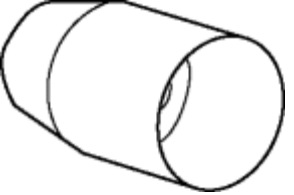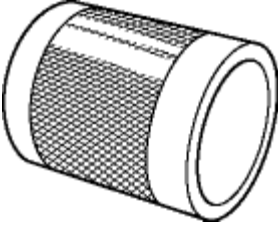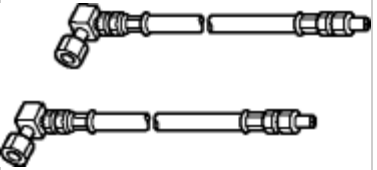49 0180 510B Preload measuring attachment		49 B032 317 Bearing & oil seal remover		49 E032 308 Wrench	
49 D032 316 Protractor		49 T025 001 Boot clamp crimpers		49 F017 1A0 Universal wrench	
49 N032 319A Support plate		49 B032 323 Rod seal remover body		49 F032 303 Handle	
49 G030 160 Valve seal pusher		49 E032 307 Slipper seal protector		49 E032 305 Slipper seal protector	
49 E032 306 Slipper seal front		49 1232 670B Power steering gauge set		49 H002 671 Adapter	
49 G032 3A4A		49 F032 301		49 F032 321	

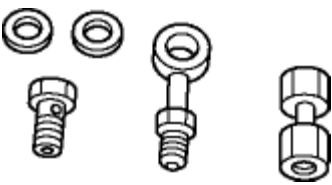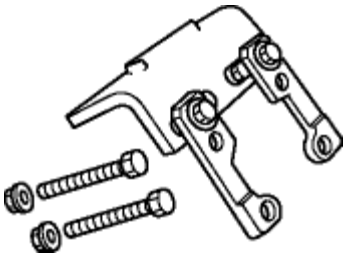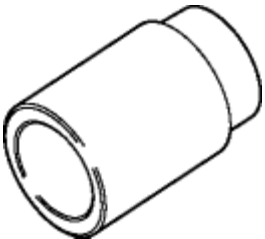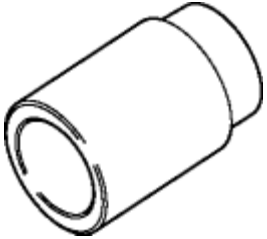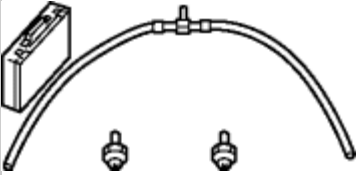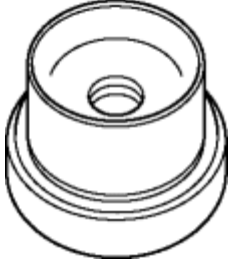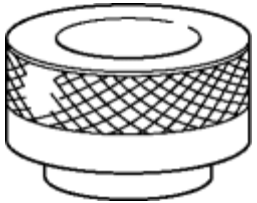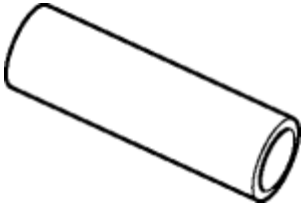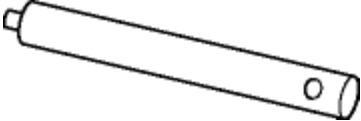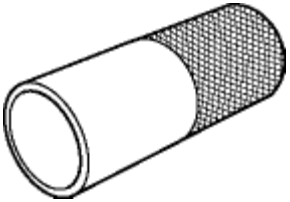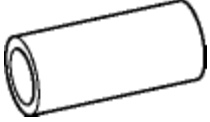Power steering gauge adapter set		Power steering pump hanger		Installer	
49 F032 320 Installer A (part of 49 F032 3A2)		49 G032 3A1 Joint hose set		49 S231 506 Body	
49 V001 525 Bearing installer		49 S501 062 Collar		49 G033 102 Handle	
49 W026 001 Oil seal installer		49 T032 302 Bearing installer		—	