


2012 - Mazda6 - HVAC

A/ C OPERATION CHECK MODE DISPLAY

1. Connect the M-MDS (IDS) to the DLC-2.

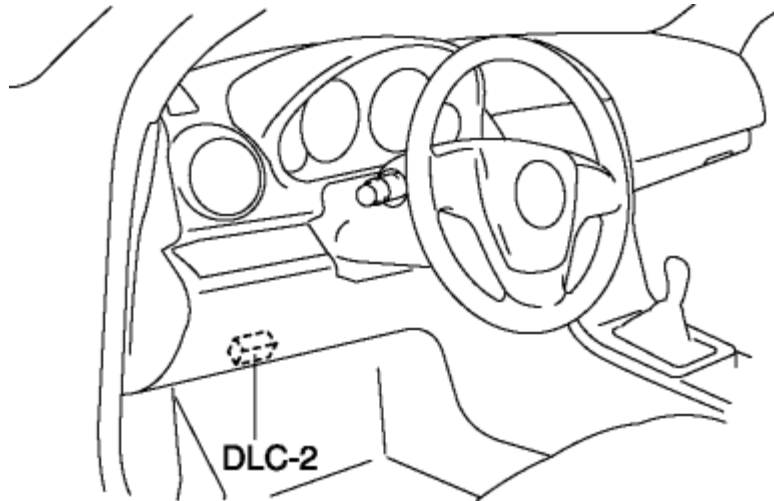


2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - a. Select the "Body".
 - b. Select the "EATC Operation Check".
3. Verify the A/C operation check mode according to the directions on the screen.

2012 - Mazda6 - HVAC

A/ C OPERATION CHECK MODE DISPLAY

1. Connect the M-MDS (IDS) to the DLC-2.

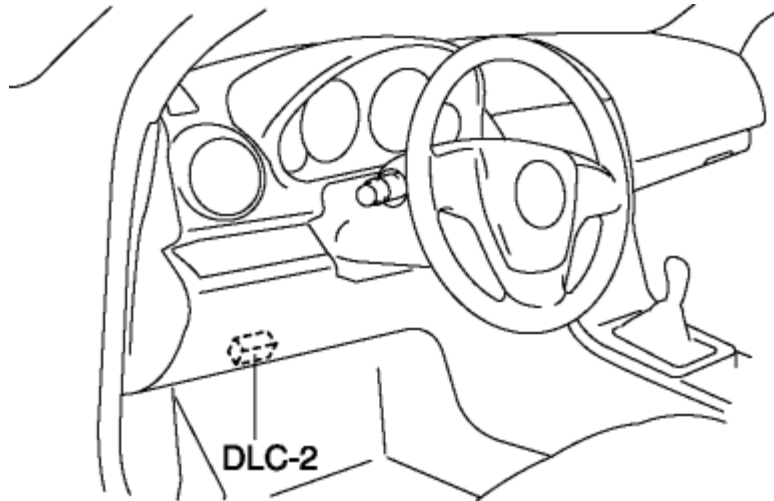

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - a. Select the "Body".
 - b. Select the "EATC Operation Check".
3. Verify the A/C operation check mode according to the directions on the screen.