


2012 - Mazda6 - HVAC

DTC DISPLAY

1. Connect the M-MDS (IDS) to the DLC-2.

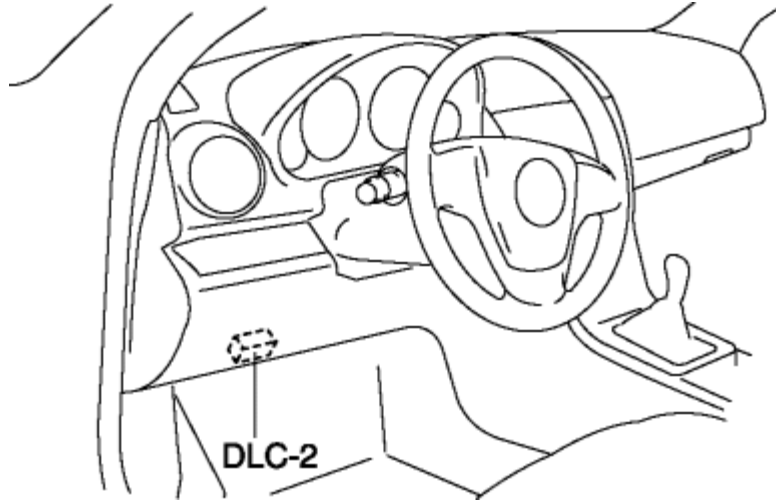

2. Expose the solar radiation sensor to natural sunlight.

NOTE:

- If natural sunlight is not shone on the solar radiation sensor, the climate control unit determines a malfunction and indicates DTC "B1A63:11, B1A63:13, B1A64:11, B1A64:13".

3. After the vehicle is identified, select the following items from the initialization screen of the IDS.

- a. Select "Self Test".
- b. Select "All CMDTCs".


4. Verify the DTC according to the directions on the screen.

- If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.

2012 - Mazda6 - HVAC

DTC DISPLAY

1. Connect the M-MDS (IDS) to the DLC-2.

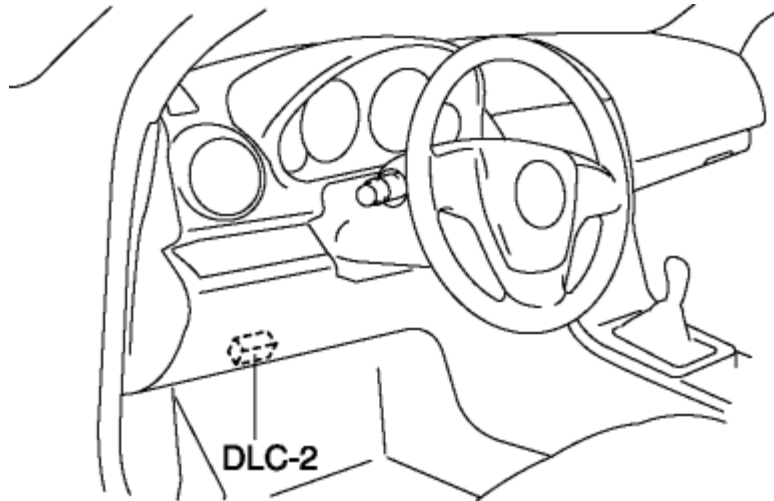

2. Expose the solar radiation sensor to natural sunlight.

NOTE:

- If natural sunlight is not shone on the solar radiation sensor, the climate control unit determines a malfunction and indicates DTC "B1A63:11, B1A63:13, B1A64:11, B1A64:13".

3. After the vehicle is identified, select the following items from the initialization screen of the IDS.

- a. Select "Self Test".
- b. Select "All CMDTCs".

4. Verify the DTC according to the directions on the screen.

- If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.