


2012 - Mazda6 - HVAC

AIR FILTER REMOVAL/ INSTALLATION

1. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION](#).)
2. Remove in the order indicated in the table.

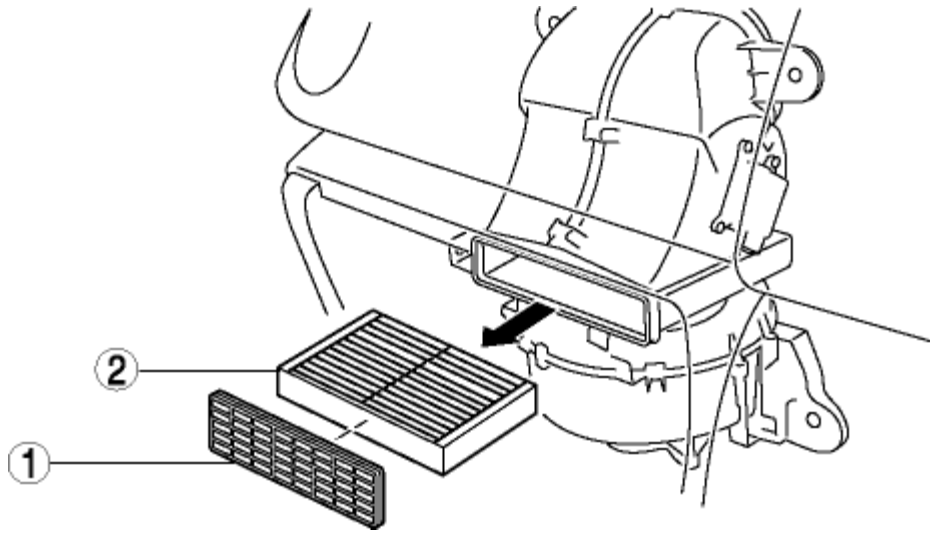


1	Air filter cover
2	Air filter

3. Install in the reverse order of removal.

2012 - Mazda6 - HVAC

AIR FILTER REMOVAL/ INSTALLATION

1. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION](#).)
2. Remove in the order indicated in the table.

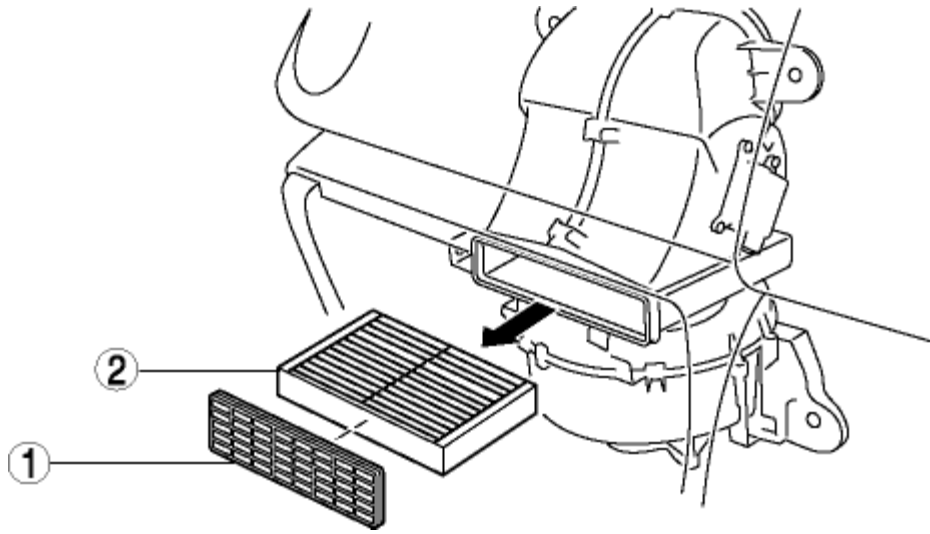

1	Air filter cover
2	Air filter

3. Install in the reverse order of removal.