


2012 - Mazda6 - HVAC

RECEIVER/ DRI ER REMOVAL/ I NSTALLATI ON

- 1. Disconnect the negative battery cable.
- 2. Drain the refrigerant. (See [REFRIGERANT CHARGI NG.](#))
- 3. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ I NSTALLATI ON.](#))

CAUTION:

- If moisture or foreign material enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign material out of the cycle.
4. Remove in the order indicated in the table. Do not allow compressor oil to spill.

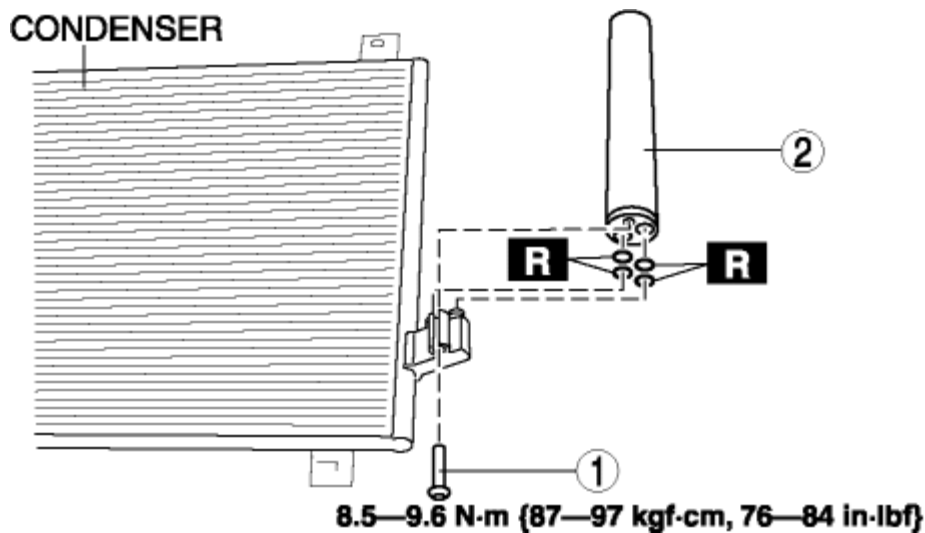


1 Bolt
2 Receiver/drier (See Receiver/ Drier Removal Note.) (See Receiver/ Drier Installation Note.)

5. Install in the reverse order of removal.
6. Perform the refrigerant system performance test. (See [REFRIGERANT SYSTEM PERFORMANCE TEST.](#))


Receiver/ Drier Removal Note

1. Disconnect the block joint type pipes by grasping female side of the block with hand holding firmly, then loosen the connection bolt.

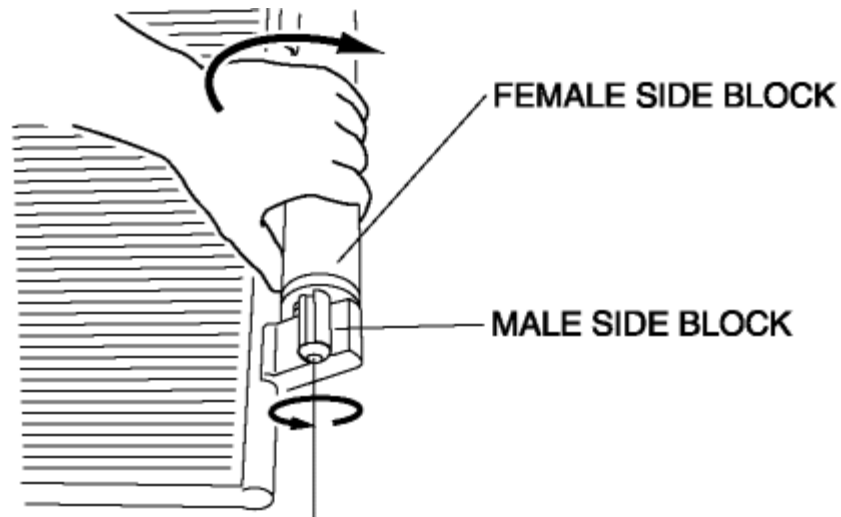

Receiver/ Drier Installation Note

1. Tighten the bolt of joint by hand.

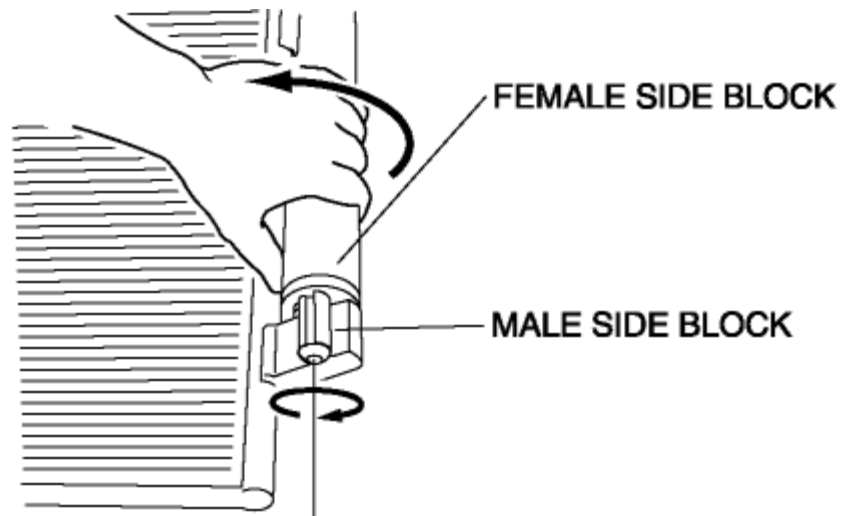

2. Tighten the joint to the specified torque.

- Connect the block joint type pipe by grasping female side of the block with hand holding firmly, then tighten the connection bolt.


2012 - Mazda6 - HVAC

RECEIVER/ DRI ER REMOVAL/ I NSTALLATI ON

1. Disconnect the negative battery cable.
2. Drain the refrigerant. (See [REFRIGERANT CHARGI NG.](#))
3. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ I NSTALLATI ON.](#))

CAUTION:

- If moisture or foreign material enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign material out of the cycle.
4. Remove in the order indicated in the table. Do not allow compressor oil to spill.

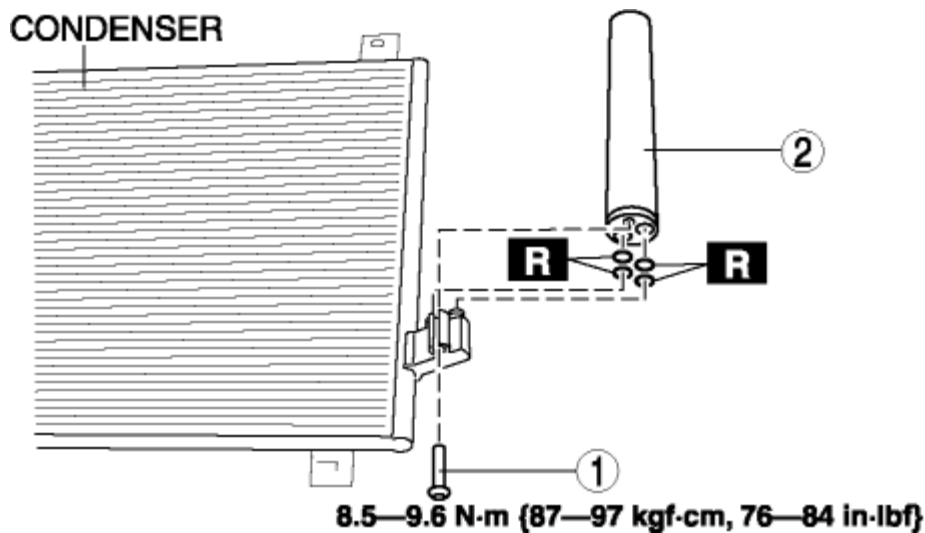


1 Bolt
2 Receiver/drier (See Receiver/ Drier Removal Note.) (See Receiver/ Drier Installation Note.)

5. Install in the reverse order of removal.
6. Perform the refrigerant system performance test. (See [REFRIGERANT SYSTEM PERFORMANCE TEST.](#))


Receiver/ Drier Removal Note

1. Disconnect the block joint type pipes by grasping female side of the block with hand holding firmly, then loosen the connection bolt.

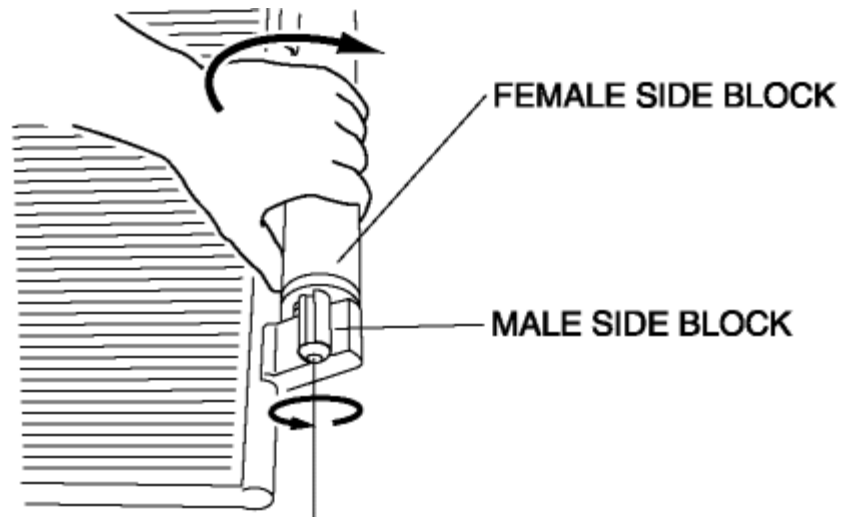

Receiver/ Drier Installation Note

1. Tighten the bolt of joint by hand.

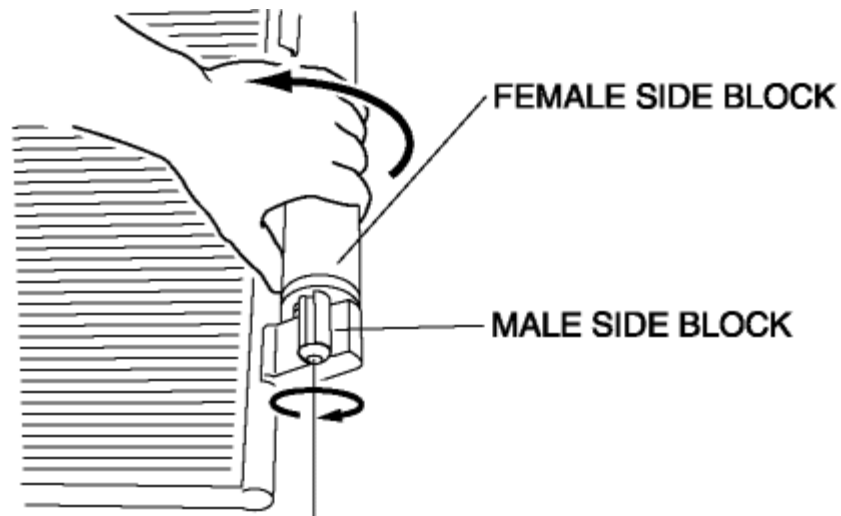

2. Tighten the joint to the specified torque.

- Connect the block joint type pipe by grasping female side of the block with hand holding firmly, then tighten the connection bolt.