


2012 - Mazda6 - HVAC

HVAC BASIC SYSTEM LOCATION INDEX

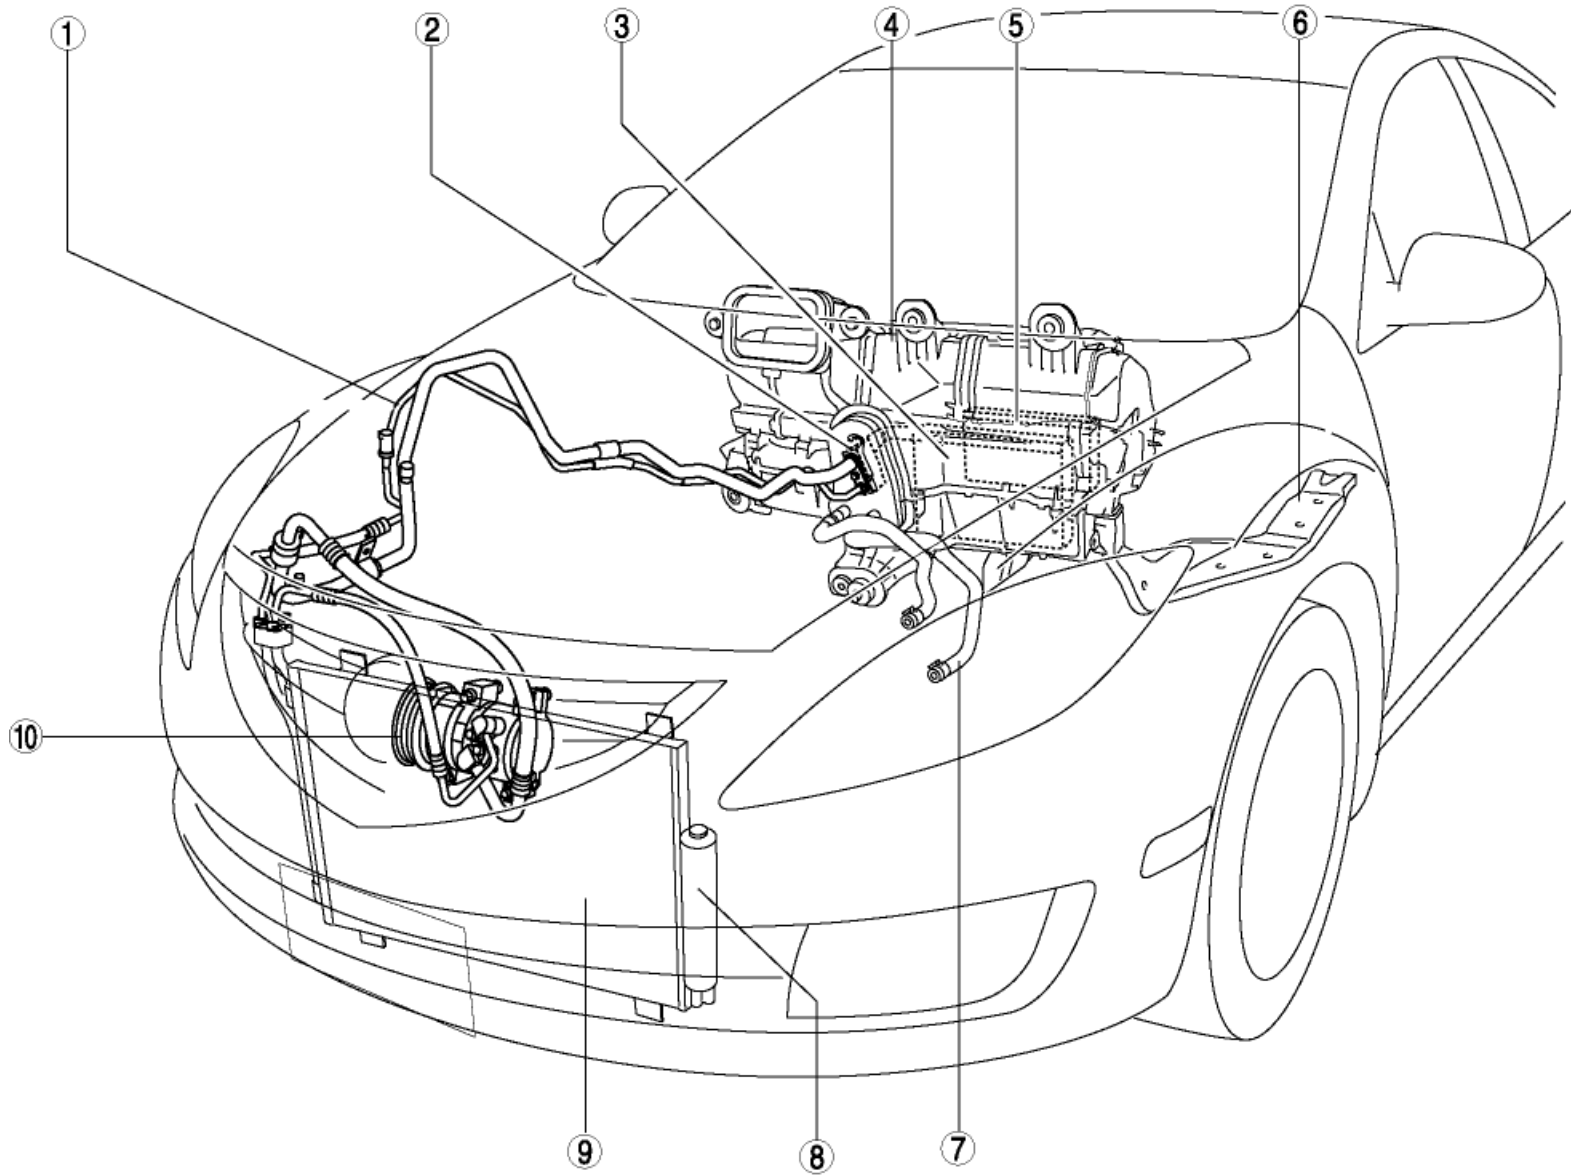

1 Refrigerant line (See REFRIGERANT LINE REMOVAL/ INSTALLATION.)
--

2 Expansion valve (See EXPANSION VALVE REMOVAL/ INSTALLATION.)
--


3 Evaporator (See EVAPORATOR INSPECTION.)

4 A/C unit

	(See A/ C UNIT REMOVAL/ INSTALLATION.) (See A/ C UNIT DISASSEMBLY/ ASSEMBLY.)
5	Heater core (See HEATER CORE INSPECTION.)
6	Rear heat duct (See REAR HEAT DUCT COMPONENT REMOVAL/ INSTALLATION.)
7	Heater pipe
8	Receiver/drier (See RECEIVER/ DRIER REMOVAL/ INSTALLATION.)
9	Condenser (See CONDENSER REMOVAL/ INSTALLATION.) (See CONDENSER INSPECTION.)
10	A/C compressor (See A/ C COMPRESSOR REMOVAL/ INSTALLATION.)

2012 - Mazda6 - HVAC

HVAC BASIC SYSTEM LOCATION INDEX

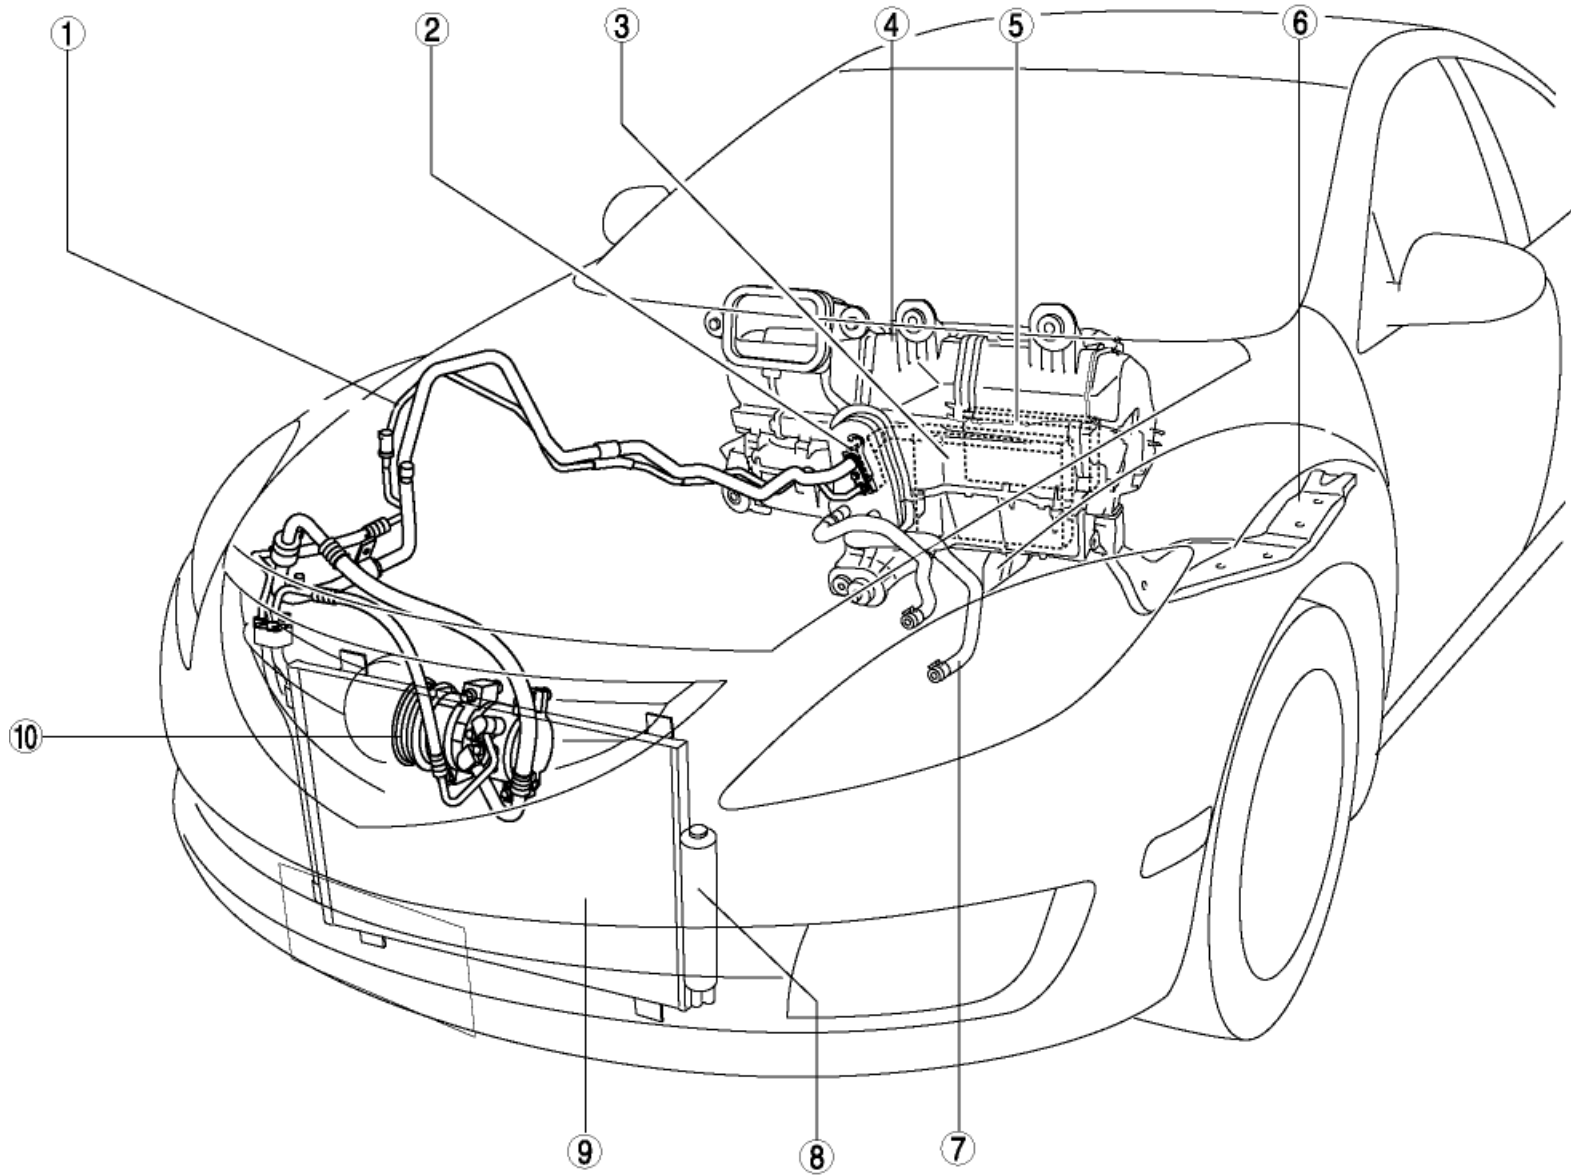

1 Refrigerant line (See REFRIGERANT LINE REMOVAL/ INSTALLATION.)
--

2 Expansion valve (See EXPANSION VALVE REMOVAL/ INSTALLATION.)
--

3 Evaporator (See EVAPORATOR INSPECTION.)

4 A/C unit

	(See A/ C UNIT REMOVAL/ INSTALLATION.) (See A/ C UNIT DISASSEMBLY/ ASSEMBLY.)
5	Heater core (See HEATER CORE INSPECTION.)
6	Rear heat duct (See REAR HEAT DUCT COMPONENT REMOVAL/ INSTALLATION.)
7	Heater pipe
8	Receiver/drier (See RECEIVER/ DRIER REMOVAL/ INSTALLATION.)
9	Condenser (See CONDENSER REMOVAL/ INSTALLATION.) (See CONDENSER INSPECTION.)
10	A/C compressor (See A/ C COMPRESSOR REMOVAL/ INSTALLATION.)