


2012 - Mazda6 - HVAC

REAR HEAT DUCT COMPONENT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front seats (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
 - b. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - c. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION](#).)
 - d. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION](#).)
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION](#).)
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX](#).)
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION](#).)
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION](#).)
 - j. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION](#).)
 - k. Fuel-filler lid opener bezel (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION](#).)
3. Turn the floor covering over. (See [FLOOR COVERING REMOVAL/ INSTALLATION](#).)
4. Remove in the order indicated in the table.

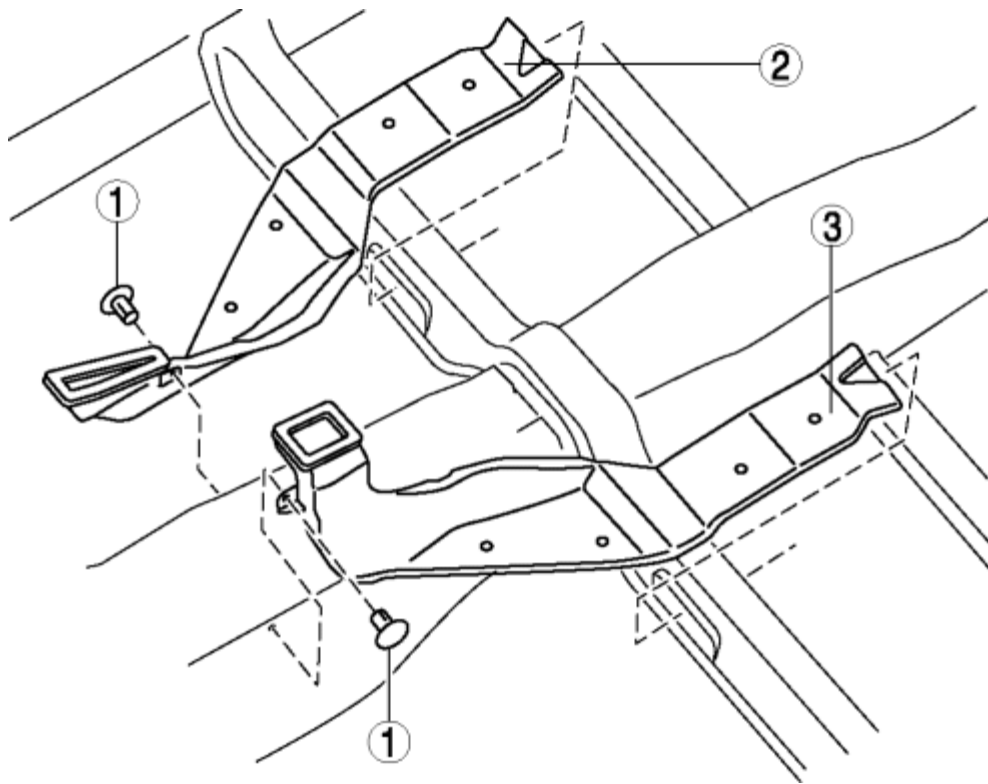

1	Fastener
2	Rear heat duct (RH)
3	Rear heat duct (LH)

5. Install in the reverse order of removal.


[< Previous](#) [Next >](#)

[Back to Top](#)

2012 - Mazda6 - HVAC

REAR HEAT DUCT COMPONENT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front seats (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
 - b. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - c. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION](#).)
 - d. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION](#).)
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION](#).)
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX](#).)
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION](#).)
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION](#).)
 - j. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION](#).)
 - k. Fuel-filler lid opener bezel (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION](#).)
3. Turn the floor covering over. (See [FLOOR COVERING REMOVAL/ INSTALLATION](#).)
4. Remove in the order indicated in the table.

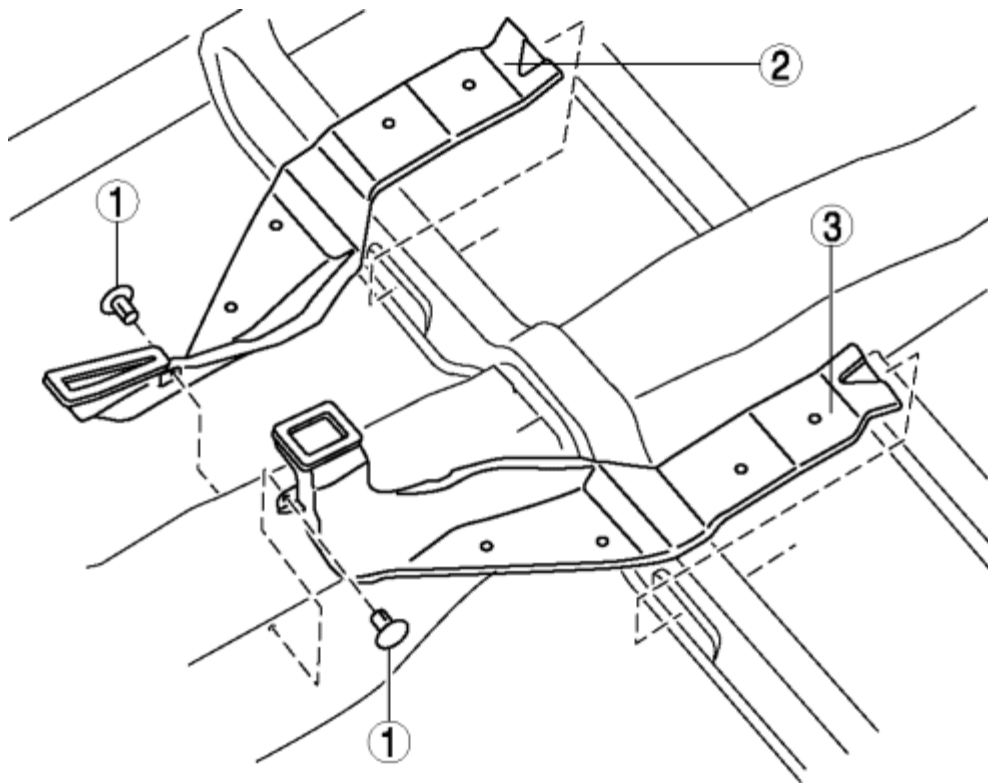

1	Fastener
2	Rear heat duct (RH)
3	Rear heat duct (LH)

5. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)