

2012 - Mazda6 - Restraints

DTC C0061:29/ C0062:29/ C0063:29

System Malfunction Location

DTC	System Malfunction Location
M-MDS display	
C0061:29	Low-G (XY) sensor (lateral-G) in SAS control module is signal error
C0062:29	Low-G (XY) sensor (forward-G) in SAS control module is signal error
C0063:29	Yaw rate sensor in SAS control module is signal error

Detection Condition

WARNING:

- Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection with only detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.
- Malfunction in the SAS control module

Possible Causes

- SAS control module malfunction

Diagnostic Procedure

Step	Inspection	Action
------	------------	--------

1	PERFORM SAS CONTROL MODULE DTC INSPECTION • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC.) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION .) • Are the same DTCs present?	Yes	Replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION .)
		No	DTC troubleshooting completed.

2012 - Mazda6 - Restraints

DTC C0061:29/ C0062:29/ C0063:29

System Malfunction Location

DTC	System Malfunction Location
M-MDS display	
C0061:29	Low-G (XY) sensor (lateral-G) in SAS control module is signal error
C0062:29	Low-G (XY) sensor (forward-G) in SAS control module is signal error
C0063:29	Yaw rate sensor in SAS control module is signal error

Detection Condition

WARNING:

- Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection with only detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.
- Malfunction in the SAS control module

Possible Causes

- SAS control module malfunction

Diagnostic Procedure

Step	Inspection	Action
------	------------	--------

1	PERFORM SAS CONTROL MODULE DTC INSPECTION • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC.) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION .) • Are the same DTCs present?	Yes	Replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION .)
		No	DTC troubleshooting completed.