


2012 - Mazda6 - Restraints

SEAT TRACK POSITION SENSOR REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1min or more**.
3. Disconnect the connector.

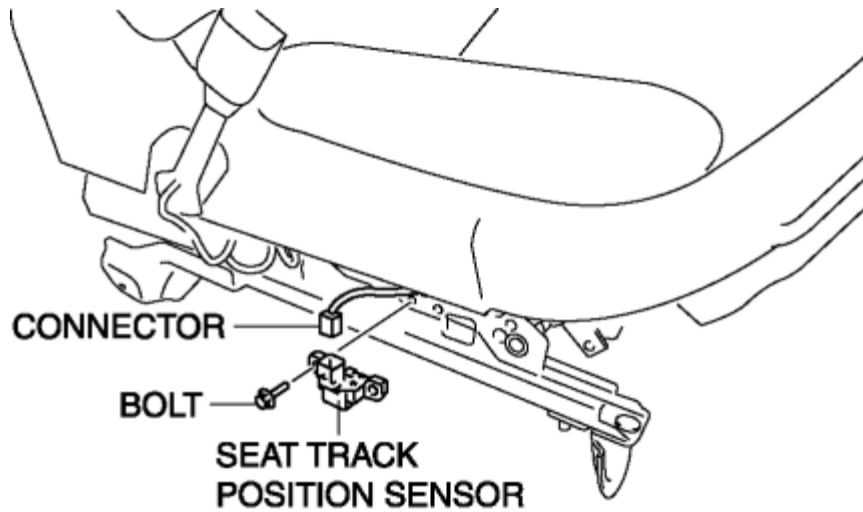


4. Remove the bolt.
5. Remove the seat track position sensor.
6. Install in the reverse order of removal.

2012 - Mazda6 - Restraints

SEAT TRACK POSITION SENSOR REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1min or more**.
3. Disconnect the connector.

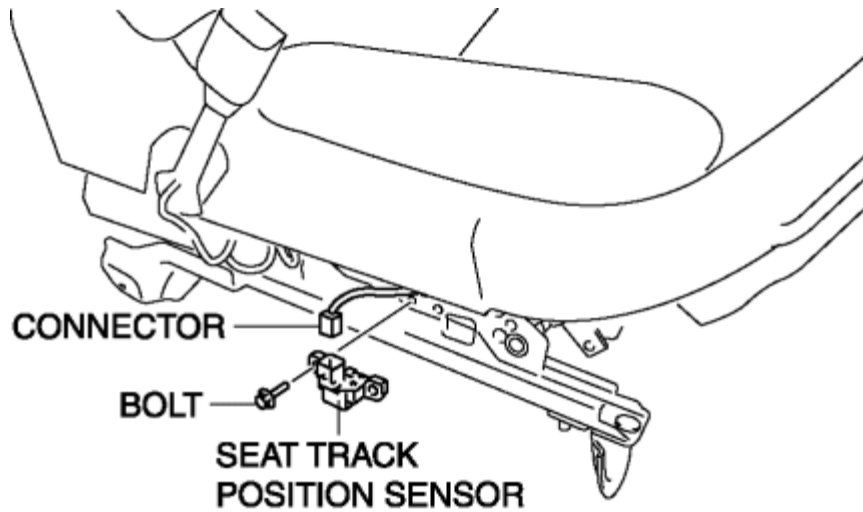

4. Remove the bolt.
5. Remove the seat track position sensor.
6. Install in the reverse order of removal.