


2012 - Mazda6 - Restraints

AIR BAG SYSTEM LOCATION INDEX

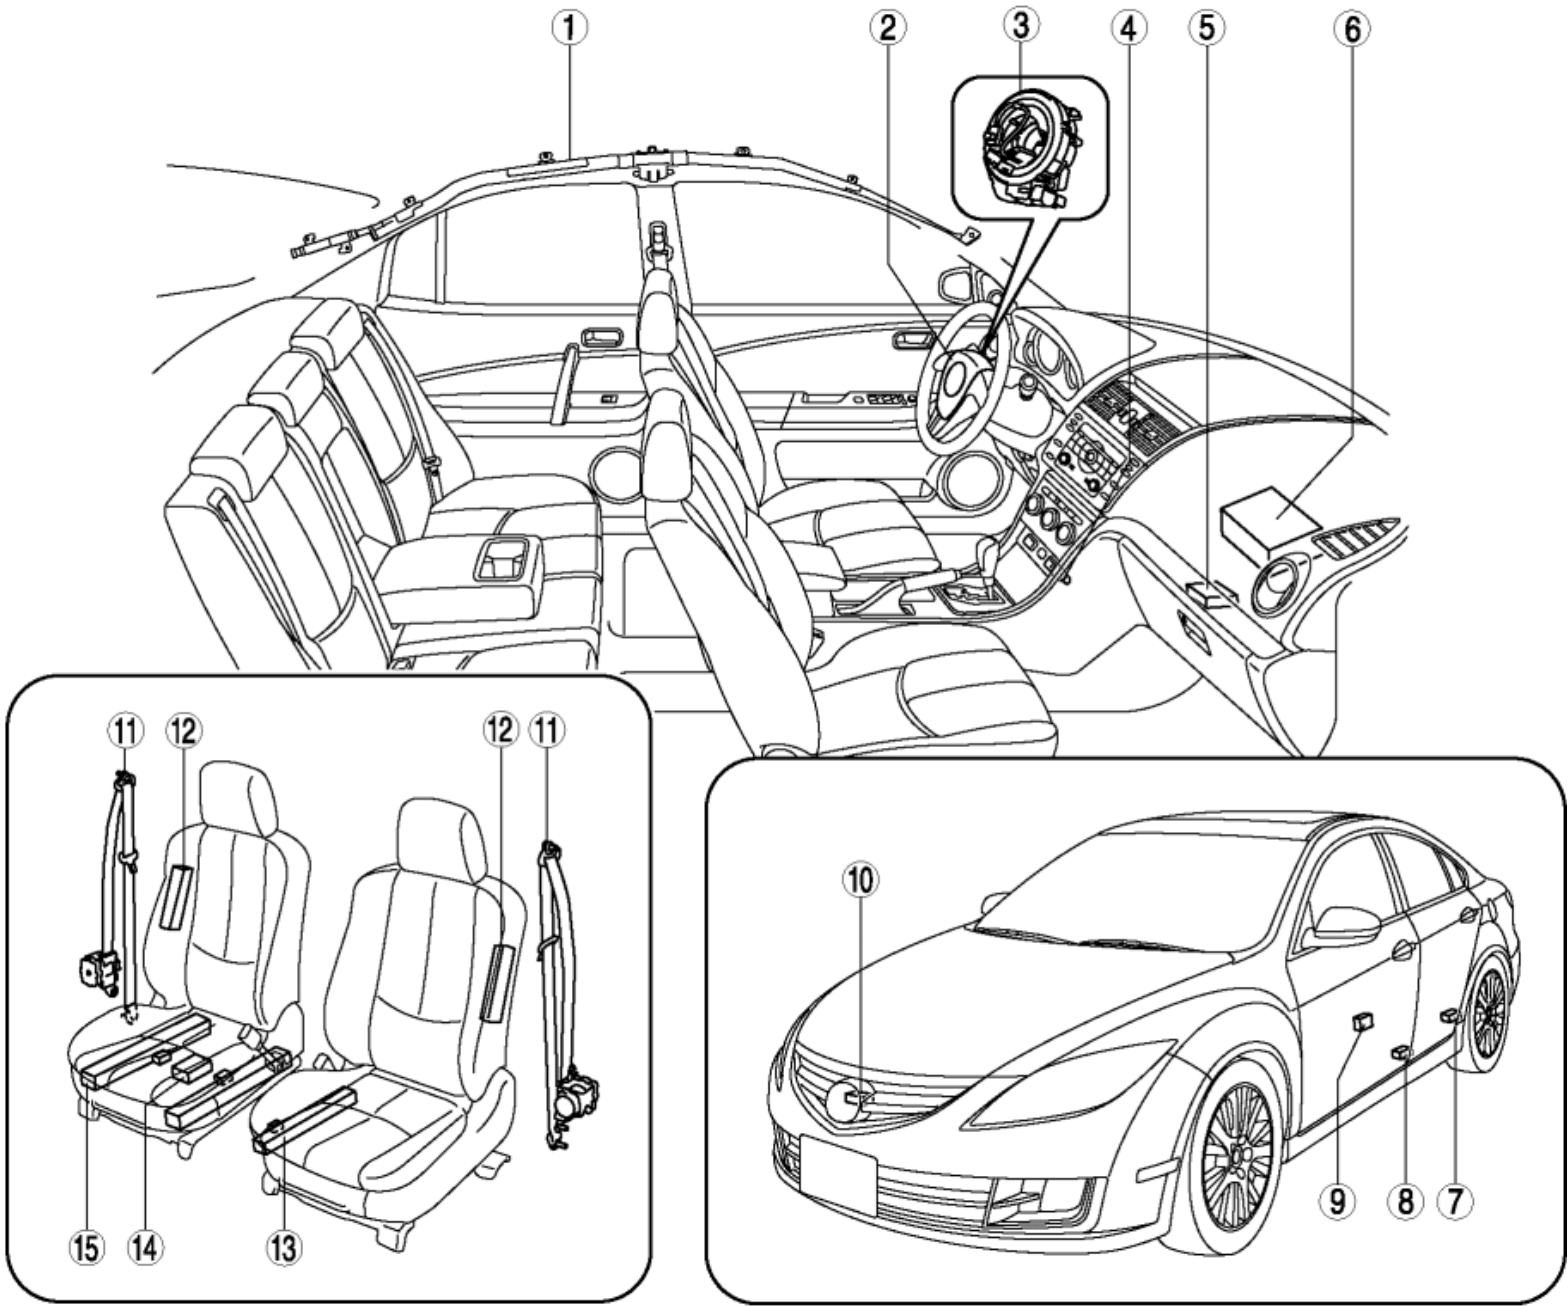

1	Curtain air bag module (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
2	Driver-side air bag module

	(See DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
3	Clock spring (See CLOCK SPRING REMOVAL/ INSTALLATION.) (See CLOCK SPRING ADJUSTMENT.) (See CLOCK SPRING INSPECTION.)
4	Passenger air bag deactivation (PAD) indicator light bulb (See PASSENGER AIR BAG DEACTIVATION (PAD) INDICATOR LIGHT BULB REMOVAL/ INSTALLATION.)
5	SAS control module (See SAS CONTROL MODULE REMOVAL/ INSTALLATION.) (See SAS CONTROL MODULE CONFIGURATION.)
6	Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
7	Side air bag sensor No.2 (See SIDE AIR BAG SENSOR NO. 2 REMOVAL/ INSTALLATION.)
8	Side air bag sensor No.1 (See SIDE AIR BAG SENSOR NO. 1 REMOVAL/ INSTALLATION.)
9	Pressure sensor (See PRESSURE SENSOR REMOVAL/ INSTALLATION.)
10	Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/ INSTALLATION.)
11	Pre-tensioner seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
12	Side air bag module (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
13	Seat track position sensor (See SEAT TRACK POSITION SENSOR REMOVAL/ INSTALLATION.)
14	Seat weight sensor control module (See SEAT WEIGHT SENSOR CONTROL MODULE REMOVAL/ INSTALLATION.)

15 Seat weight sensor

(See [SEAT WEIGHT SENSOR CALIBRATION.](#))

(See [SEAT WEIGHT SENSOR INSPECTION.](#))


[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Restraints

AIR BAG SYSTEM LOCATION INDEX

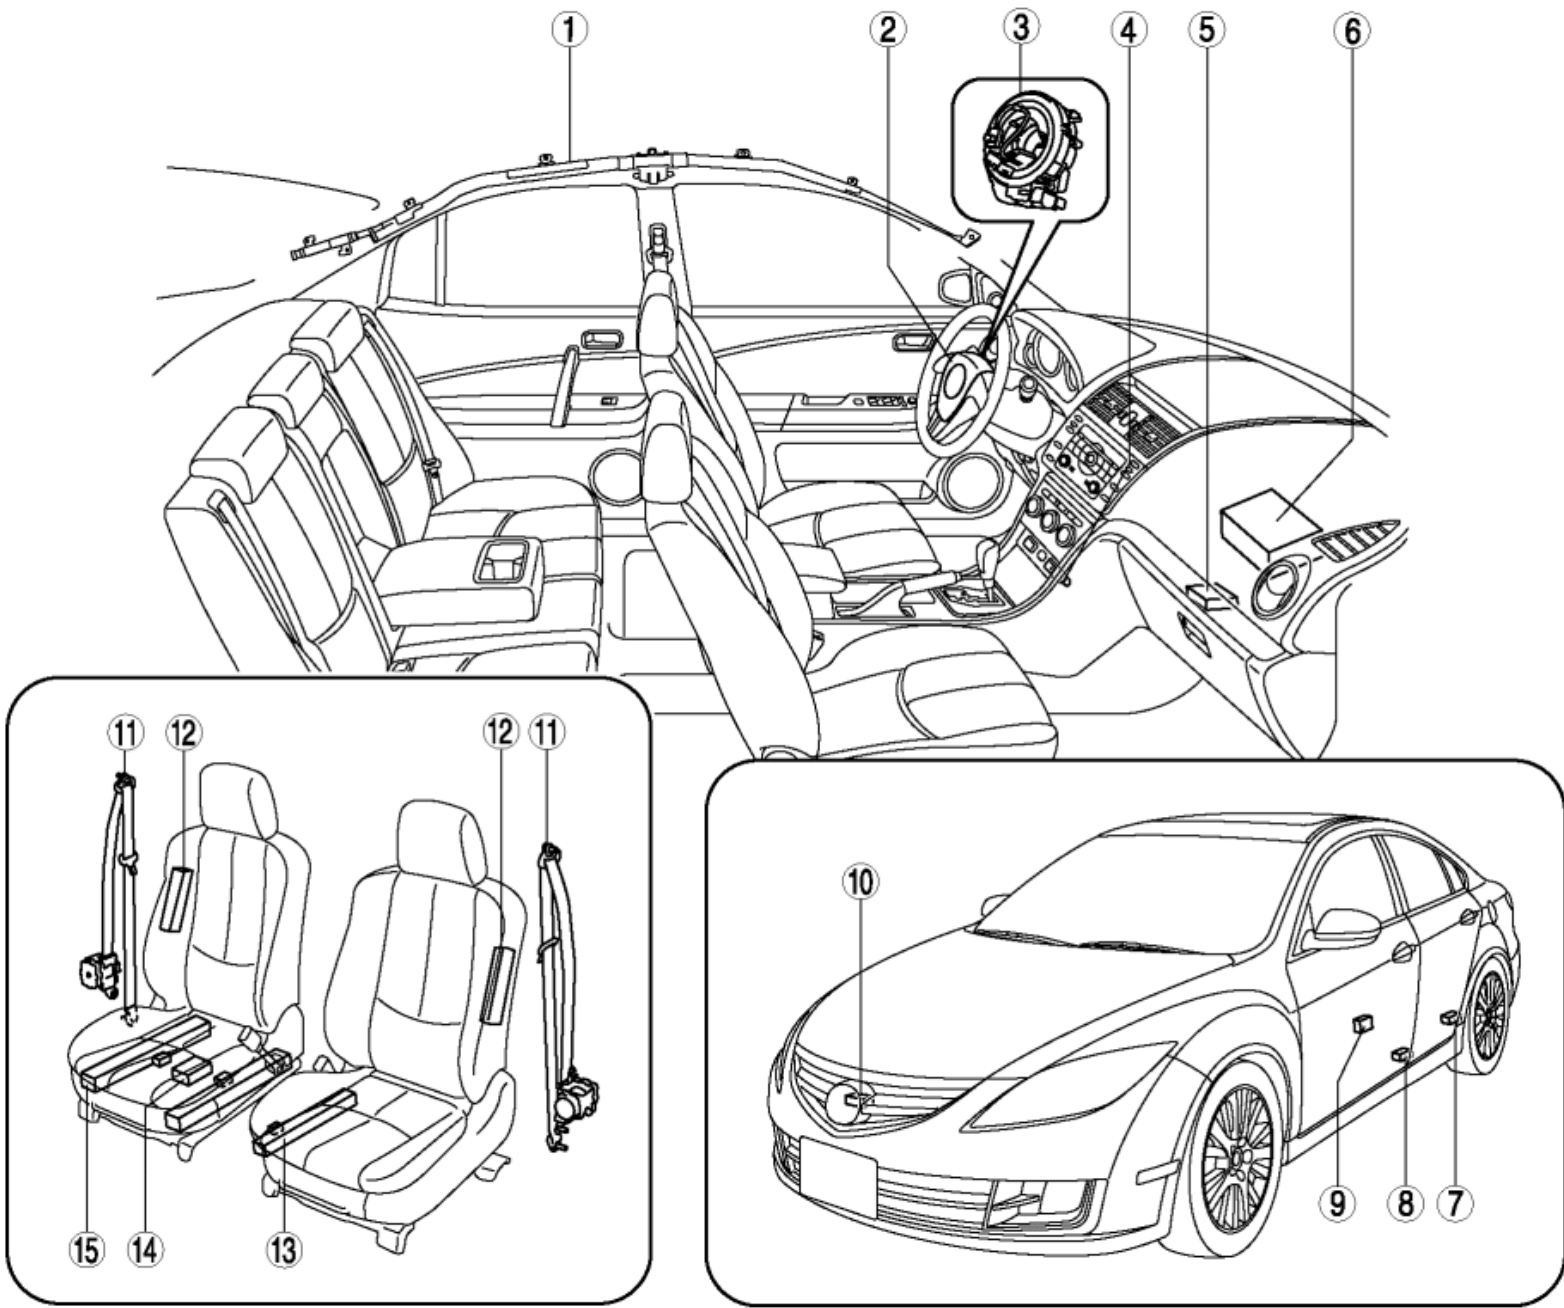

1	Curtain air bag module (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
2	Driver-side air bag module

	(See DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
3	Clock spring (See CLOCK SPRING REMOVAL/ INSTALLATION.) (See CLOCK SPRING ADJUSTMENT.) (See CLOCK SPRING INSPECTION.)
4	Passenger air bag deactivation (PAD) indicator light bulb (See PASSENGER AIR BAG DEACTIVATION (PAD) INDICATOR LIGHT BULB REMOVAL/ INSTALLATION.)
5	SAS control module (See SAS CONTROL MODULE REMOVAL/ INSTALLATION.) (See SAS CONTROL MODULE CONFIGURATION.)
6	Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
7	Side air bag sensor No.2 (See SIDE AIR BAG SENSOR NO. 2 REMOVAL/ INSTALLATION.)
8	Side air bag sensor No.1 (See SIDE AIR BAG SENSOR NO. 1 REMOVAL/ INSTALLATION.)
9	Pressure sensor (See PRESSURE SENSOR REMOVAL/ INSTALLATION.)
10	Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/ INSTALLATION.)
11	Pre-tensioner seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
12	Side air bag module (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
13	Seat track position sensor (See SEAT TRACK POSITION SENSOR REMOVAL/ INSTALLATION.)
14	Seat weight sensor control module (See SEAT WEIGHT SENSOR CONTROL MODULE REMOVAL/ INSTALLATION.)

15 Seat weight sensor

(See [SEAT WEIGHT SENSOR CALIBRATION.](#))

(See [SEAT WEIGHT SENSOR INSPECTION.](#))

[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)