



2012 - Mazda6 - Restraints

PRESSURE SENSOR REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the bolts.

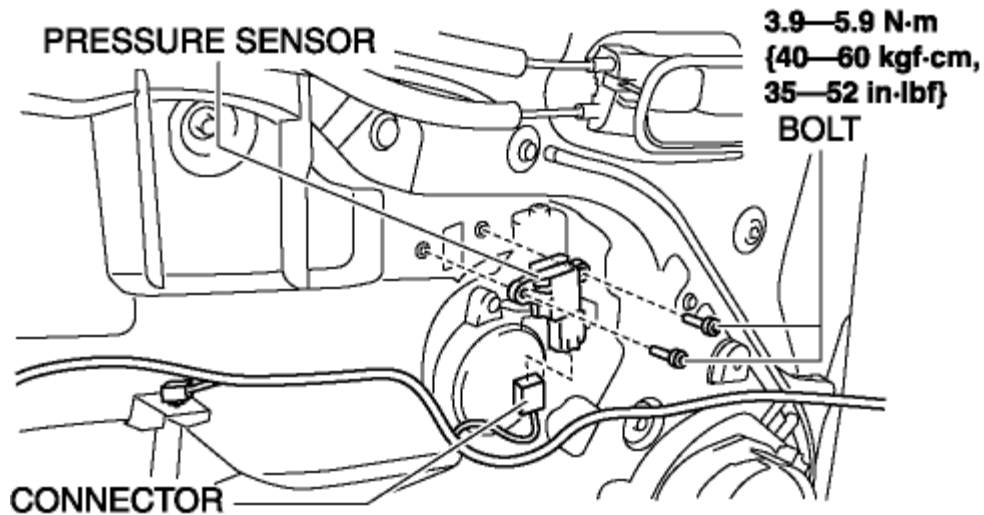

6. Remove the pressure sensor.
7. Disconnect the connector from the pressure sensor by pressing the connector tab and pulling out the lock lever in the direction of the arrow.

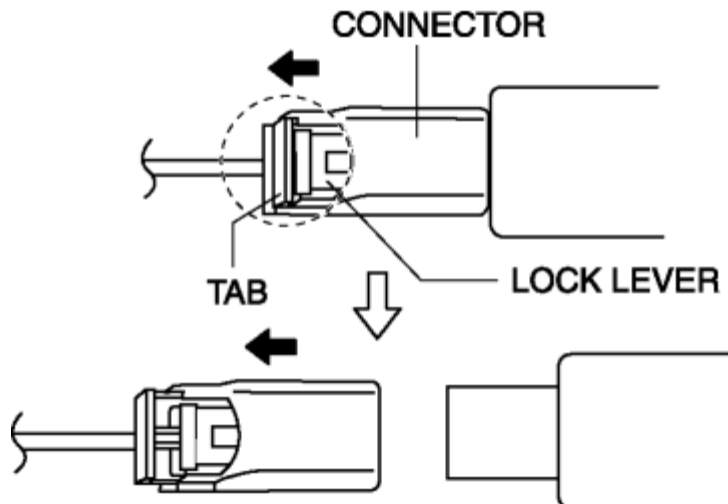

- When connecting the pressure sensor connector, insert the lock lever (connector disconnection prevention lever) completely.

8. Install in the reverse order of removal.
9. Switch the ignition to ON.
10. Verify that the air bag system warning light illuminates for approx. 6 s and goes out.
 - If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system. (See [FLOWCHART](#).)

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Restraints

PRESSURE SENSOR REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the bolts.

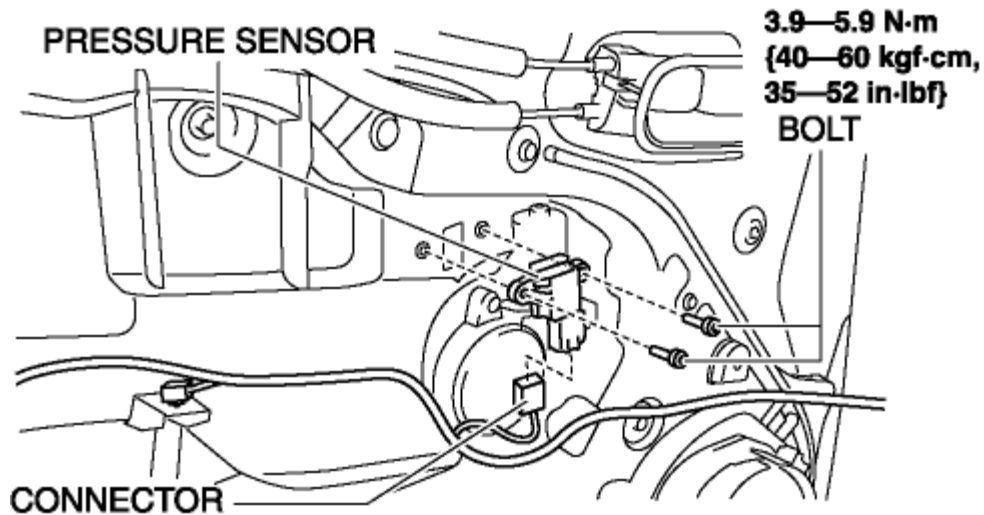

6. Remove the pressure sensor.
7. Disconnect the connector from the pressure sensor by pressing the connector tab and pulling out the lock lever in the direction of the arrow.

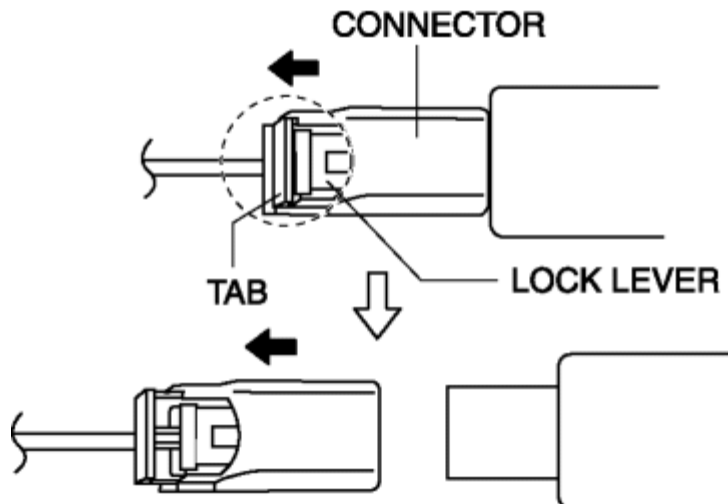

- When connecting the pressure sensor connector, insert the lock lever (connector disconnection prevention lever) completely.

8. Install in the reverse order of removal.
9. Switch the ignition to ON.
10. Verify that the air bag system warning light illuminates for approx. 6 s and goes out.
 - If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system. (See [FLOWCHART](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.