


2012 - Mazda6 - Restraints

FRONT BUCKLE REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable.
3. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
4. Remove the front buckle connector.
5. Remove the bolt.

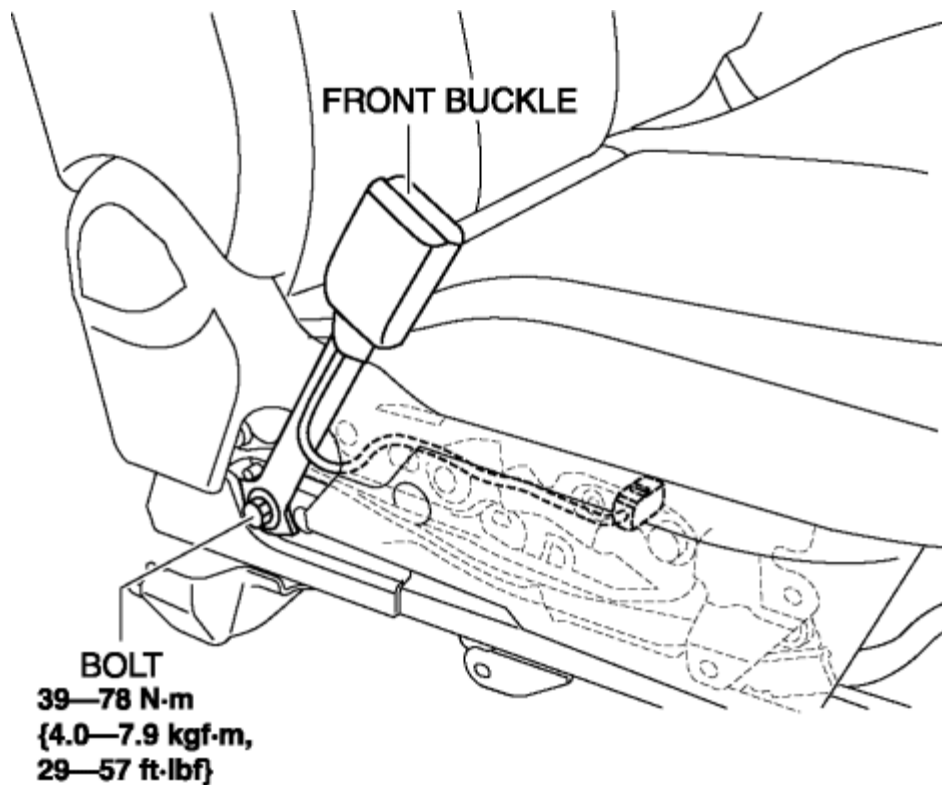


6. Remove the front buckle.
7. Install in the reverse order of removal.

2012 - Mazda6 - Restraints

FRONT BUCKLE REMOVAL/ INSTALLATION

1. Switch the ignition to off.
2. Disconnect the negative battery cable.
3. Remove the front seat. (See [FRONT SEAT REMOVAL/ INSTALLATION](#).)
4. Remove the front buckle connector.
5. Remove the bolt.

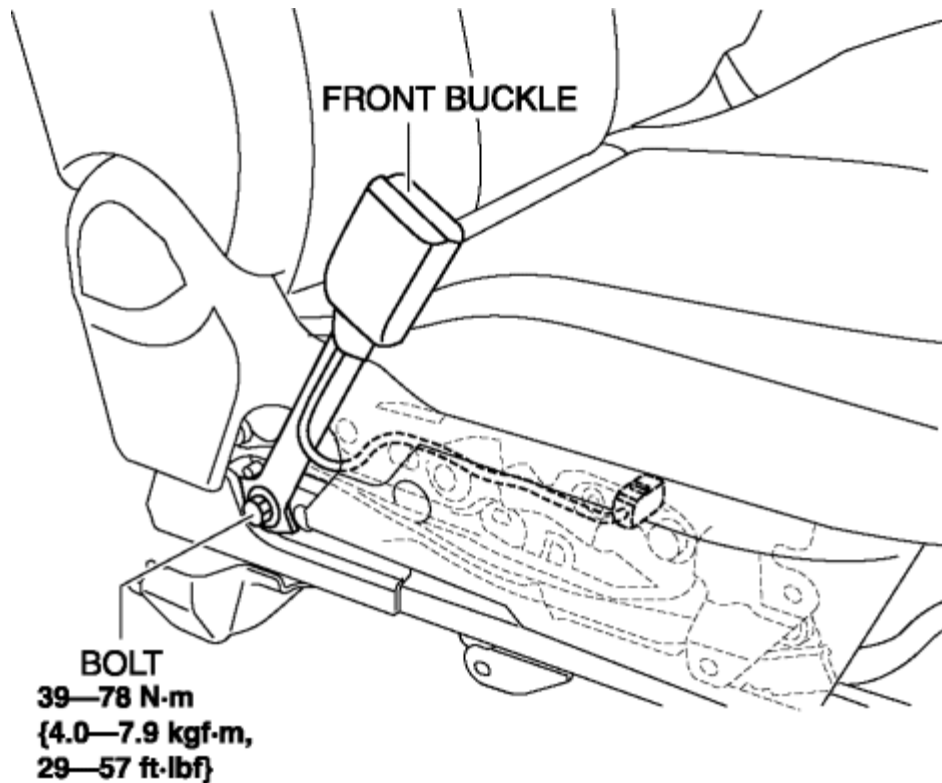

6. Remove the front buckle.
7. Install in the reverse order of removal.