


2012 - Mazda6 - Restraints

REAR BUCKLE REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the bolt.

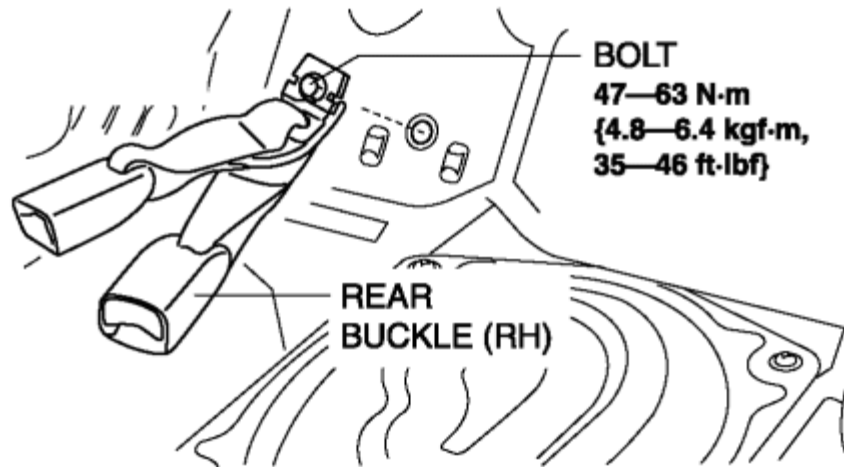


3. Remove the rear buckle (RH).
4. Remove the rear buckle (LH). (See [REAR CENTER SEAT BELT REMOVAL/ INSTALLATION](#).)
5. Install in the reverse order of removal.

2012 - Mazda6 - Restraints

REAR BUCKLE REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the bolt.

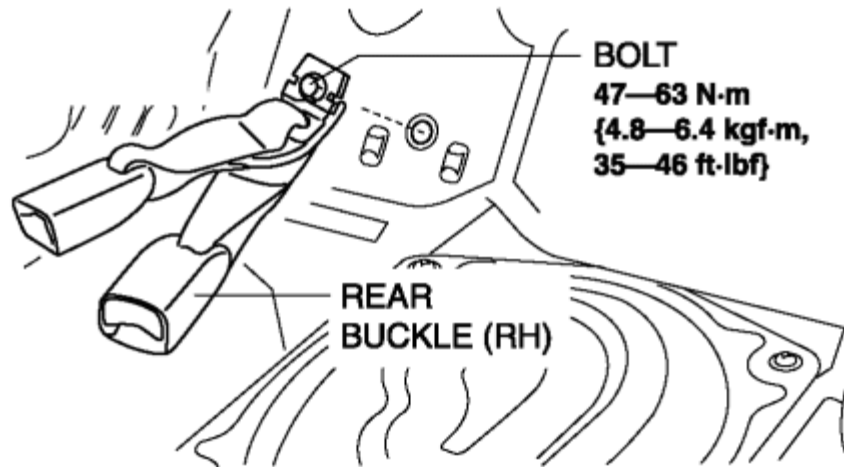

3. Remove the rear buckle (RH).
4. Remove the rear buckle (LH). (See [REAR CENTER SEAT BELT REMOVAL/ INSTALLATION](#).)
5. Install in the reverse order of removal.