



2012 - Mazda6 - Restraints

REAR SEAT BELT REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION](#).)
 - d. Tire house trim
2. Remove the rear seat belt lower anchor installation bolt.

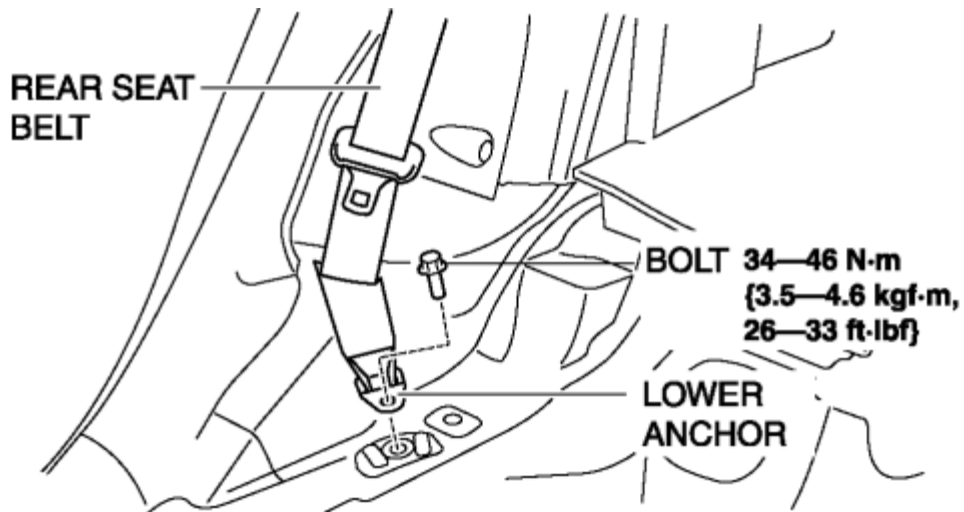

3. Remove the C-pillar trim. (See [C-PILLAR TRIM REMOVAL/ INSTALLATION](#).)
4. Remove the rear package trim. (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the bolt.

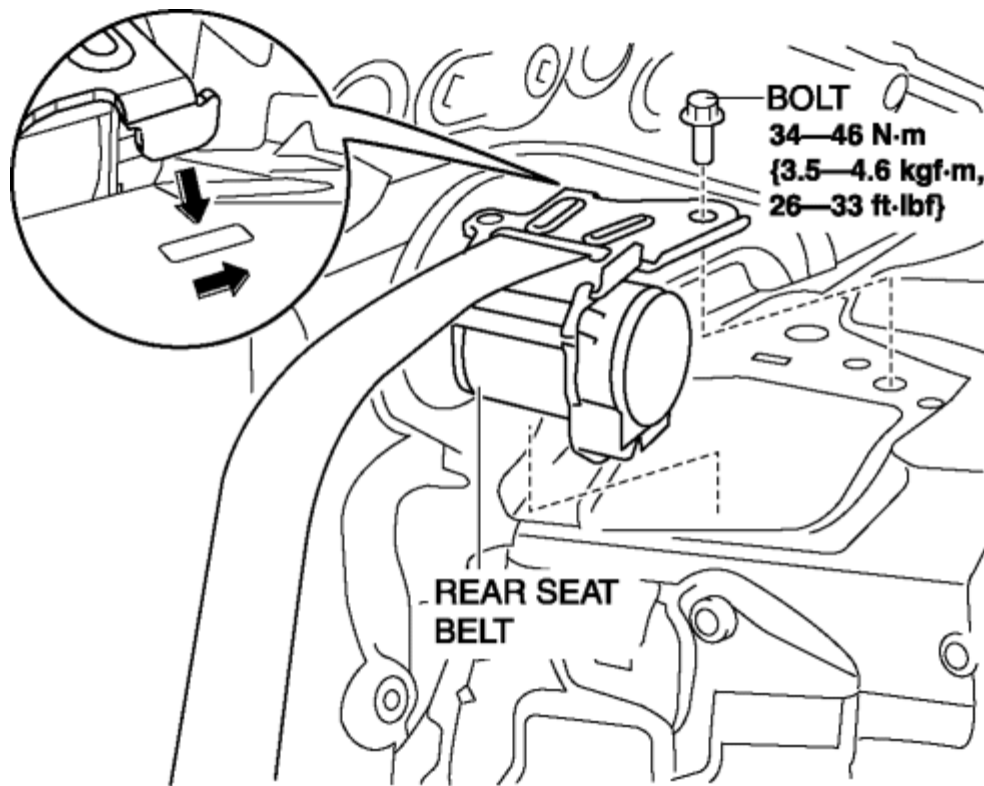

6. Remove the rear seat belt.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Restraints

REAR SEAT BELT REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION](#).)
 - d. Tire house trim
2. Remove the rear seat belt lower anchor installation bolt.

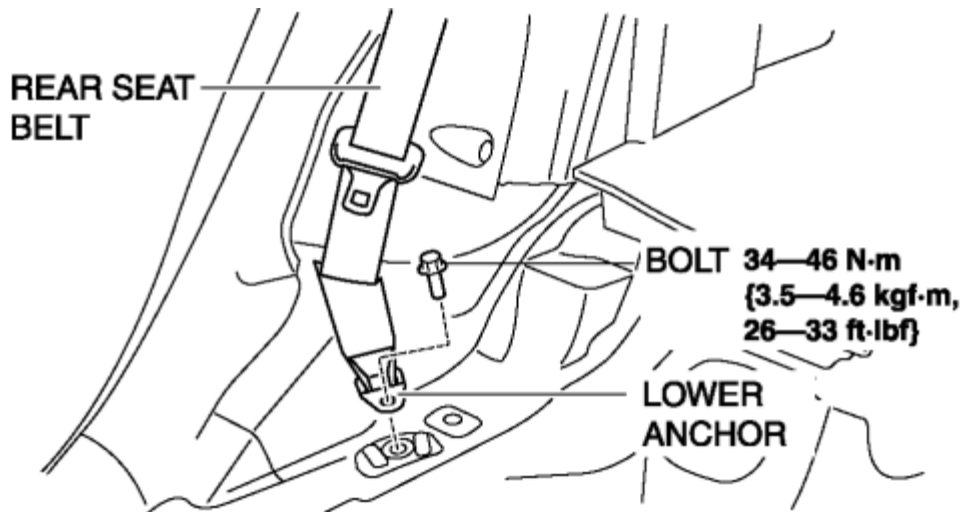

3. Remove the C-pillar trim. (See [C-PILLAR TRIM REMOVAL/ INSTALLATION](#).)
4. Remove the rear package trim. (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION](#).)
5. Remove the bolt.

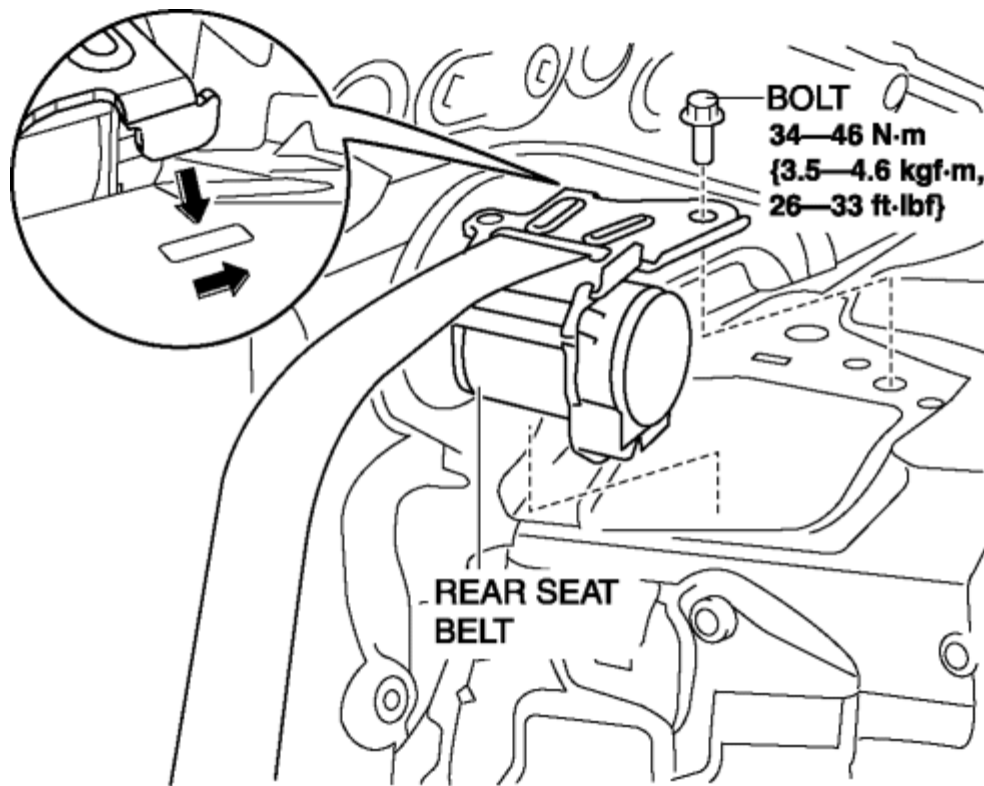

6. Remove the rear seat belt.

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.