

2012 - Mazda6 - Restraints

REAR CENTER SEAT BELT REMOVAL/ INSTALLATION


CAUTION:

- The ELR (emergency locking retractor) has a spring that will unwind if the retractor cover is removed. The spring cannot be rewound by hand. If this occurs, the ELR will not work properly. Therefore, do not disassemble the retractor.

1. Remove the following parts:


- a. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
- b. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- c. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
- d. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))

2. Remove in the bolt A.

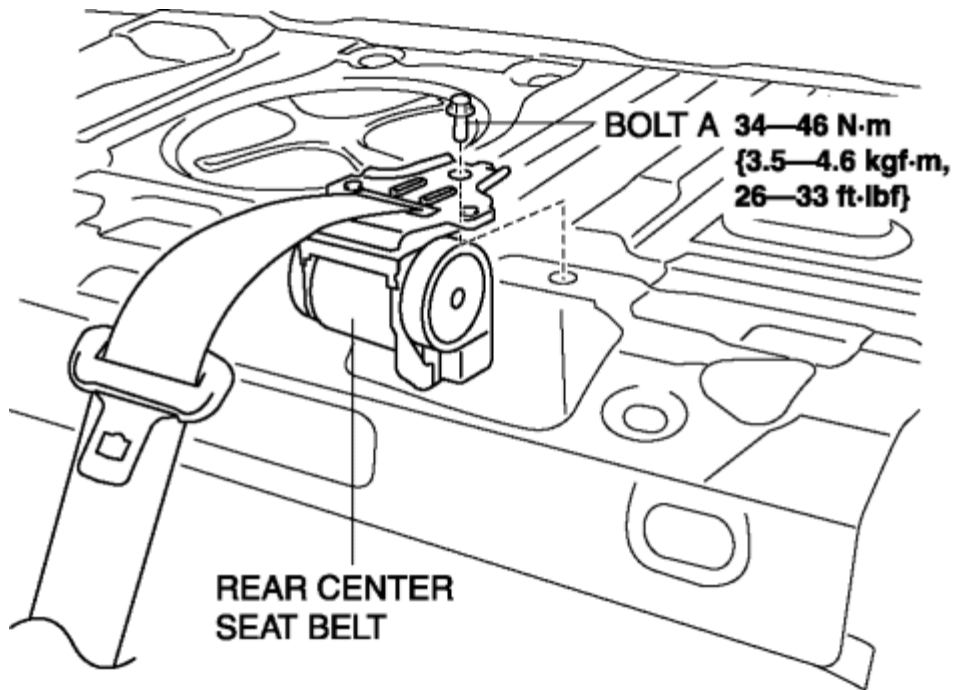

3. Remove in the rear center seat belt.

4. Remove in the bolt B.

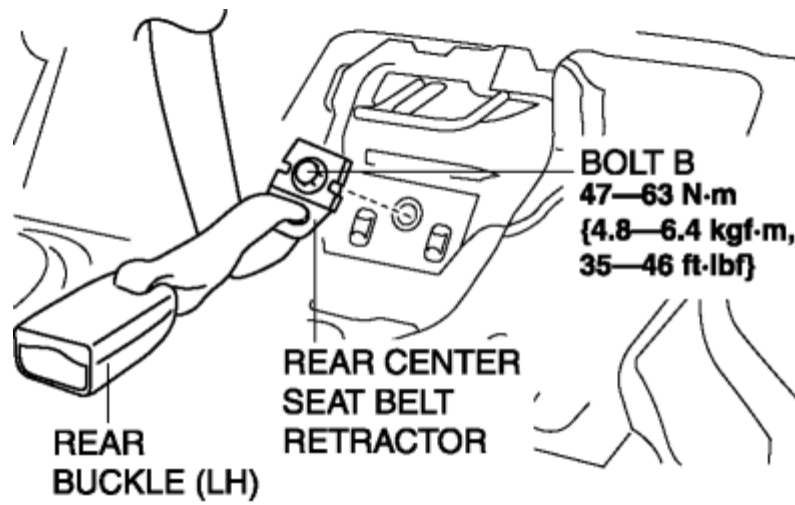

5. Remove in the rear center seat belt retractor and rear buckle (LH).
6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Restraints

REAR CENTER SEAT BELT REMOVAL/ INSTALLATION


CAUTION:

- The ELR (emergency locking retractor) has a spring that will unwind if the retractor cover is removed. The spring cannot be rewound by hand. If this occurs, the ELR will not work properly. Therefore, do not disassemble the retractor.

1. Remove the following parts:


- a. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
- b. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
- c. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
- d. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))

2. Remove in the bolt A.

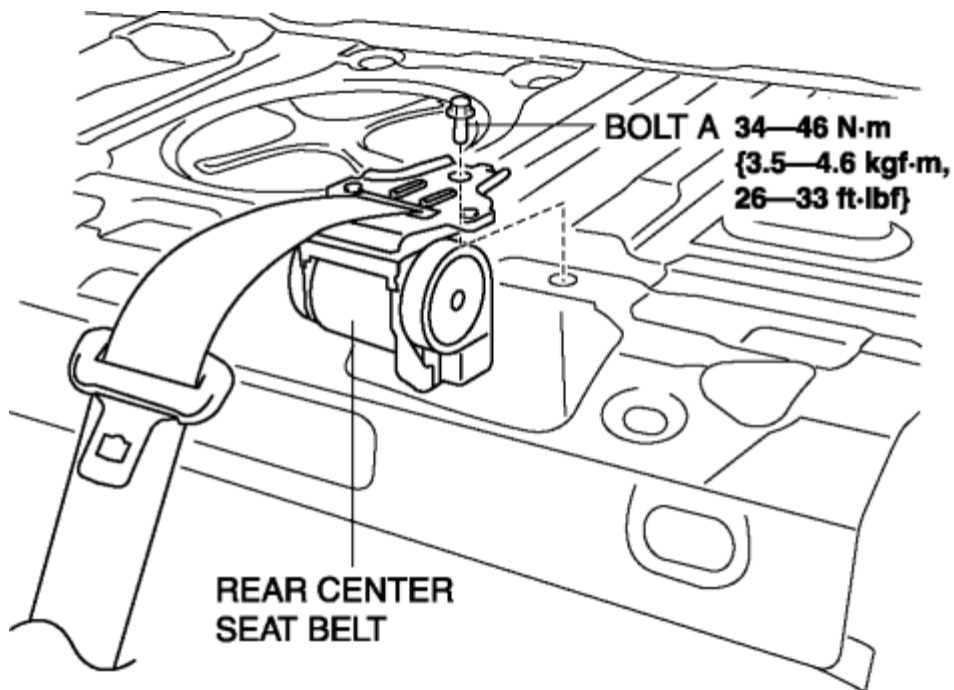

3. Remove in the rear center seat belt.

4. Remove in the bolt B.

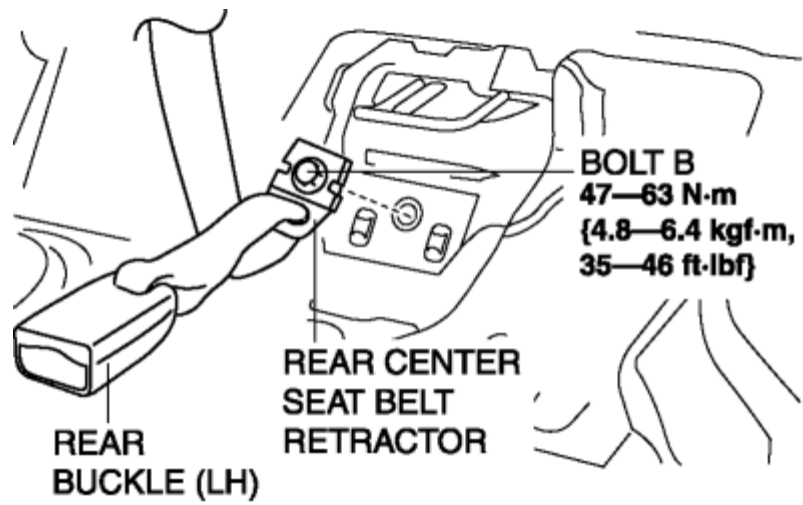

5. Remove in the rear center seat belt retractor and rear buckle (LH).
6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.