

2012 - Mazda6 - Restraints

ADJUSTER ANCHOR REMOVAL/ INSTALLATION


WARNING:

- The side air bag sensor is attached to the lower part of the B-pillar. When working around the B-pillar, disconnect the negative battery cable or work carefully, avoiding excessive impact to the lower part of the B-pillar.

1. Remove the following parts:

- a. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
- b. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
- c. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#).)
- d. Front seat belt upper anchor installation bolt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION](#).)
- e. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION](#).)

2. Remove bolts.

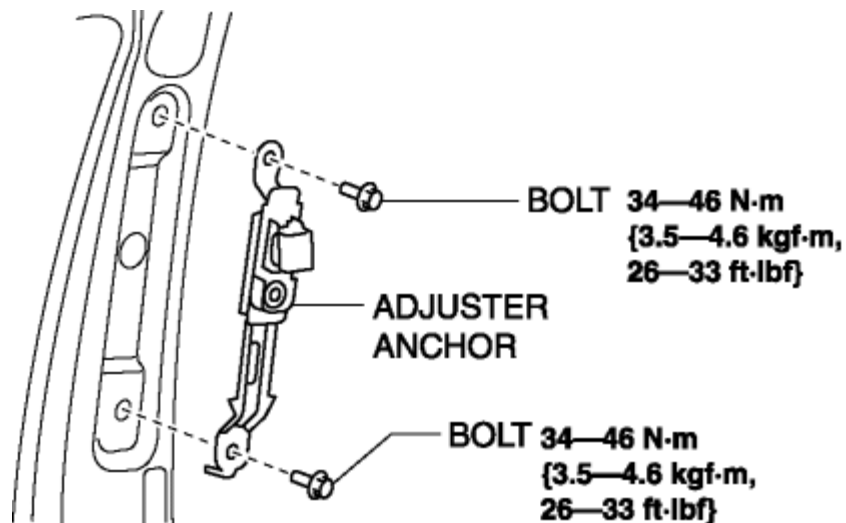

3. Remove the adjuster anchor.

4. Install in the reverse order of removal.

2012 - Mazda6 - Restraints

ADJUSTER ANCHOR REMOVAL/ INSTALLATION


WARNING:

- The side air bag sensor is attached to the lower part of the B-pillar. When working around the B-pillar, disconnect the negative battery cable or work carefully, avoiding excessive impact to the lower part of the B-pillar.

1. Remove the following parts:

- a. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
- b. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#).)
- c. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#).)
- d. Front seat belt upper anchor installation bolt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION](#).)
- e. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION](#).)

2. Remove bolts.

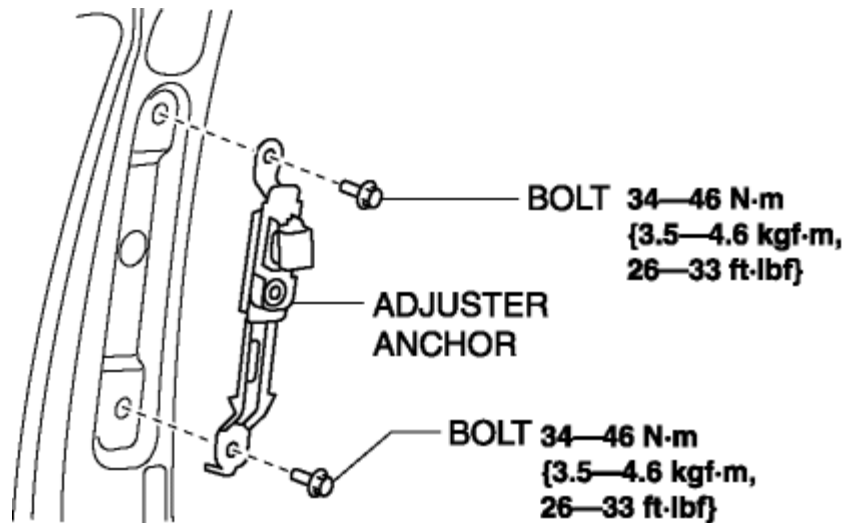

3. Remove the adjuster anchor.

4. Install in the reverse order of removal.