


2012 - Mazda6 - Restraints

BUCKLE SWITCH INSPECTION

Driver Side

- 1. Switch the ignition to off.
- 2. Disconnect the negative battery cable.
- 3. Remove the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.)
- 4. Remove the front buckle. (See FRONT BUCKLE REMOVAL/ INSTALLATION.)
- 5. Inspect for continuity between the buckle switch terminals using a tester.

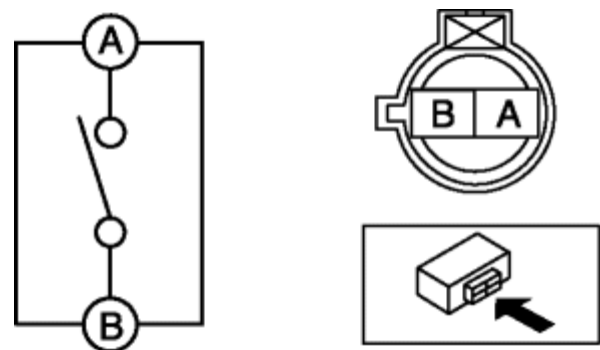



- If not as indicated in the table, replace the front buckle.

○ — ○ : Continuity

Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○ —	— ○

Passenger Side

- 1. Switch the ignition to off.
- 2. Disconnect the negative battery cable.
- 3. Remove the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.)
- 4. Remove the front buckle. (See FRONT BUCKLE REMOVAL/ INSTALLATION.)
- 5. Inspect for continuity between the buckle switch terminals using a tester.

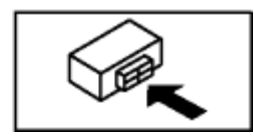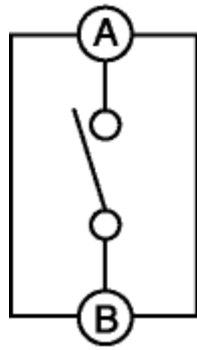

- If not as indicated in the table, replace the front buckle.

○ — ○ : Continuity


Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○ —	— ○

2012 - Mazda6 - Restraints

BUCKLE SWITCH INSPECTION

Driver Side

- 1. Switch the ignition to off.
- 2. Disconnect the negative battery cable.
- 3. Remove the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.)
- 4. Remove the front buckle. (See FRONT BUCKLE REMOVAL/ INSTALLATION.)
- 5. Inspect for continuity between the buckle switch terminals using a tester.

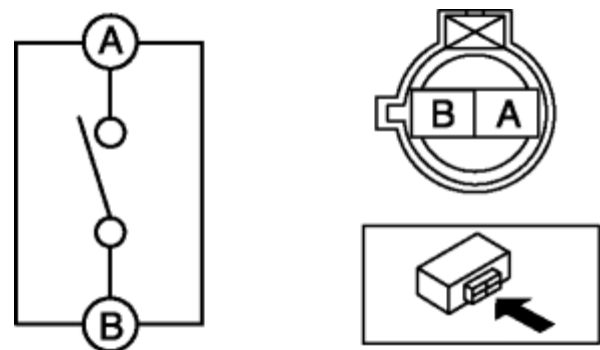



- If not as indicated in the table, replace the front buckle.

○ — ○ : Continuity

Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○ —	— ○

Passenger Side

- 1. Switch the ignition to off.
- 2. Disconnect the negative battery cable.
- 3. Remove the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.)
- 4. Remove the front buckle. (See FRONT BUCKLE REMOVAL/ INSTALLATION.)
- 5. Inspect for continuity between the buckle switch terminals using a tester.

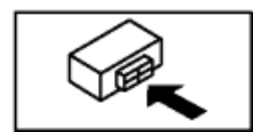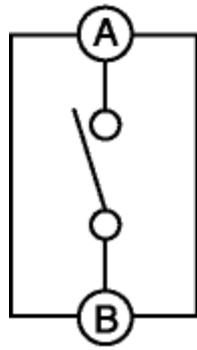

- If not as indicated in the table, replace the front buckle.

○ — ○ : Continuity

Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○ —	— ○