


2012 - Mazda6 - Restraints

SEAT BELT LOCATION INDEX

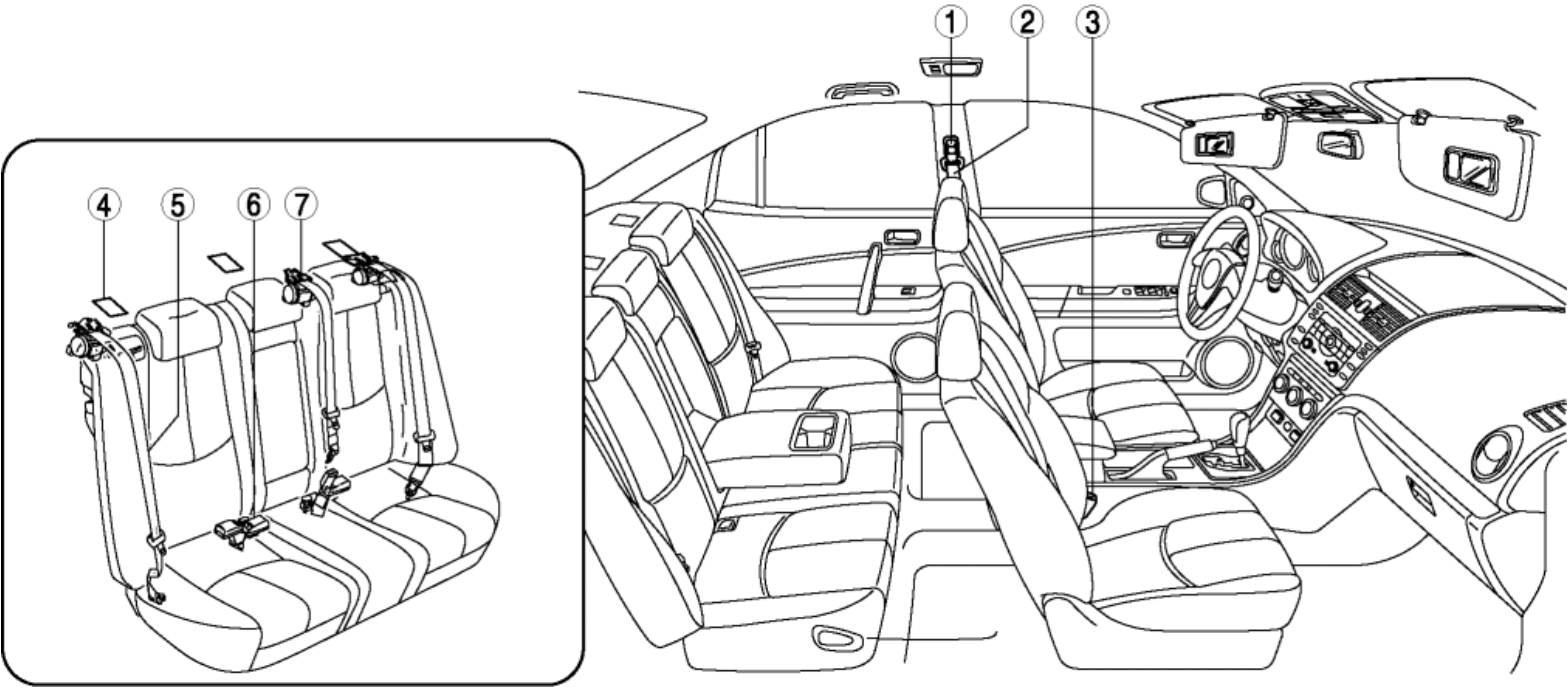

1	Adjuster anchor (See ADJUSTER ANCHOR REMOVAL/ INSTALLATION.)
2	Front seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See SEAT BELT INSPECTION.)
3	Front buckle (See FRONT BUCKLE REMOVAL/ INSTALLATION.) (See BUCKLE SWITCH INSPECTION.)
4	Child-restraint seat anchor (See CHILD-RESTRAINT SEAT ANCHOR REMOVAL/ INSTALLATION.)
5	Rear seat belt (See REAR SEAT BELT REMOVAL/ INSTALLATION.) (See SEAT BELT INSPECTION.)
6	Rear buckle (See REAR BUCKLE REMOVAL/ INSTALLATION.) (See BUCKLE SWITCH INSPECTION.)
7	Rear center seat belt

(See [REAR CENTER SEAT BELT REMOVAL/ INSTALLATION.](#))


[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Restraints

SEAT BELT LOCATION INDEX

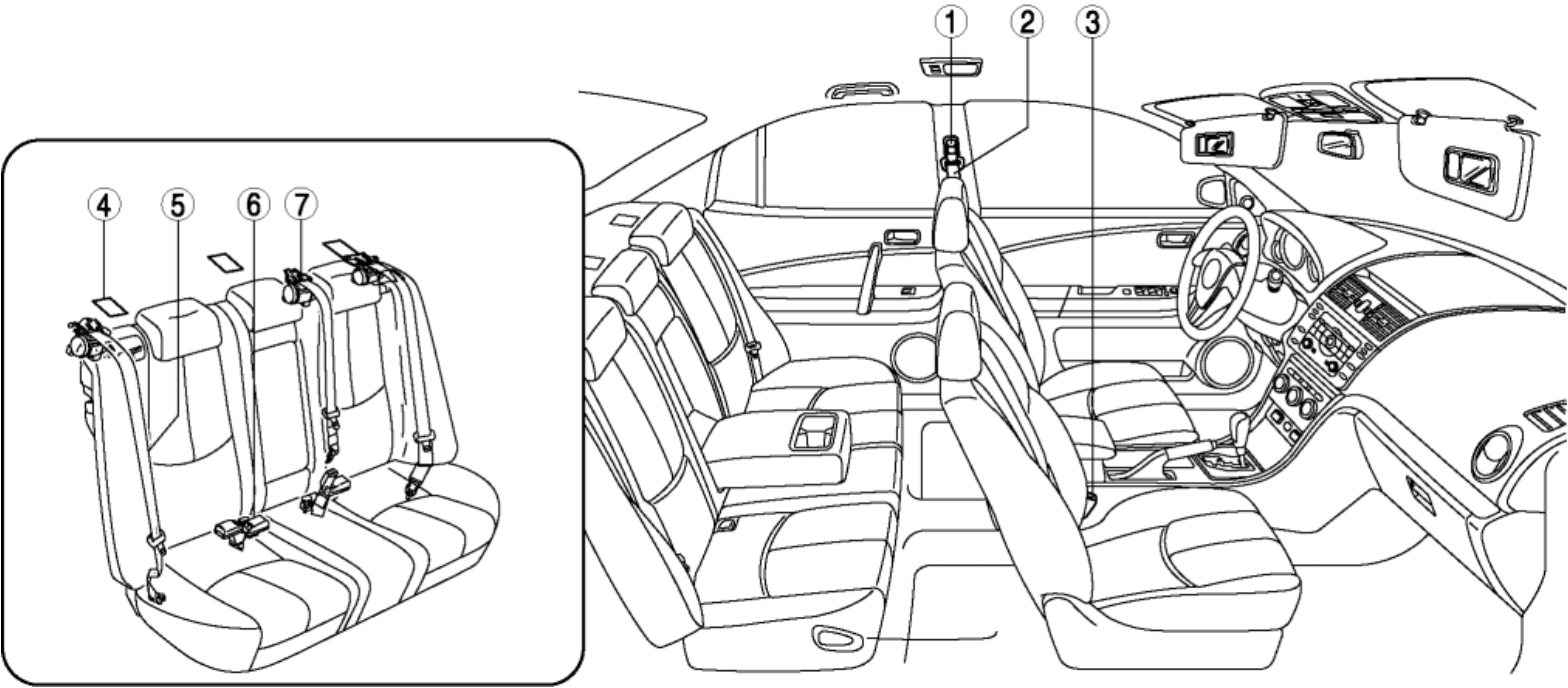

1	Adjuster anchor (See ADJUSTER ANCHOR REMOVAL/ INSTALLATION.)
2	Front seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See SEAT BELT INSPECTION.)
3	Front buckle (See FRONT BUCKLE REMOVAL/ INSTALLATION.) (See BUCKLE SWITCH INSPECTION.)
4	Child-restraint seat anchor (See CHILD-RESTRAINT SEAT ANCHOR REMOVAL/ INSTALLATION.)
5	Rear seat belt (See REAR SEAT BELT REMOVAL/ INSTALLATION.) (See SEAT BELT INSPECTION.)
6	Rear buckle (See REAR BUCKLE REMOVAL/ INSTALLATION.) (See BUCKLE SWITCH INSPECTION.)
7	Rear center seat belt

(See [REAR CENTER SEAT BELT REMOVAL/ INSTALLATION.](#))

[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)