

2012 - Mazda6 - Body and Accessories

SYMPTOM TROUBLESHOOTING CHART [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]

No.	TROUBLESHOOTING ITEM
1	No.1 DOOR GLASS DOES NOT OPERATE EVEN THOUGH VARIOUS OPERATIONS ARE PERFORMED [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
2	No.2 DOOR GLASS DOES NOT OPERATE USING THE KEYLESS TRANSMITTER [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
3	No.3 DOOR GLASS DOES NOT OPERATE USING THE REQUEST SWITCH [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
4	No.4 PASSENGER DOOR GLASS DOES NOT OPERATE [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
5	No.5 DOOR GLASS STOPS BEFORE FULLY OPENING/ CLOSING [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
6	No.6 DRIVER'S AND PASSENGER'S DOOR GLASSES OPERATE ACCIDENTALLY [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
7	No.7 PASSENGER'S DOOR GLASS OPERATES ACCIDENTALLY [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]

2012 - Mazda6 - Body and Accessories

SYMPTOM TROUBLESHOOTING CHART [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]

No.	TROUBLESHOOTING ITEM
1	No.1 DOOR GLASS DOES NOT OPERATE EVEN THOUGH VARIOUS OPERATIONS ARE PERFORMED [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
2	No.2 DOOR GLASS DOES NOT OPERATE USING THE KEYLESS TRANSMITTER [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
3	No.3 DOOR GLASS DOES NOT OPERATE USING THE REQUEST SWITCH [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
4	No.4 PASSENGER DOOR GLASS DOES NOT OPERATE [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
5	No.5 DOOR GLASS STOPS BEFORE FULLY OPENING/ CLOSING [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
6	No.6 DRIVER'S AND PASSENGER'S DOOR GLASSES OPERATE ACCIDENTALLY [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]
7	No.7 PASSENGER'S DOOR GLASS OPERATES ACCIDENTALLY [POWER WINDOW SYSTEM (EXTERIOR OPEN FUNCTION)]