

2012 - Mazda6 - Body and Accessories

SYMPTOM TROUBLESHOOTING CHART [AUTO DOOR LOCK SYSTEM]

No.	Troubleshooting item	Description	Page
1	Auto door lock function does not operate	• All the doors do not lock automatically when the vehicle speed is about 20 km/ h (12mph) or more. • When the ignition is switched ON and the shift lever is shifted from park (P) to any other gear position, all the doors do not lock automatically.	(See No.1 AUTO DOOR LOCK FUNCTION DOES NOT OPERATE [AUTO DOOR LOCK SYSTEM] .)
2	Auto door unlock function does not operate	• After auto door lock control, all the doors do not unlock when the ignition is switched from ON to ACC or Off. • After auto door lock control, when the shift lever is shifted to park (P) while the ignition is switched ON, all the doors do not unlock automatically.	(See No.2 AUTO DOOR UNLOCK FUNCTION DOES NOT OPERATE [AUTO DOOR LOCK SYSTEM] .)

2012 - Mazda6 - Body and Accessories

SYMPTOM TROUBLESHOOTING CHART [AUTO DOOR LOCK SYSTEM]

No.	Troubleshooting item	Description	Page
1	Auto door lock function does not operate	• All the doors do not lock automatically when the vehicle speed is about 20 km/ h (12mph) or more. • When the ignition is switched ON and the shift lever is shifted from park (P) to any other gear position, all the doors do not lock automatically.	(See No.1 AUTO DOOR LOCK FUNCTION DOES NOT OPERATE [AUTO DOOR LOCK SYSTEM] .)
2	Auto door unlock function does not operate	• After auto door lock control, all the doors do not unlock when the ignition is switched from ON to ACC or Off. • After auto door lock control, when the shift lever is shifted to park (P) while the ignition is switched ON, all the doors do not unlock automatically.	(See No.2 AUTO DOOR UNLOCK FUNCTION DOES NOT OPERATE [AUTO DOOR LOCK SYSTEM] .)