


2012 - Mazda6 - Body and Accessories

BODY PANELS LOCATION INDEX

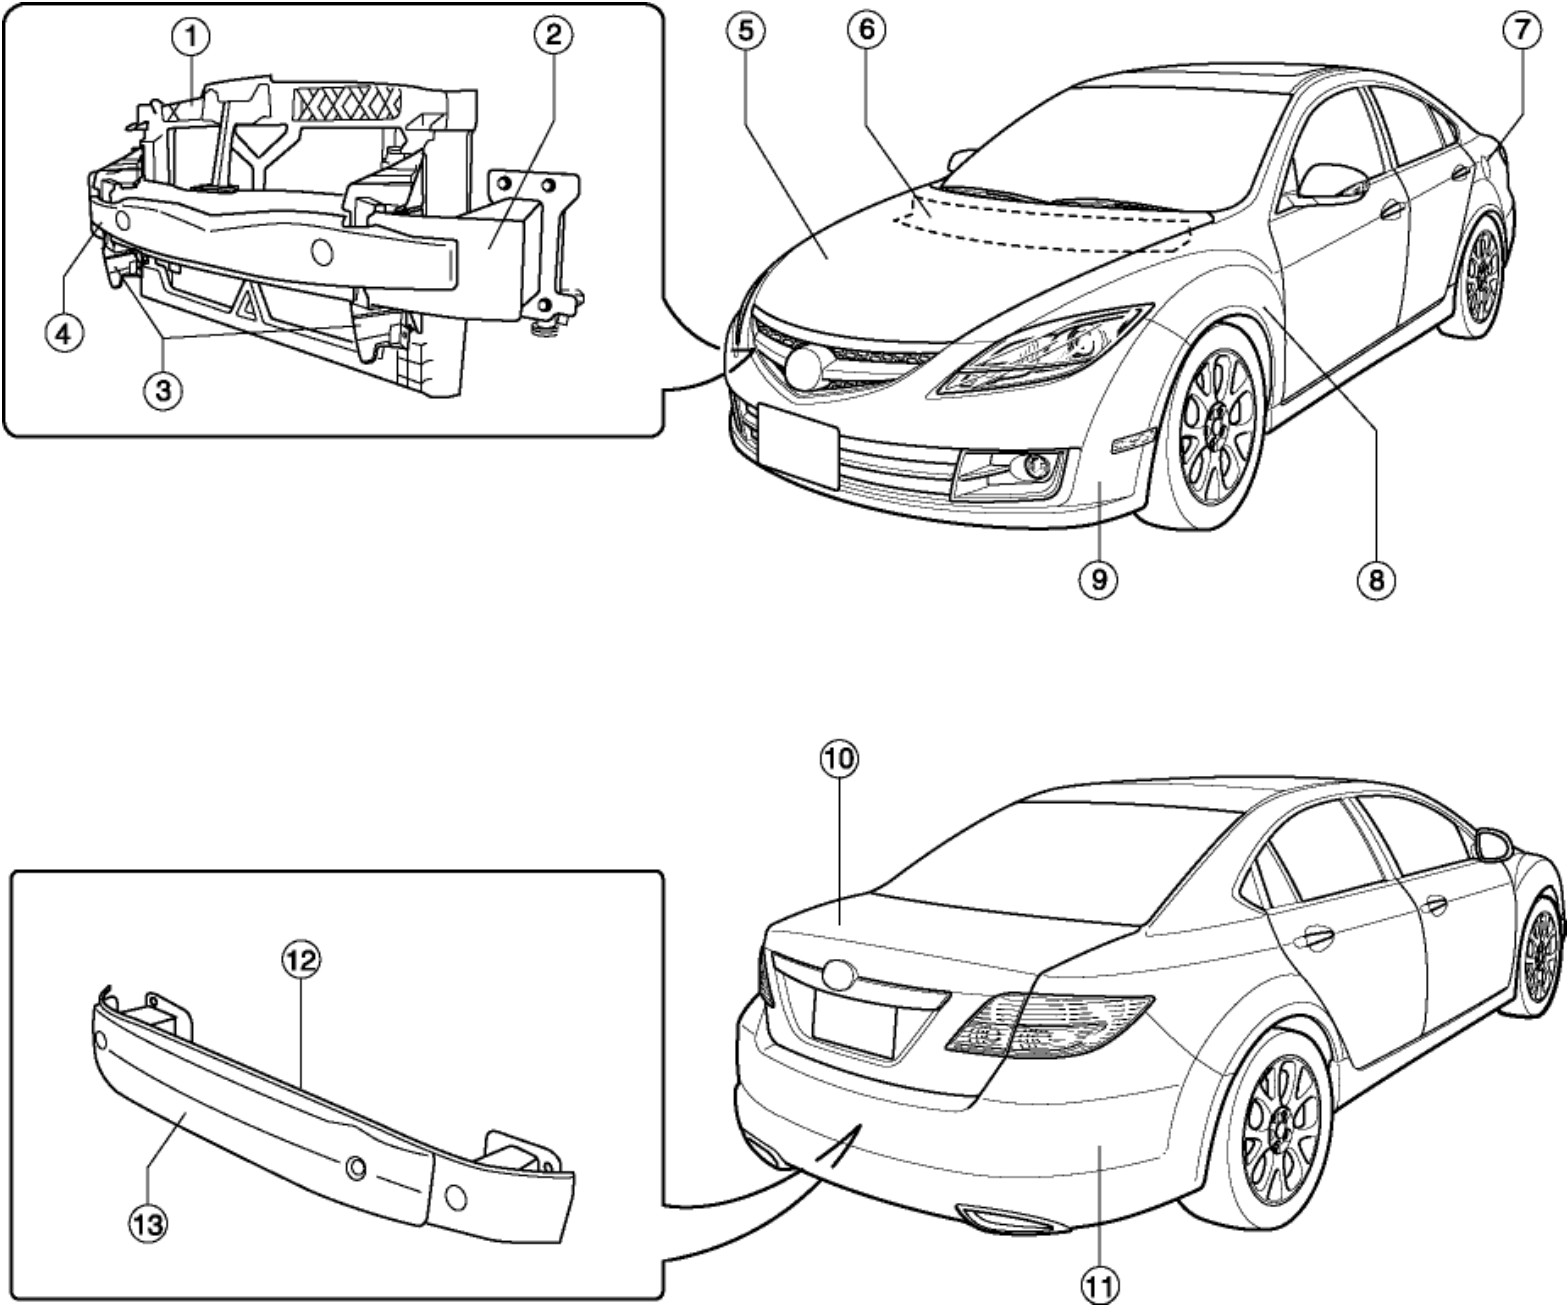


|   |                                                                                                        |
|---|--------------------------------------------------------------------------------------------------------|
| 1 | Shroud panel<br>(See <a href="#">SHROUD PANEL REMOVAL/ INSTALLATION.</a> )                             |
| 2 | Front bumper reinforcement<br>(See <a href="#">FRONT BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.</a> ) |
|   |                                                                                                        |

|    |                                                                                                                                                              |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3  | Seal plate<br>(See <a href="#">SEAL PLATE REMOVAL/ INSTALLATION.</a> )                                                                                       |
| 4  | Front energy-absorbing form<br>(See <a href="#">ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION.</a> )                                                           |
| 5  | Hood<br>(See <a href="#">HOOD REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">HOOD DI SASSEMBLY/ ASSEMBLY.</a> )<br>(See <a href="#">HOOD ADJUSTMENT.</a> ) |
| 6  | Cowl panel<br>(See <a href="#">COWL PANEL REMOVAL/ INSTALLATION.</a> )                                                                                       |
| 7  | Fuel-filler lid<br>(See <a href="#">FUEL-FILLER LID REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">FUEL-FILLER LID ADJUSTMENT.</a> )                       |
| 8  | Front fender panel<br>(See <a href="#">FRONT FENDER PANEL REMOVAL/ INSTALLATION.</a> )                                                                       |
| 9  | Front bumper<br>(See <a href="#">FRONT BUMPER REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">FRONT BUMPER DI SASSEMBLY/ ASSEMBLY.</a> )                    |
| 10 | Trunk lid<br>(See <a href="#">TRUNK LID REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">TRUNK LID ADJUSTMENT.</a> )                                         |
| 11 | Rear bumper<br>(See <a href="#">REAR BUMPER REMOVAL/ INSTALLATION.</a> )                                                                                     |
| 12 | Rear bumper reinforcement<br>(See <a href="#">REAR BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.</a> )                                                         |
| 13 | Rear energy-absorbing form<br>(See <a href="#">ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION.</a> )                                                            |

2012 - Mazda6 - Body and Accessories

BODY PANELS LOCATION INDEX

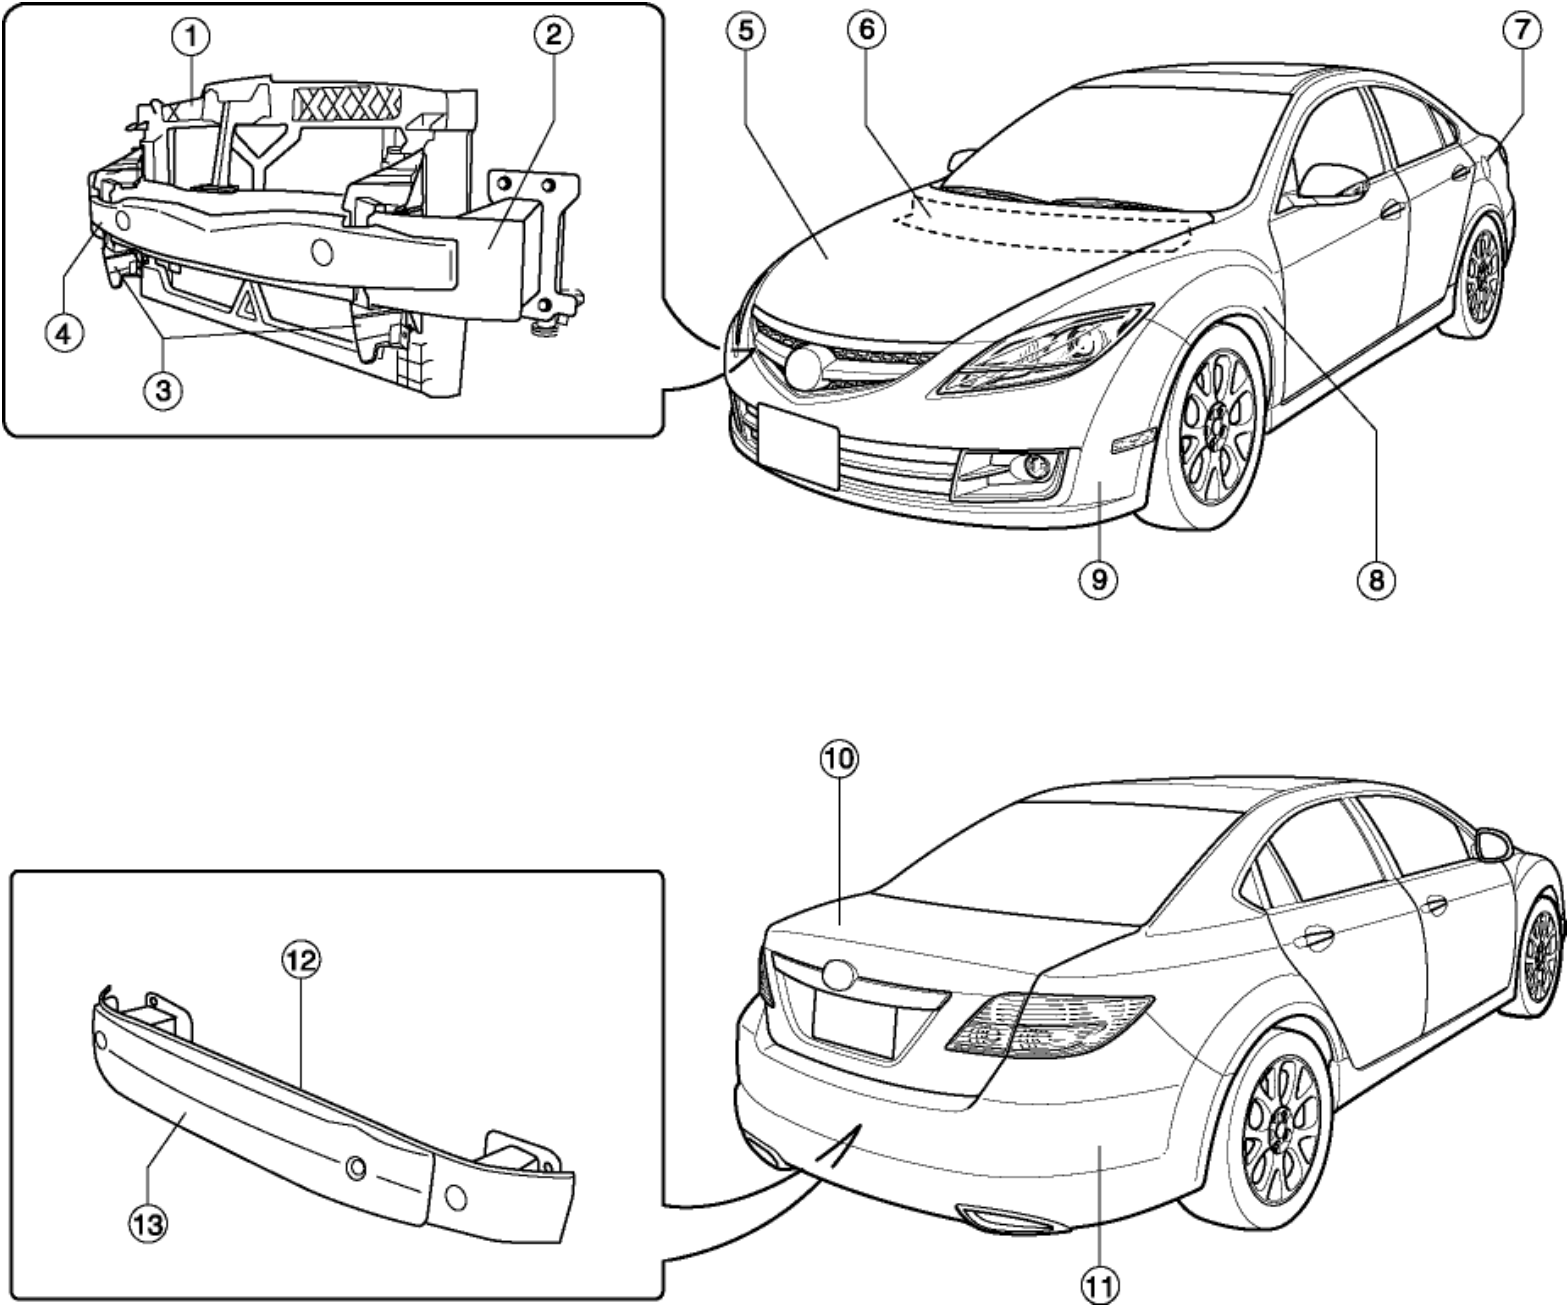

|   |                                                                                                        |
|---|--------------------------------------------------------------------------------------------------------|
| 1 | Shroud panel<br>(See <a href="#">SHROUD PANEL REMOVAL/ INSTALLATION.</a> )                             |
| 2 | Front bumper reinforcement<br>(See <a href="#">FRONT BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.</a> ) |
|   |                                                                                                        |

|    |                                                                                                                                                              |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3  | Seal plate<br>(See <a href="#">SEAL PLATE REMOVAL/ INSTALLATION.</a> )                                                                                       |
| 4  | Front energy-absorbing form<br>(See <a href="#">ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION.</a> )                                                           |
| 5  | Hood<br>(See <a href="#">HOOD REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">HOOD DI SASSEMBLY/ ASSEMBLY.</a> )<br>(See <a href="#">HOOD ADJUSTMENT.</a> ) |
| 6  | Cowl panel<br>(See <a href="#">COWL PANEL REMOVAL/ INSTALLATION.</a> )                                                                                       |
| 7  | Fuel-filler lid<br>(See <a href="#">FUEL-FILLER LID REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">FUEL-FILLER LID ADJUSTMENT.</a> )                       |
| 8  | Front fender panel<br>(See <a href="#">FRONT FENDER PANEL REMOVAL/ INSTALLATION.</a> )                                                                       |
| 9  | Front bumper<br>(See <a href="#">FRONT BUMPER REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">FRONT BUMPER DI SASSEMBLY/ ASSEMBLY.</a> )                    |
| 10 | Trunk lid<br>(See <a href="#">TRUNK LID REMOVAL/ INSTALLATION.</a> )<br>(See <a href="#">TRUNK LID ADJUSTMENT.</a> )                                         |
| 11 | Rear bumper<br>(See <a href="#">REAR BUMPER REMOVAL/ INSTALLATION.</a> )                                                                                     |
| 12 | Rear bumper reinforcement<br>(See <a href="#">REAR BUMPER REINFORCEMENT REMOVAL/ INSTALLATION.</a> )                                                         |
| 13 | Rear energy-absorbing form<br>(See <a href="#">ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION.</a> )                                                            |