


2012 - Mazda6 - Body and Accessories

FUEL-FILLER LID ADJUSTMENT

1. Measure the gap and height difference between the fuel-filler lid and the body.
2. Loosen the fuel-filler lid installation bolts and adjust the fuel-filler lid.

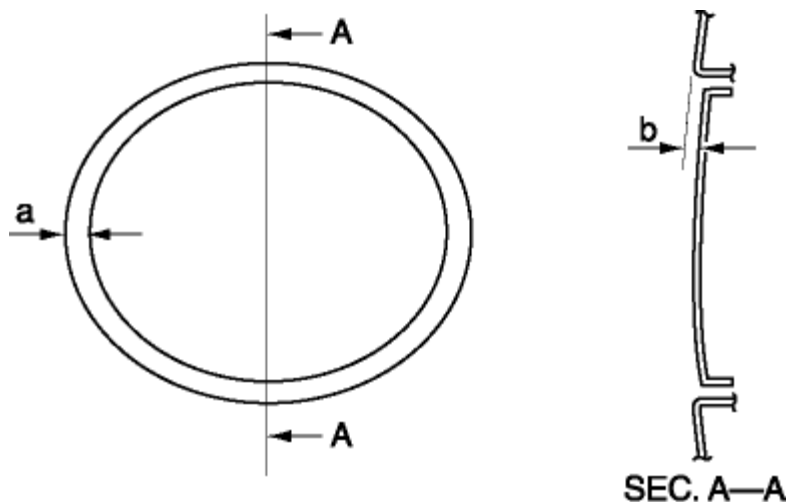

Standard clearance


- a: 1.7—3.7 mm {0.07—0.14 in}
- b: -0.5—1.5 mm {-0.01—0.05 in}

3. Tighten the bolts. (See [FUEL-FILLER LID REMOVAL/ INSTALLATION.](#))

2012 - Mazda6 - Body and Accessories

FUEL-FILLER LID ADJUSTMENT

1. Measure the gap and height difference between the fuel-filler lid and the body.
2. Loosen the fuel-filler lid installation bolts and adjust the fuel-filler lid.

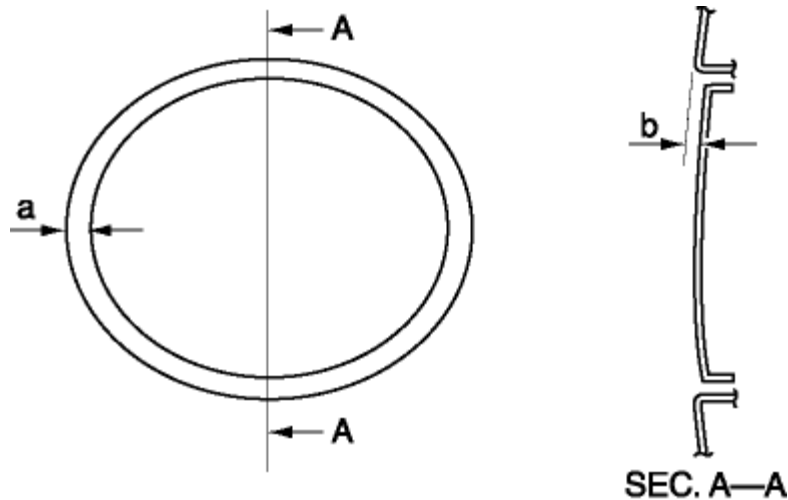

Standard clearance

- a: 1.7—3.7 mm {0.07—0.14 in}
- b: -0.5—1.5 mm {-0.01—0.05 in}

3. Tighten the bolts. (See [FUEL-FILLER LID REMOVAL/ INSTALLATION](#).)