



2012 - Mazda6 - Body and Accessories

COWL PANEL REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#))
3. Remove the front fender molding. (See [COWL GRILLE REMOVAL/ INSTALLATION](#))
4. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#))
5. Remove the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION](#))
6. Remove the washer hose grommet from the cowl panel and disconnect the front washer hose.
7. Remove the bolts, then remove the stay.

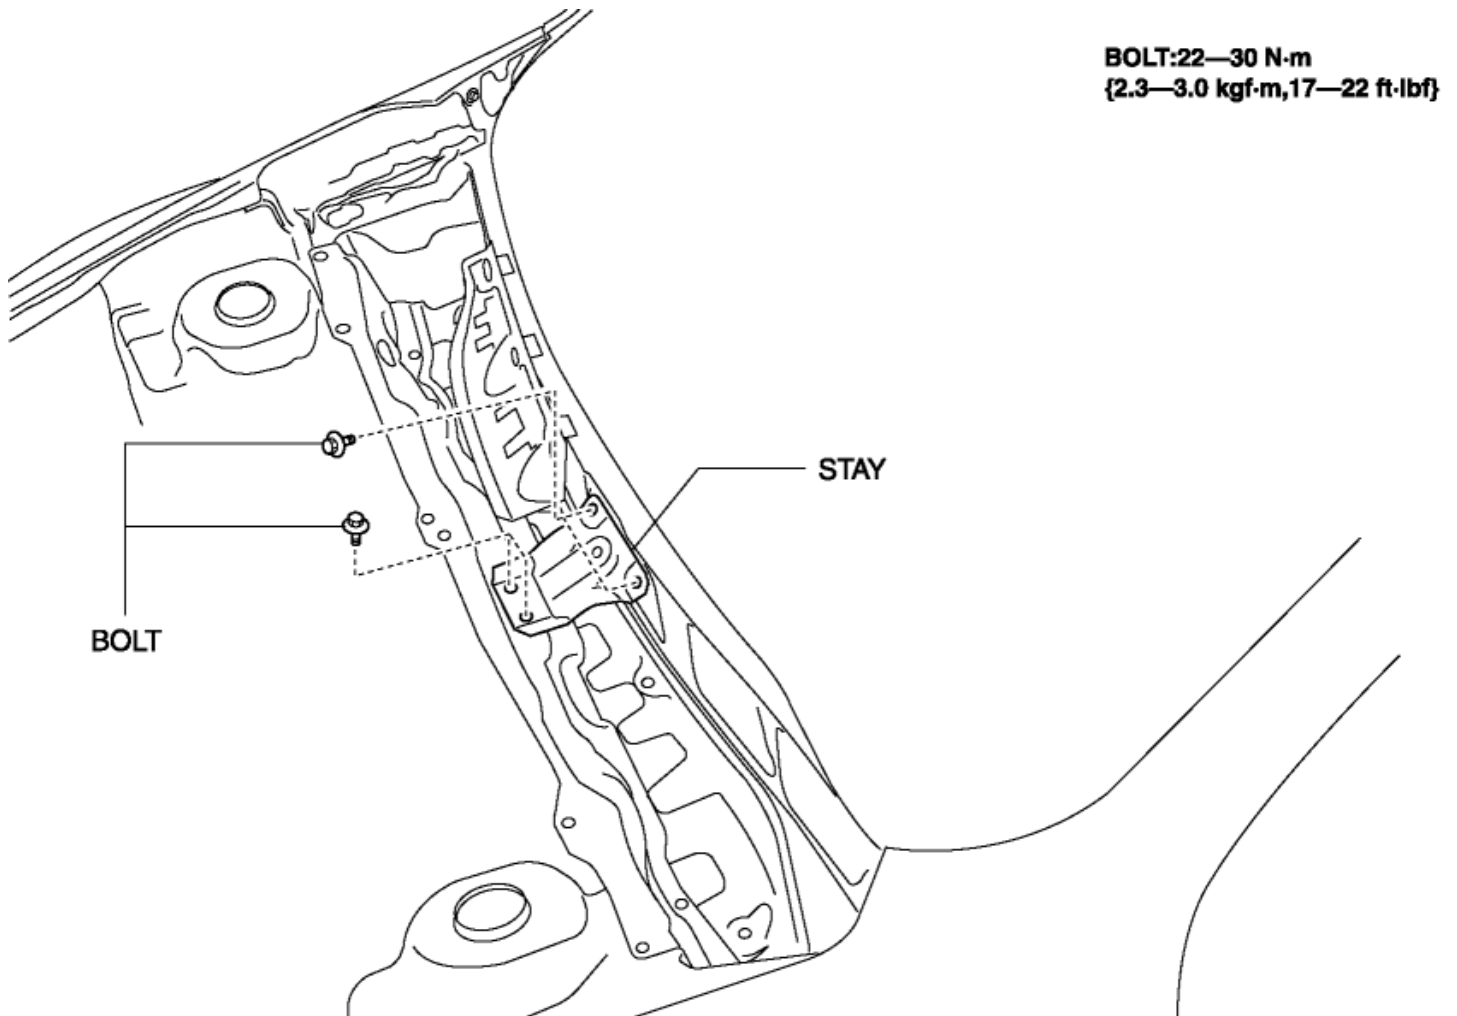

8. Remove bolts.

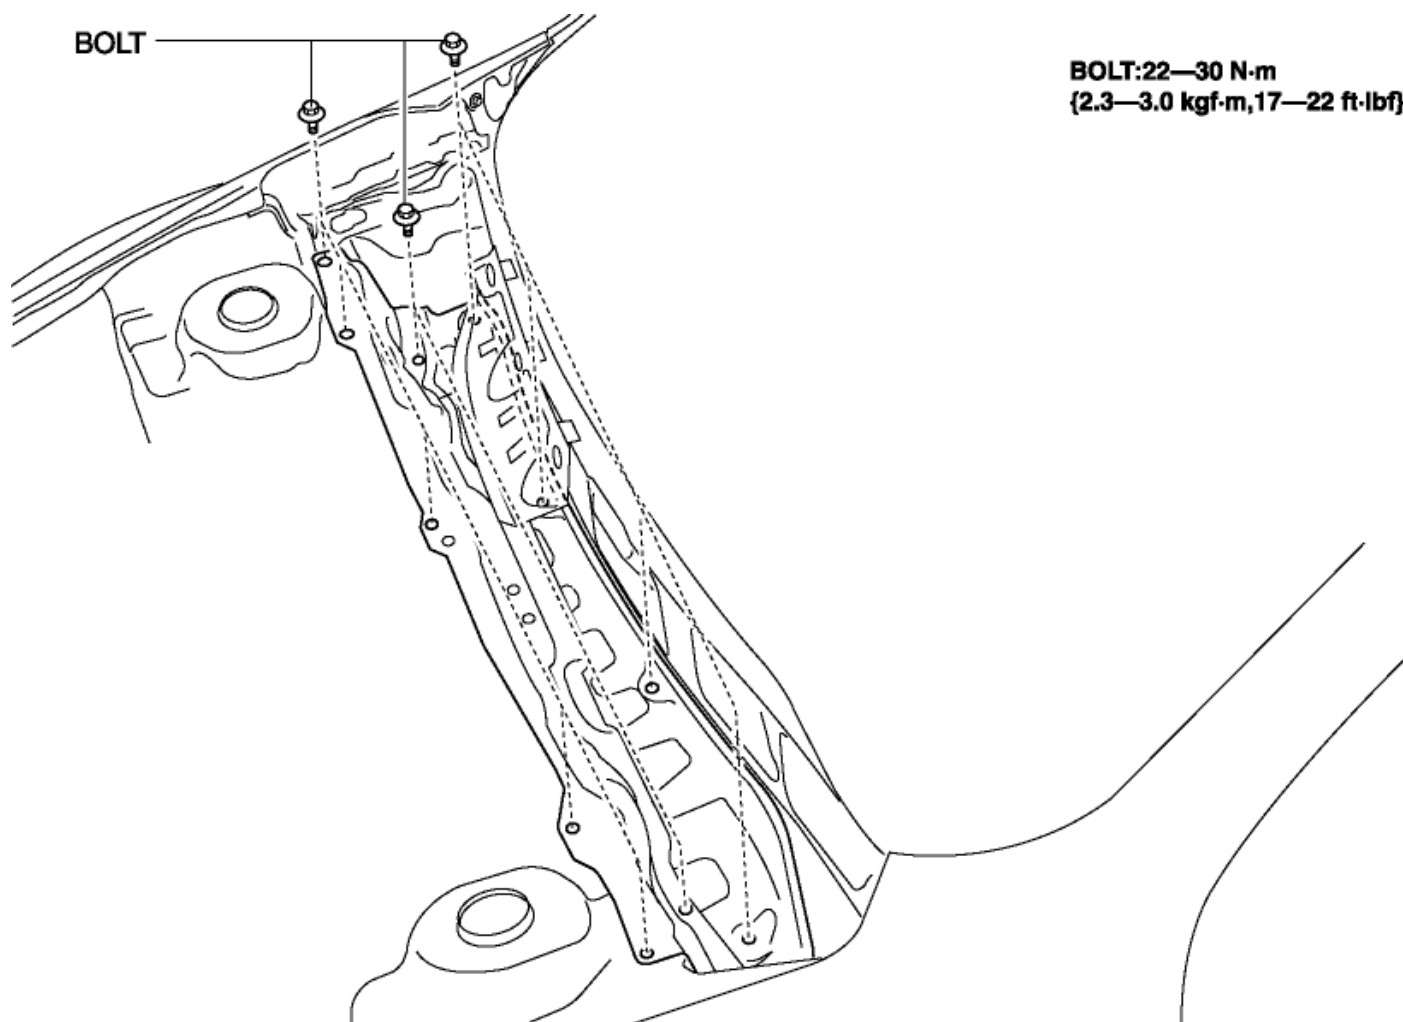

9. Set the center cowl grill out of the way in the direction of the arrow to remove the cowl panel.

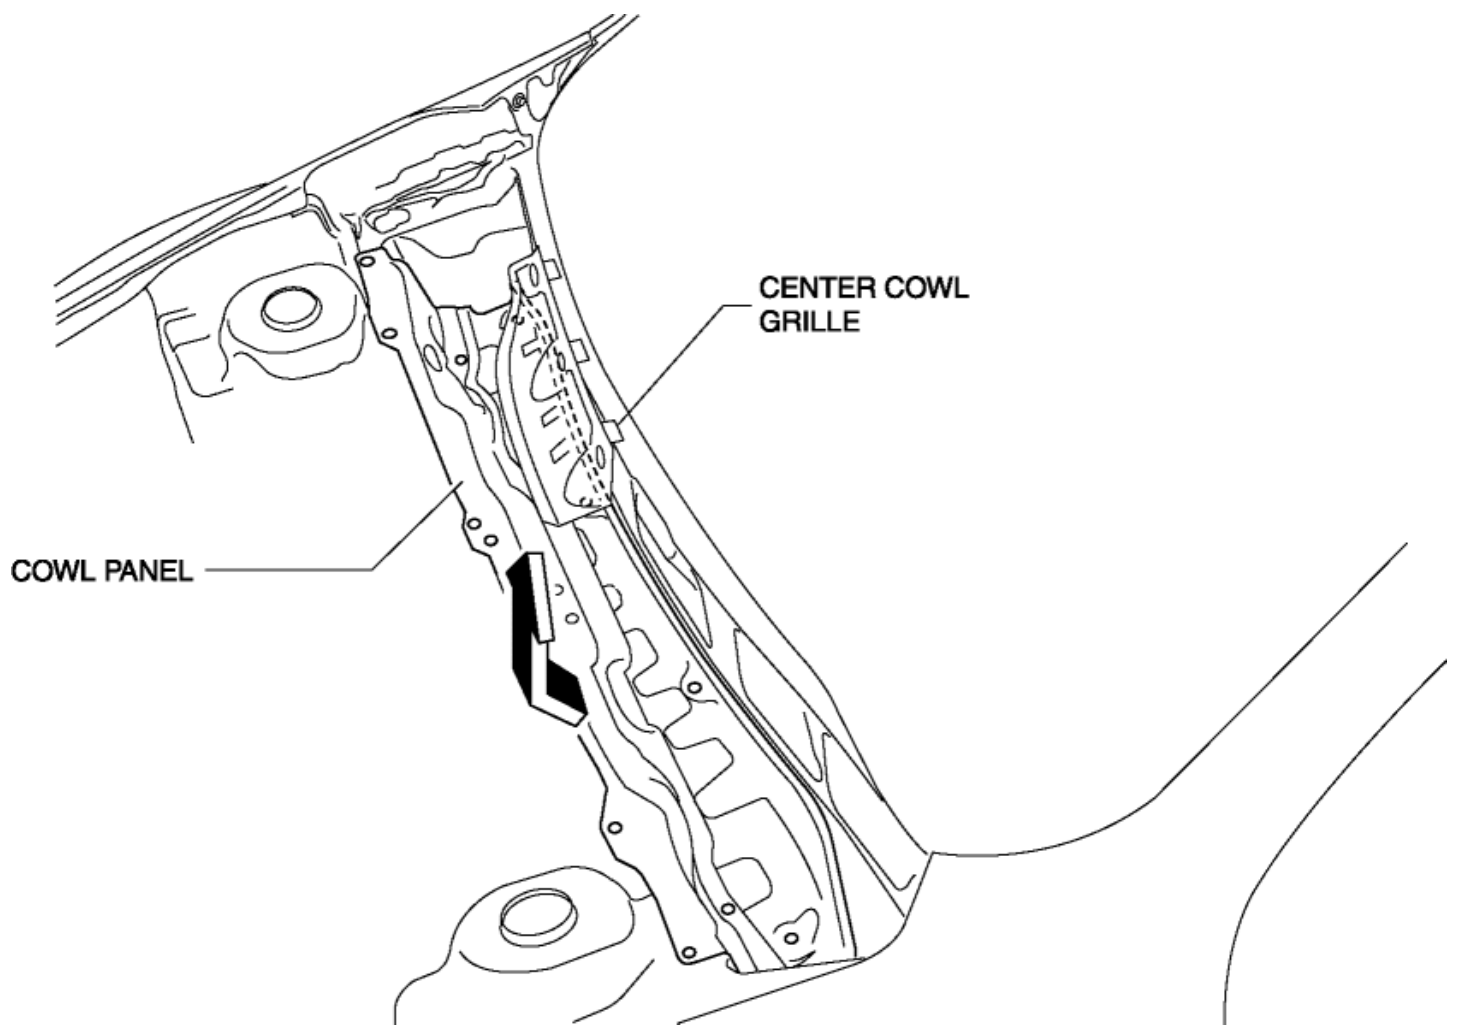

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories


COWL PANEL REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#))
3. Remove the front fender molding. (See [COWL GRILLE REMOVAL/ INSTALLATION](#))
4. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#))
5. Remove the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION](#))
6. Remove the washer hose grommet from the cowl panel and disconnect the front washer hose.
7. Remove the bolts, then remove the stay.

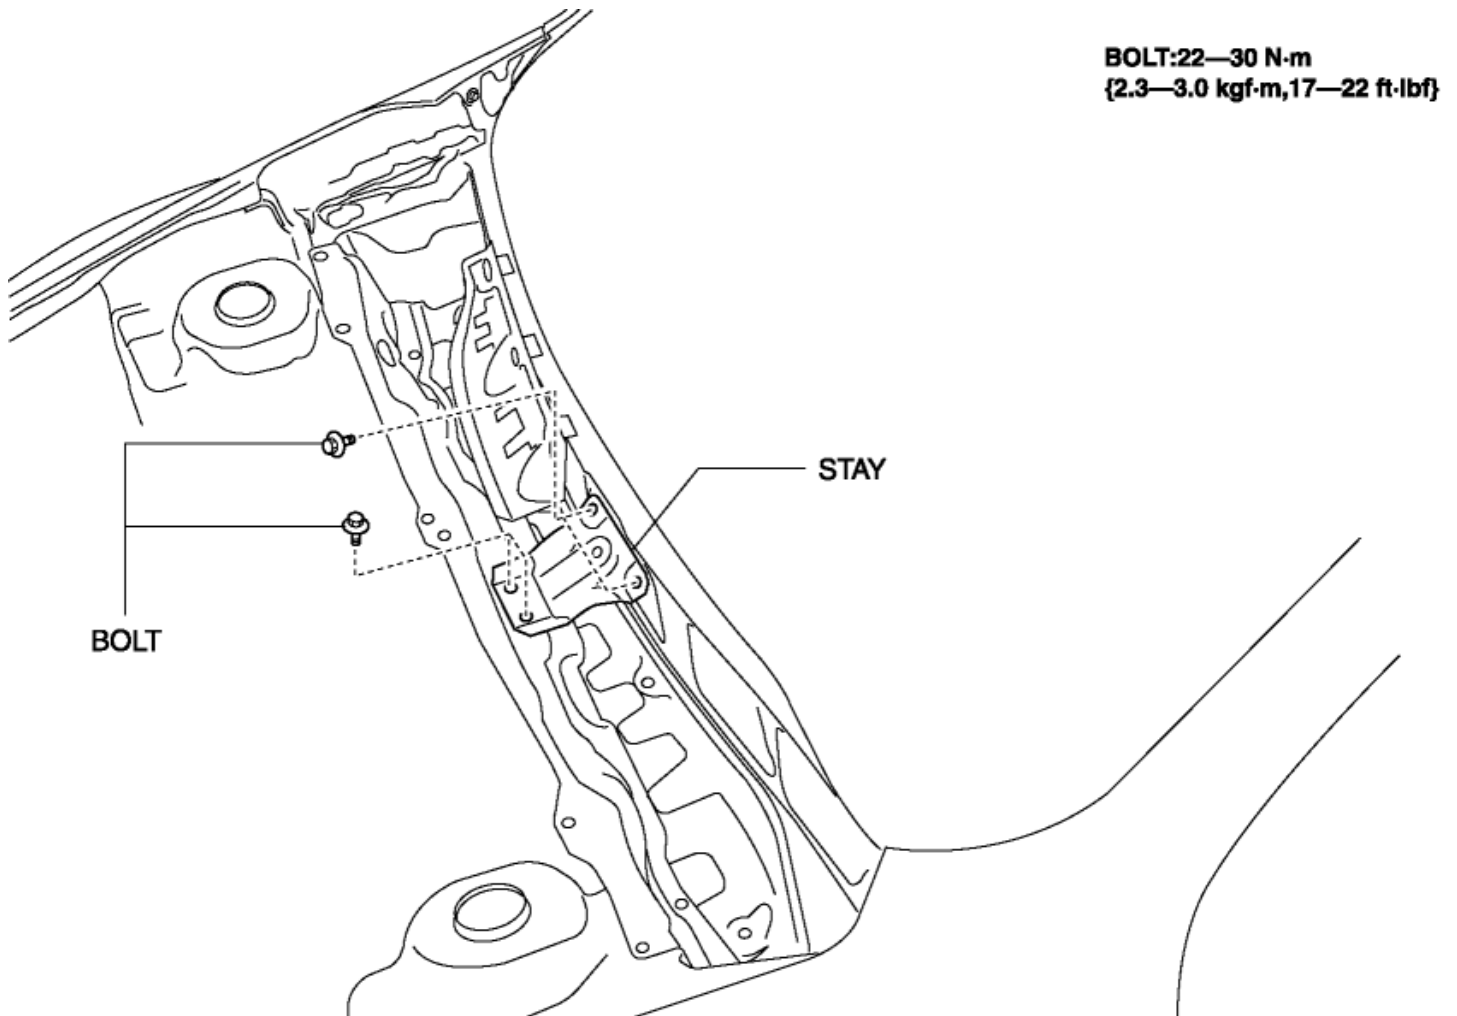

8. Remove bolts.

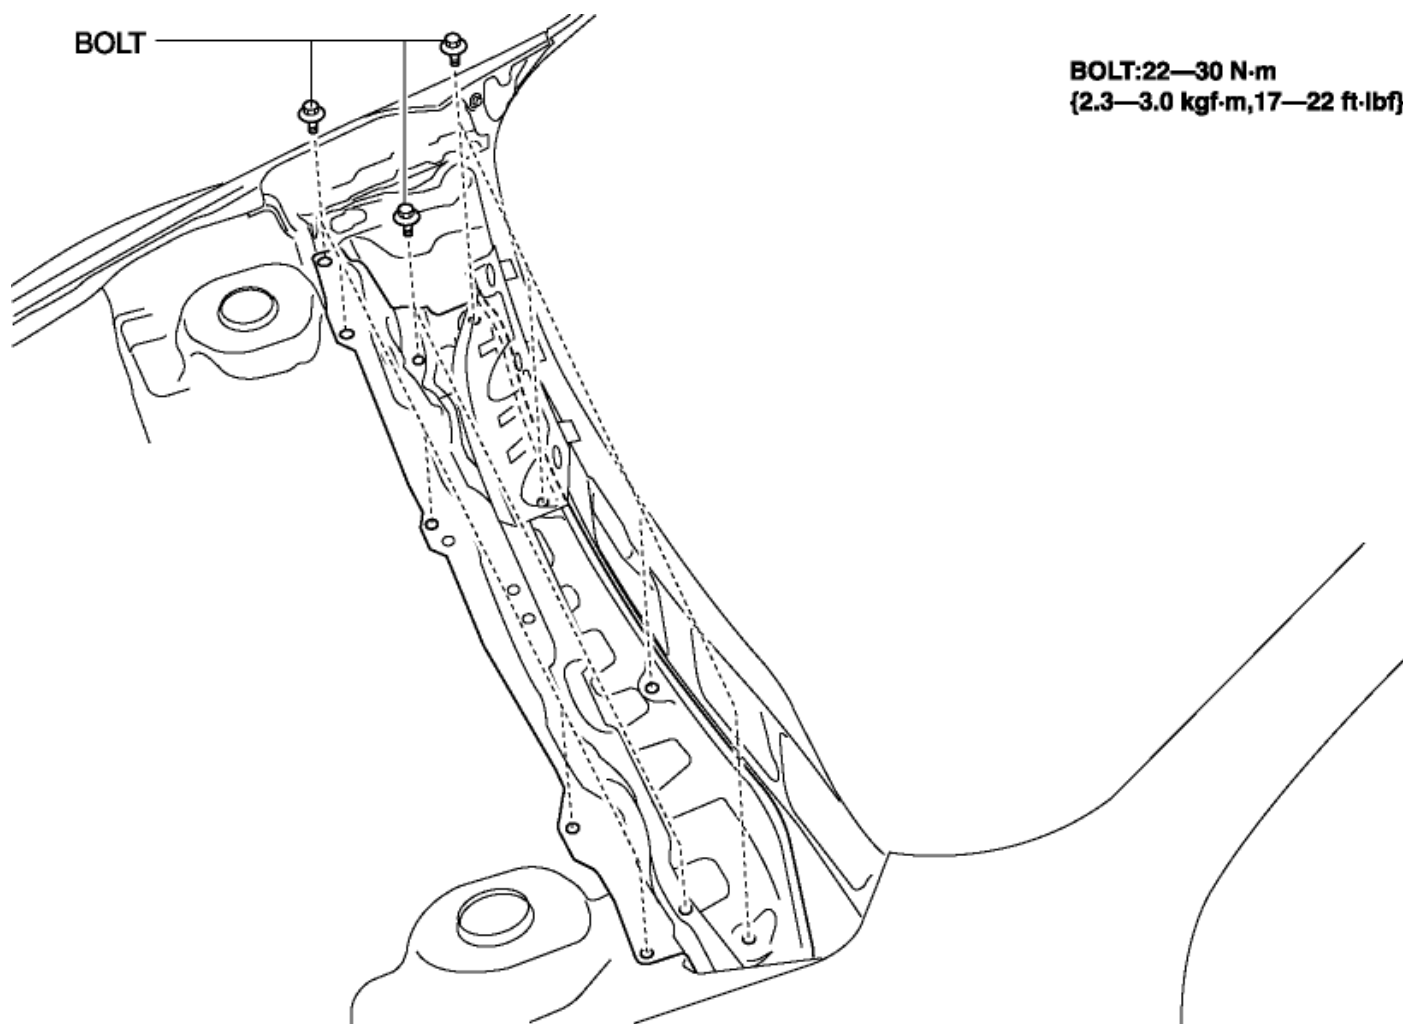

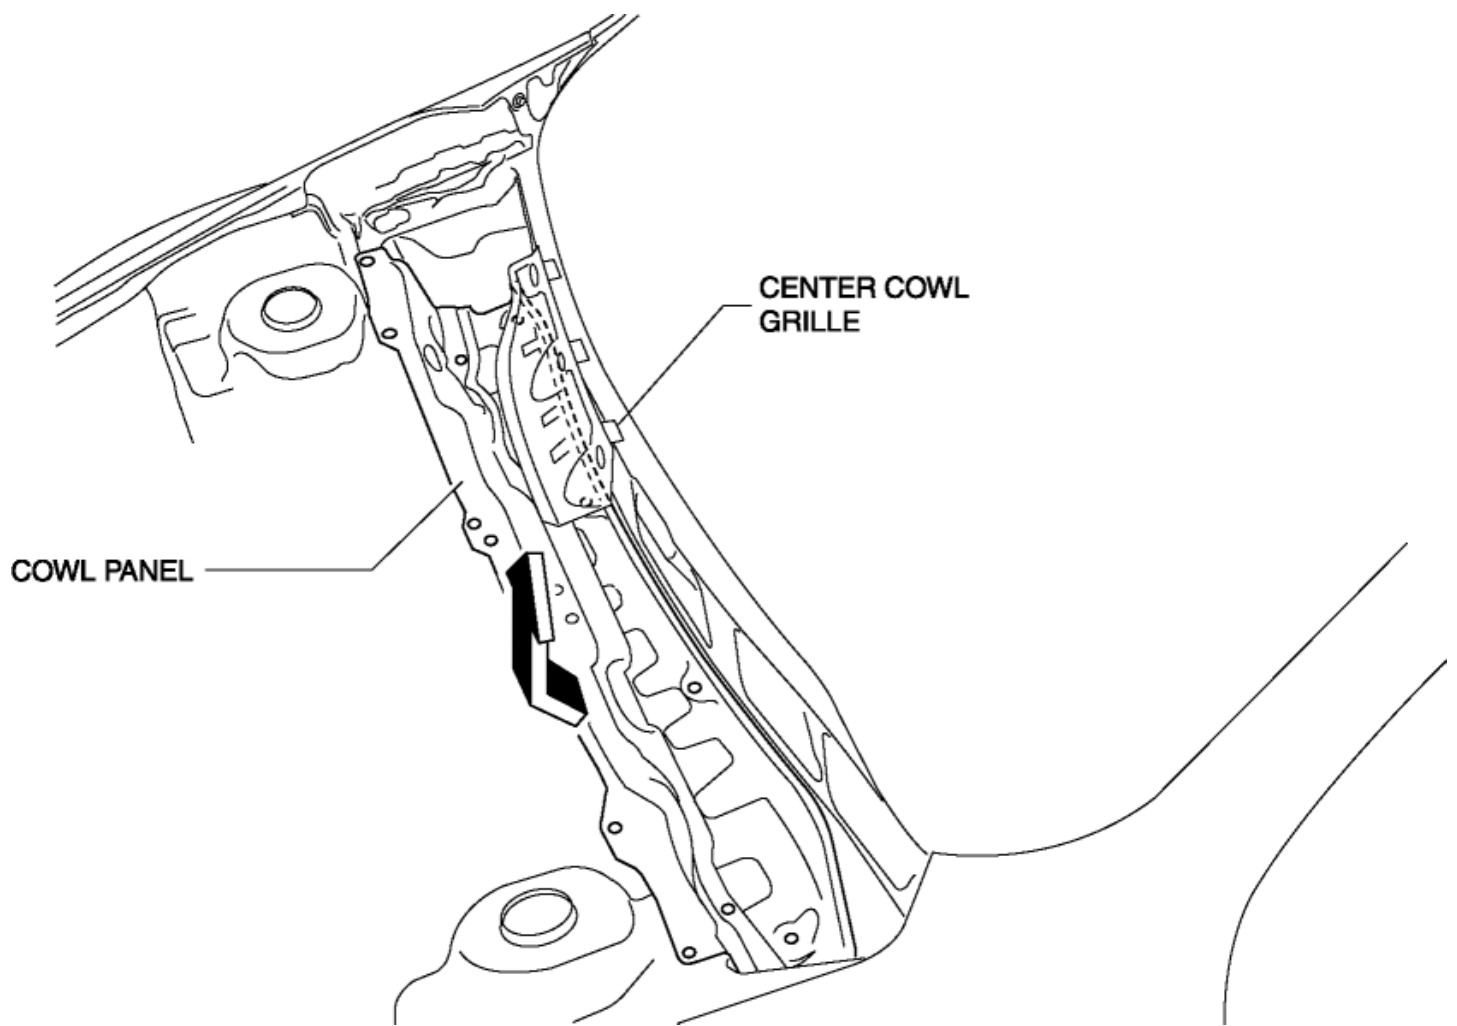

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)