


2012 - Mazda6 - Body and Accessories


HOOD ADJUSTMENT

Gap Adjustment


1. Measure the gap between the hood and body.

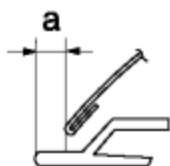

SEC. A—A

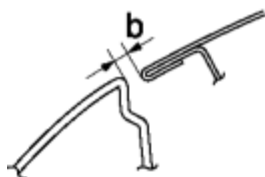


SEC. B—B

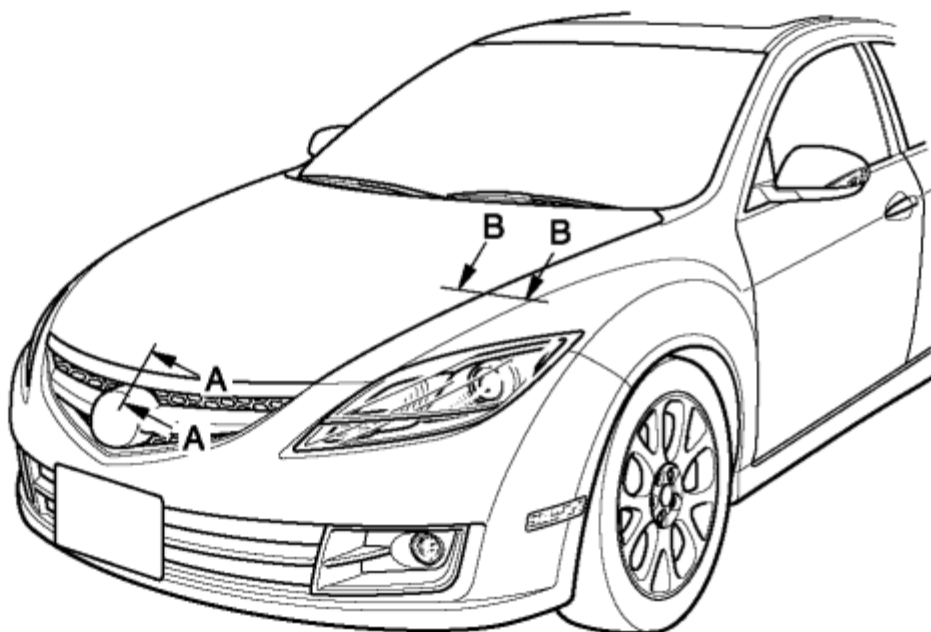

Standard clearance

- a: -0.1 — 2.9 mm {-0.03 — 0.11 in}
- b: 3.5 — 6.5 mm {0.14 — 0.25 in}


2. Loosen the hood hinge installation bolts and adjust the gap by moving the hood hinge back and forth, left and right.

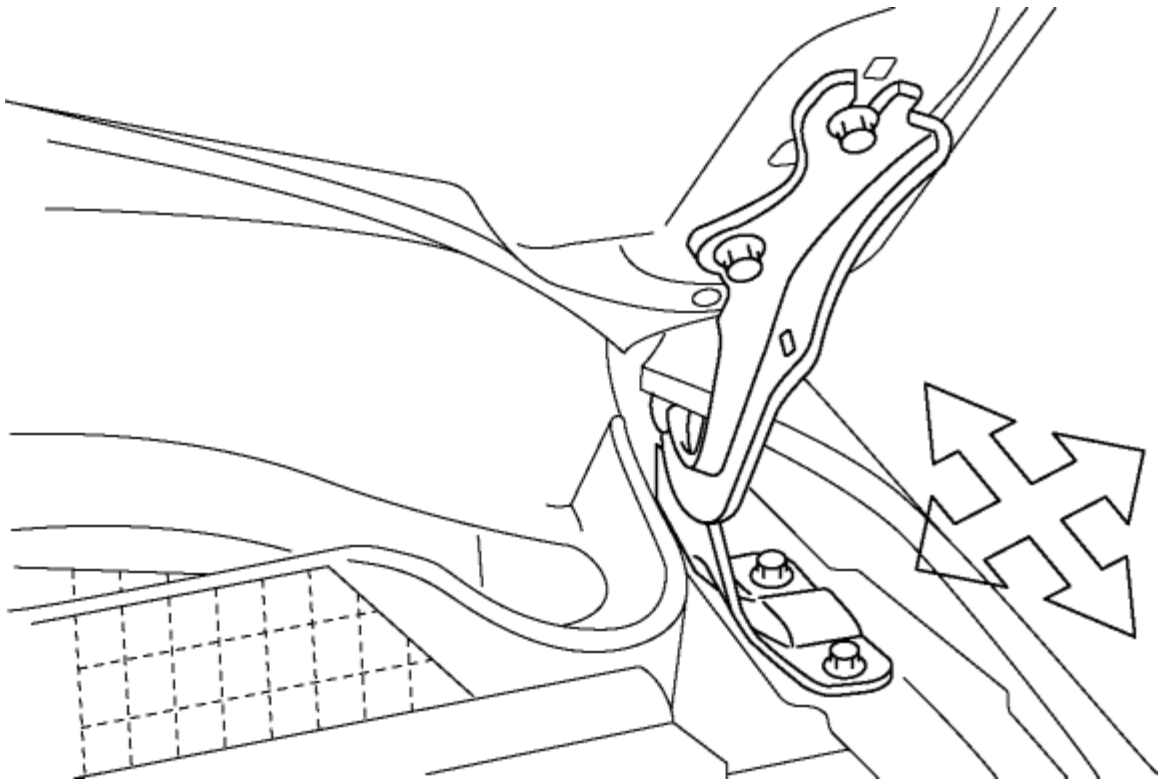


3. Tighten the bolts. (See [HOOD REMOVAL/ INSTALLATION.](#))

Height Difference Adjustment


1. Measure the height difference between the hood and body.

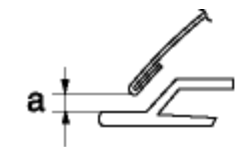


SEC. A—A

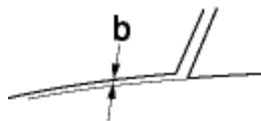

DETAIL B

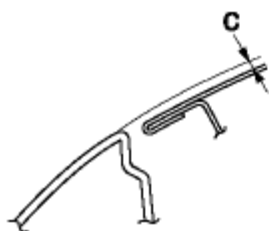


SEC. C—C

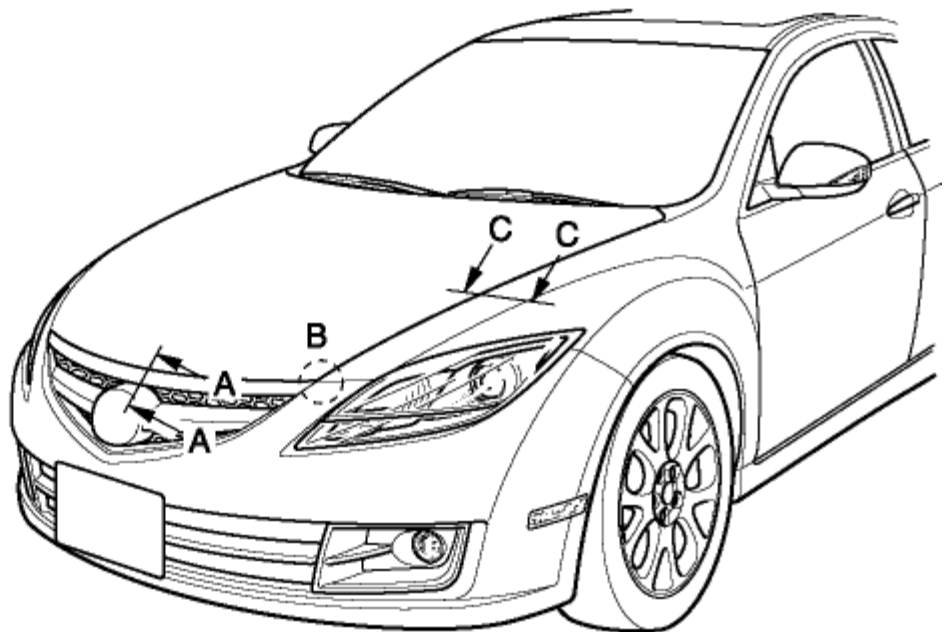

Standard clearance

- a: 3.5 — 6.5mm {0.14 — 0.25 in}
- b: -1.2 — 1.2mm {-0.047 — 0.047 in}
- c: -1.2 — 1.2mm {-0.047 — 0.047 in}

2. Turn the stop rubber to adjust.

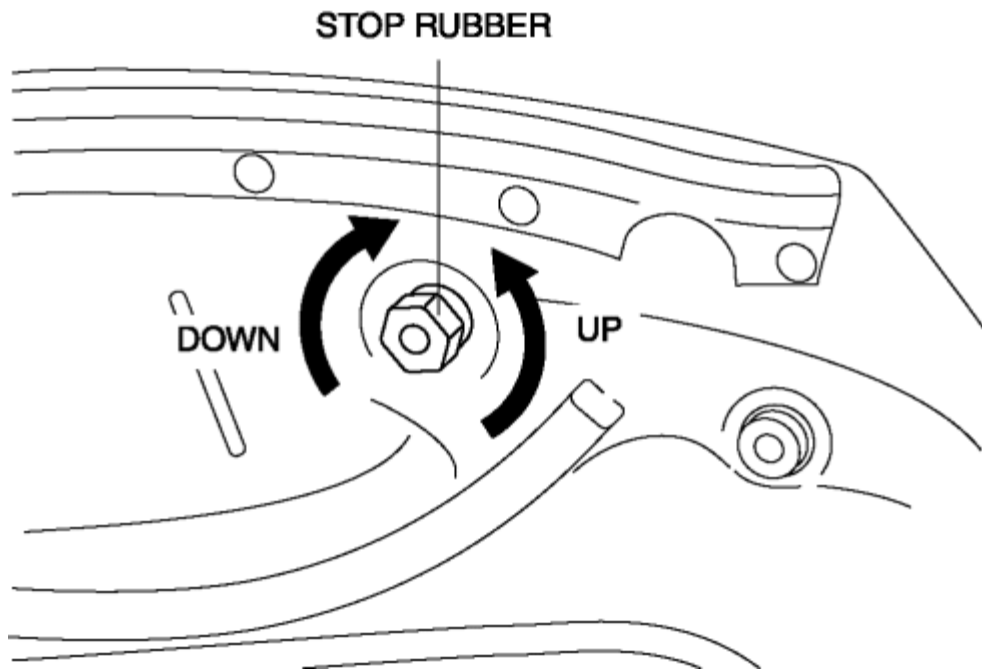

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.


[Back to Top](#)

2012 - Mazda6 - Body and Accessories


HOOD ADJUSTMENT

Gap Adjustment


1. Measure the gap between the hood and body.

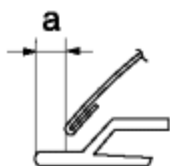

SEC. A—A

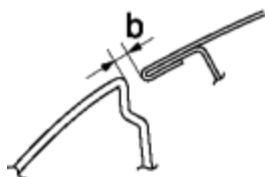


SEC. B—B

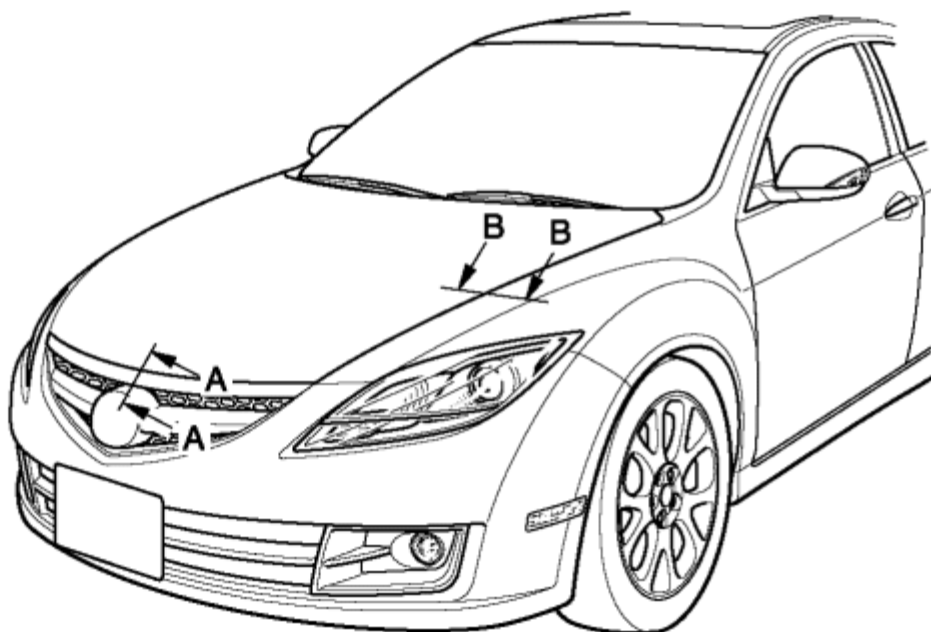

Standard clearance

- a: -0.1 — 2.9 mm {-0.03 — 0.11 in}
- b: 3.5 — 6.5 mm {0.14 — 0.25 in}


2. Loosen the hood hinge installation bolts and adjust the gap by moving the hood hinge back and forth, left and right.

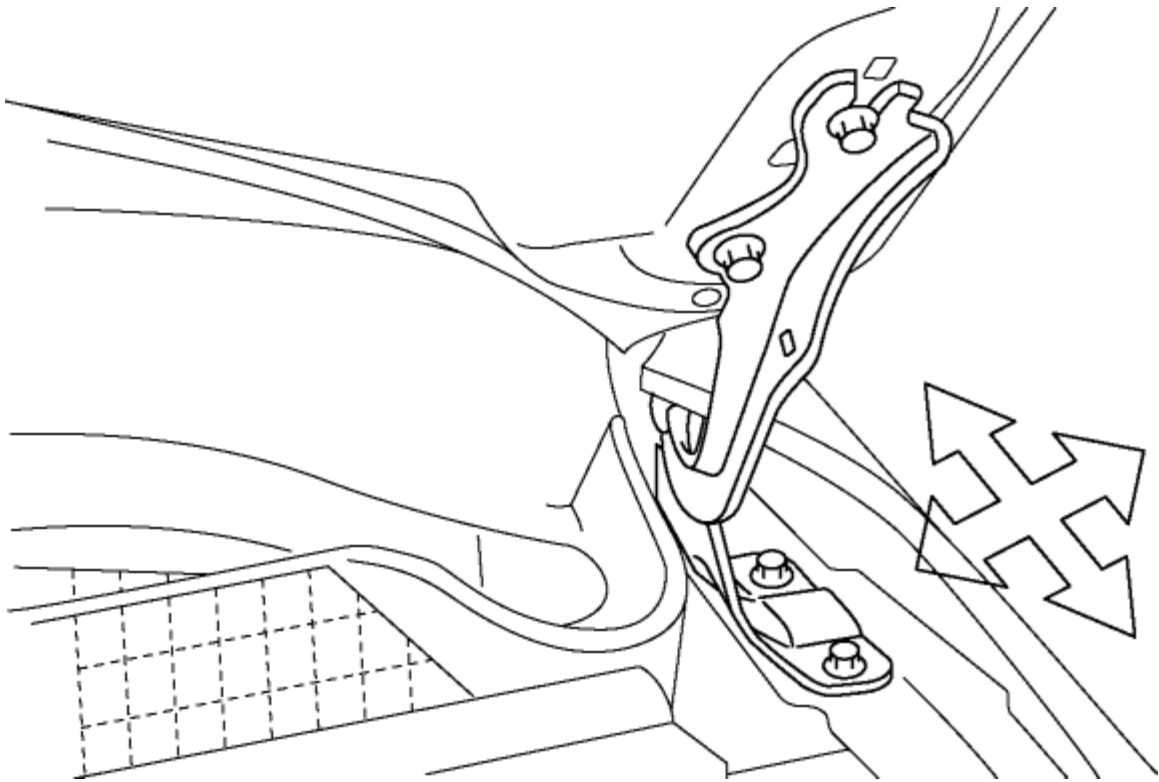


3. Tighten the bolts. (See [HOOD REMOVAL/ INSTALLATION.](#))

Height Difference Adjustment


1. Measure the height difference between the hood and body.

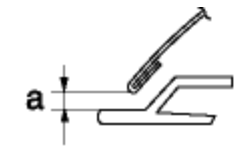


SEC. A—A

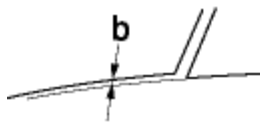

DETAIL B

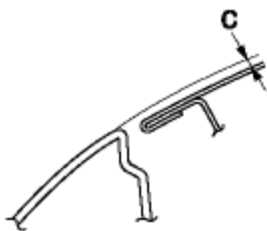


SEC. C—C

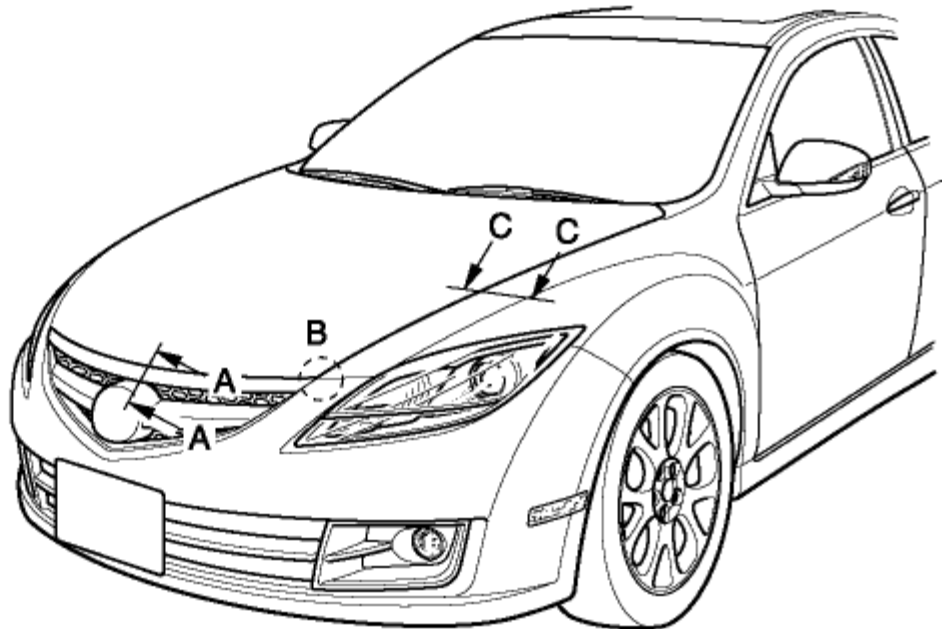

Standard clearance

- a: 3.5 — 6.5mm {0.14 — 0.25 in}
- b: -1.2 — 1.2mm {-0.047 — 0.047 in}
- c: -1.2 — 1.2mm {-0.047 — 0.047 in}

2. Turn the stop rubber to adjust.

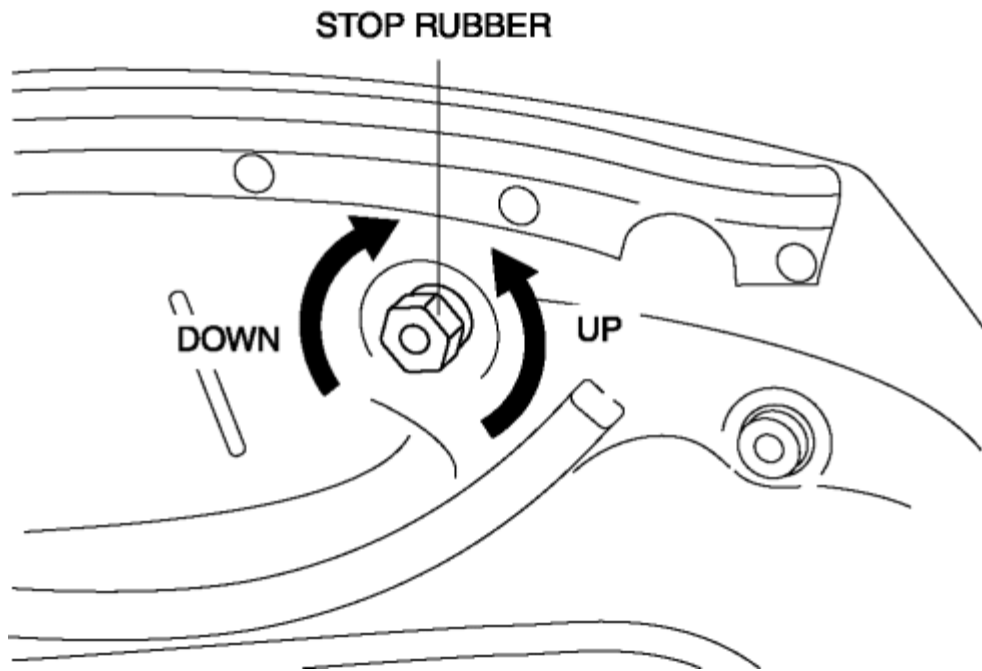

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)