




2012 - Mazda6 - Body and Accessories

TRUNK LID ADJUSTMENT

Gap Adjustment

1. Measure the gap difference between the trunk lid and the body.
2. Loosen the trunk lid hinge installation nuts or the trunk lid lock striker installation bolts, and adjust the trunk lid.

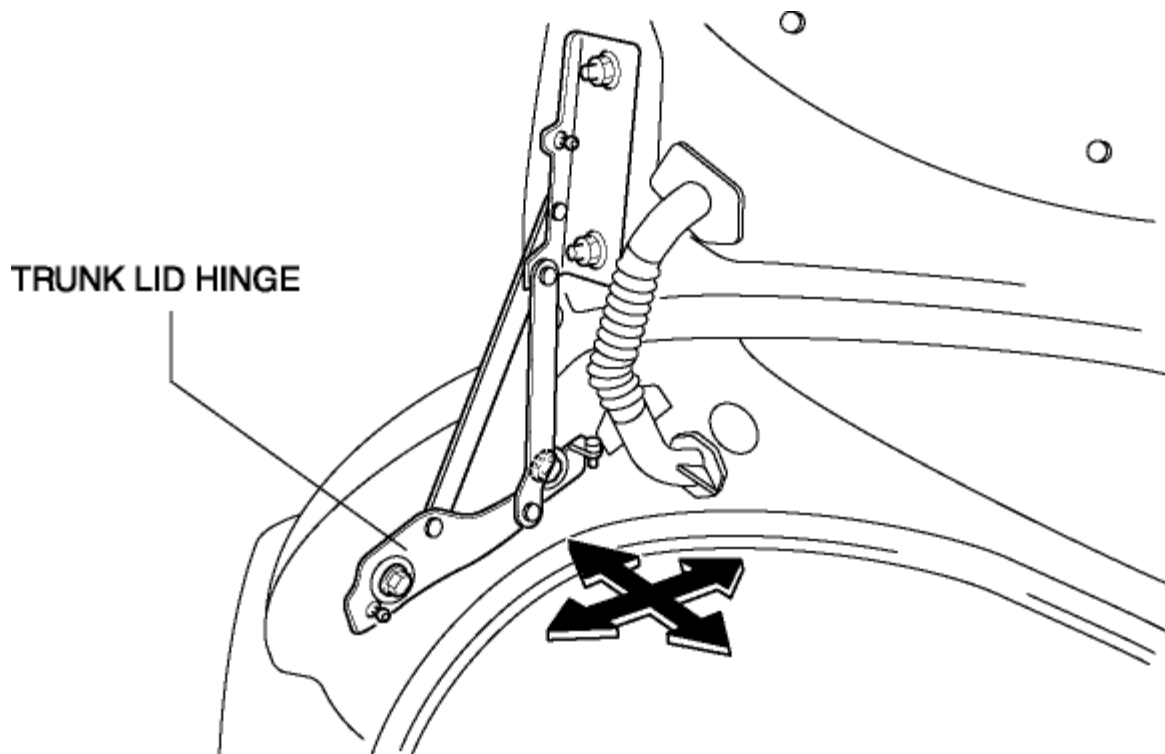

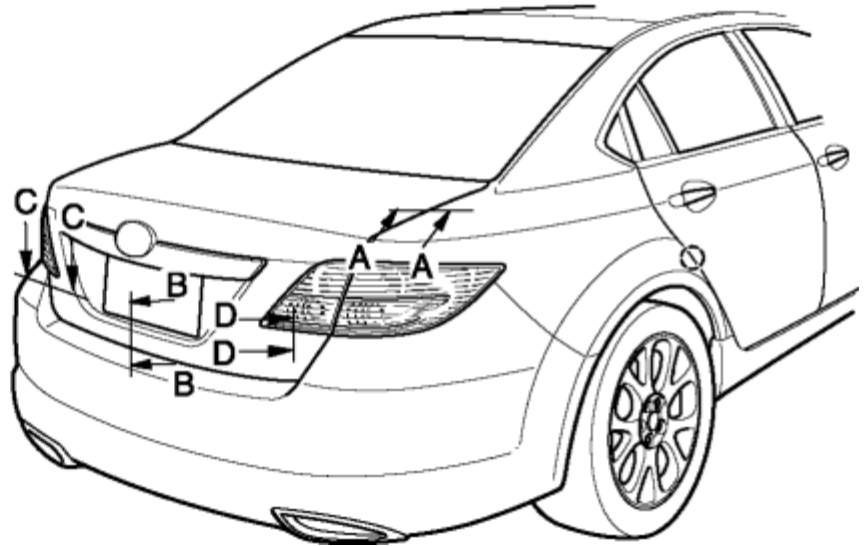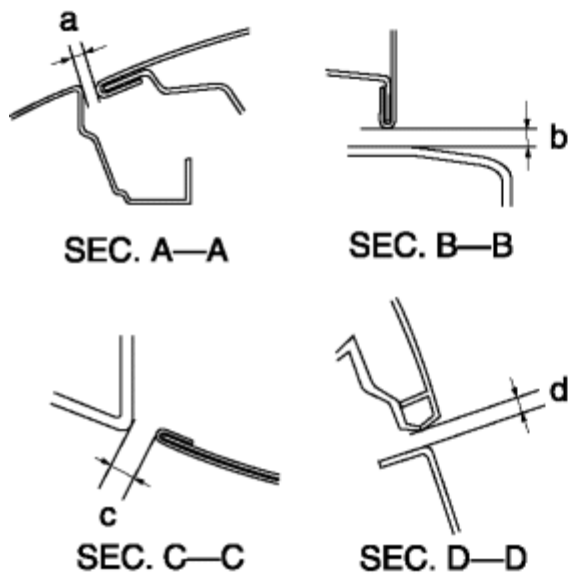



Standard Clearance

- a: 2.5—4.5 mm {0.10—0.18 in}
- b: 4.0—8.0 mm {0.16—0.31 in}
- c: 2.8—5.8 mm {-0.12—0.22 in}
- d: 0.5—2.8 mm {0.02—0.11 in}

3. Tighten the nuts or bolts. (See [TRUNK LID REMOVAL/ INSTALLATION.](#)) (See [TRUNK LID LOCK STRIKER REMOVAL/ INSTALLATION.](#))

High Difference Adjustment

1. Measure the height difference between the trunk lid and the body.

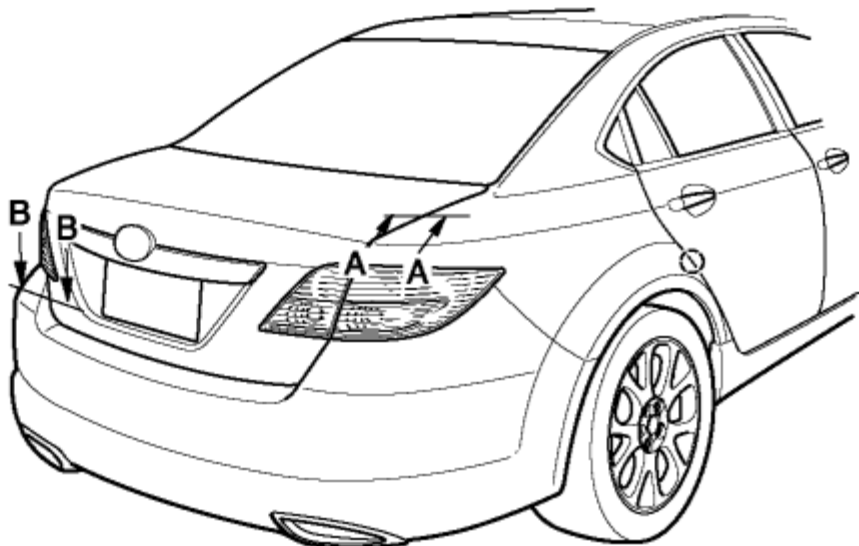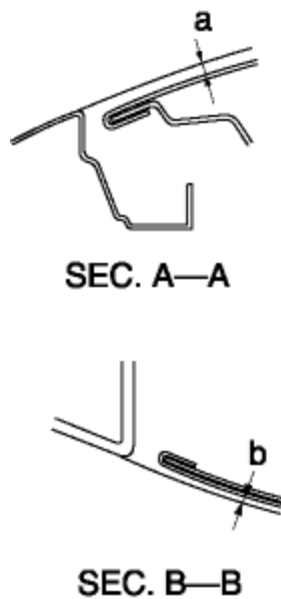

Standard Clearance

- a: $-1.5-0.5$ mm $\{-0.05-0.02$ in $\}$
- b: $-1.8-1.8$ mm $\{-0.07-0.07$ in $\}$

2. Turn the stop rubber to adjust.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.



2012 - Mazda6 - Body and Accessories

TRUNK LID ADJUSTMENT

Gap Adjustment

1. Measure the gap difference between the trunk lid and the body.
2. Loosen the trunk lid hinge installation nuts or the trunk lid lock striker installation bolts, and adjust the trunk lid.

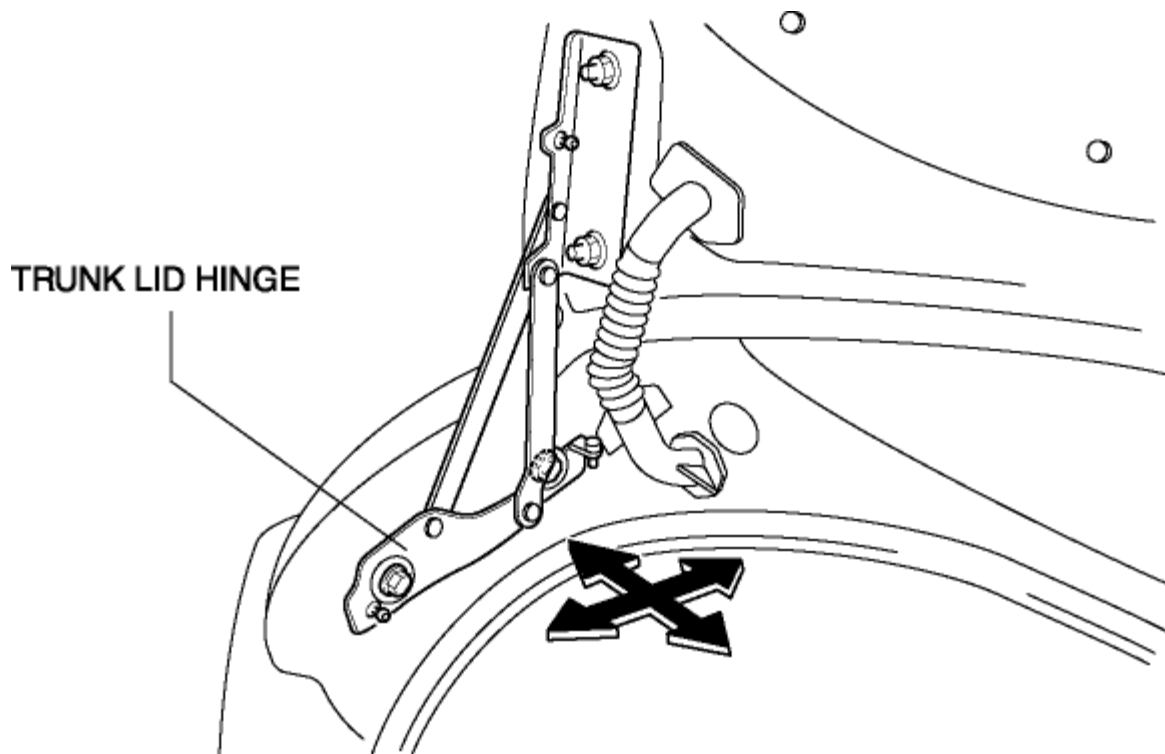

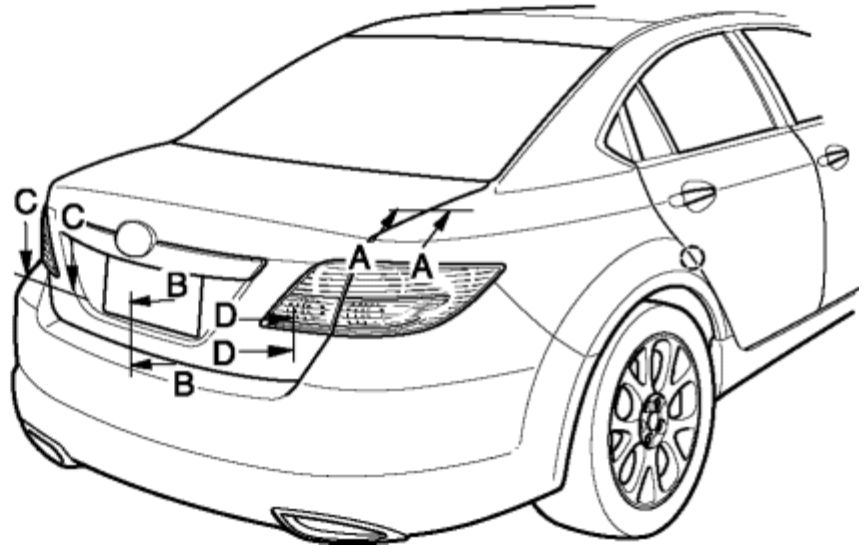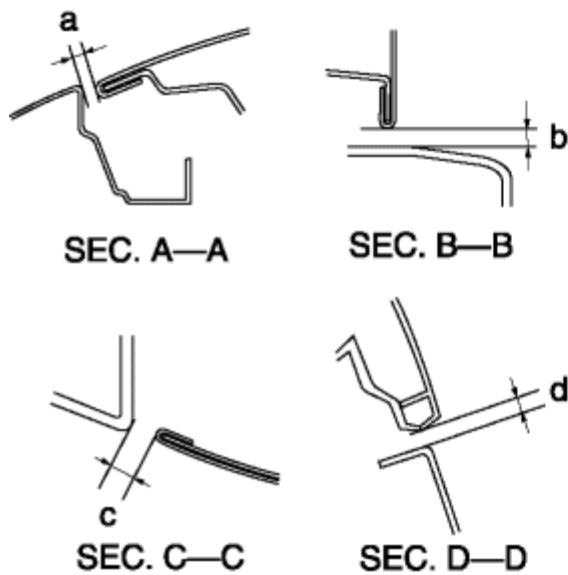



Standard Clearance

- a: 2.5—4.5 mm {0.10—0.18 in}
- b: 4.0—8.0 mm {0.16—0.31 in}
- c: 2.8—5.8 mm {-0.12—0.22 in}
- d: 0.5—2.8 mm {0.02—0.11 in}

3. Tighten the nuts or bolts. (See [TRUNK LID REMOVAL/ INSTALLATION.](#)) (See [TRUNK LID LOCK STRIKER REMOVAL/ INSTALLATION.](#))

High Difference Adjustment

1. Measure the height difference between the trunk lid and the body.

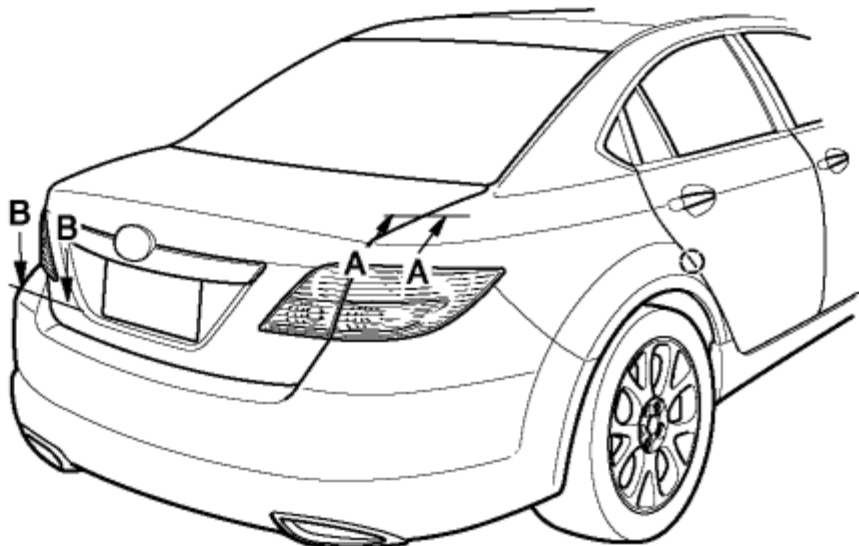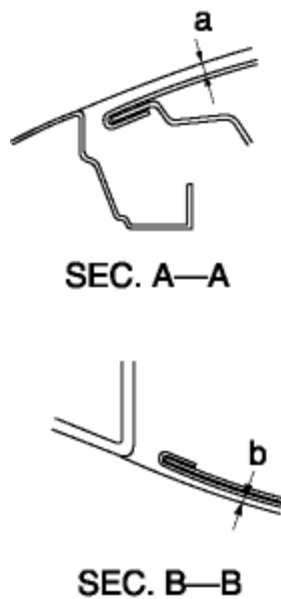

Standard Clearance

- a: $-1.5-0.5$ mm $\{-0.05-0.02$ in $\}$
- b: $-1.8-1.8$ mm $\{-0.07-0.07$ in $\}$

2. Turn the stop rubber to adjust.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.