


2012 - Mazda6 - Body and Accessories

SEAL PLATE REMOVAL/ INSTALLATION

Right-side

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))
3. Remove the front energy-absorbing form. (See [ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION](#))
4. Remove the fasteners.

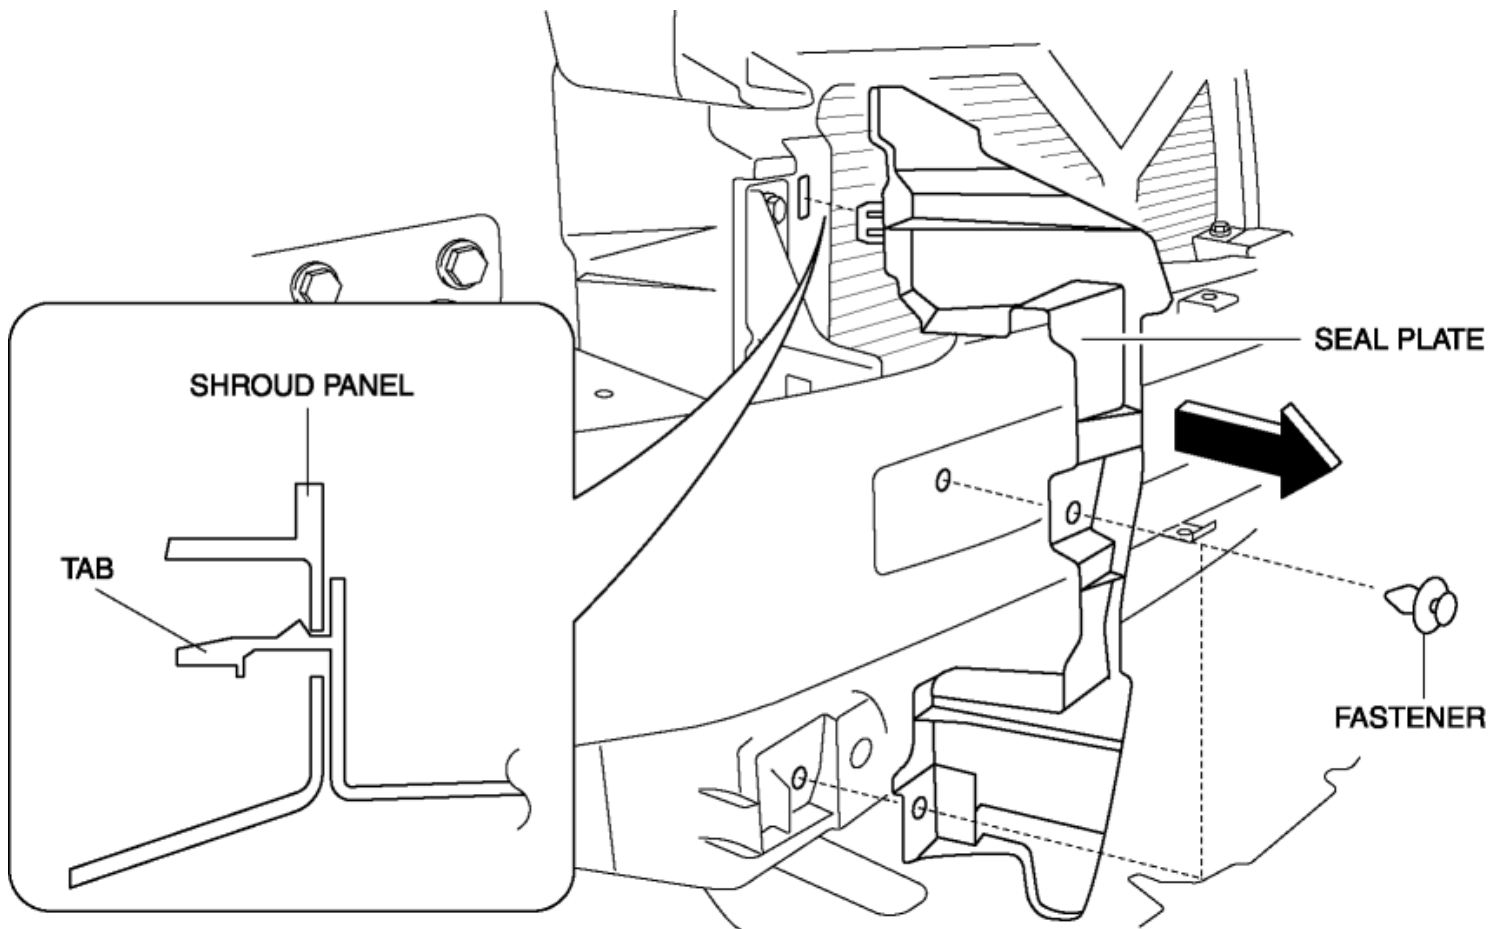


5. Pull the seal plate in the direction of the arrow shown in the figure, and then remove the tab.
6. Remove the seal plate.
7. Install in the reverse order of remove.

Left-side

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))

3. Remove the front energy-absorbing form. (See [ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION](#))
4. Remove the fasteners.

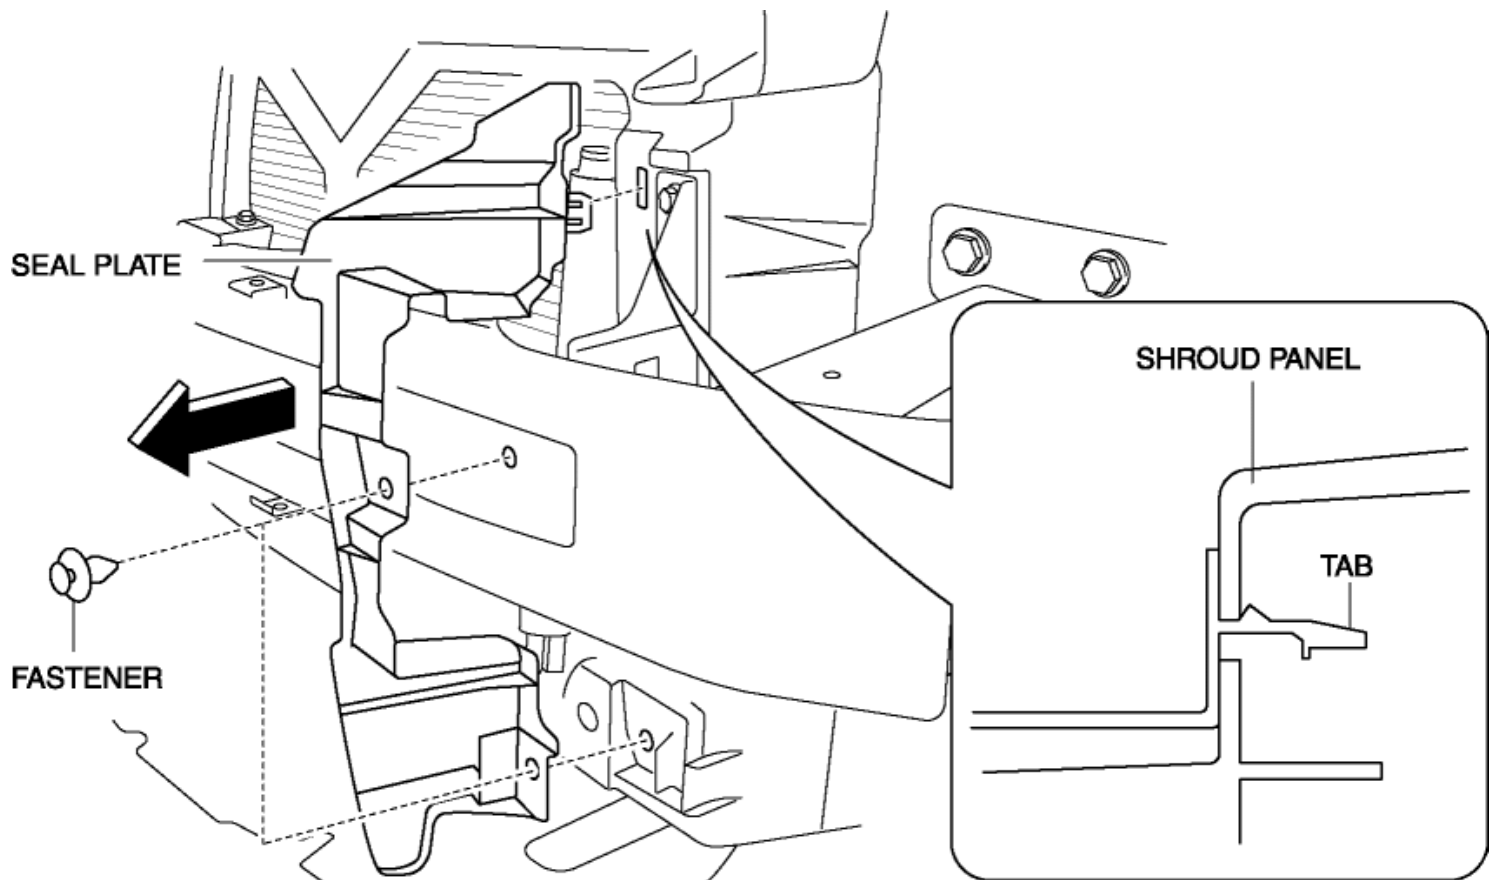

5. Pull the seal plate in the direction of the arrow shown in the figure, and then remove the tab.
6. Remove the seal plate.
7. Install in the reverse order of remove.

[< Previous](#) [Next >](#)


[Back to Top](#)

2012 - Mazda6 - Body and Accessories

SEAL PLATE REMOVAL/ INSTALLATION

Right-side

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))
3. Remove the front energy-absorbing form. (See [ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION](#))
4. Remove the fasteners.

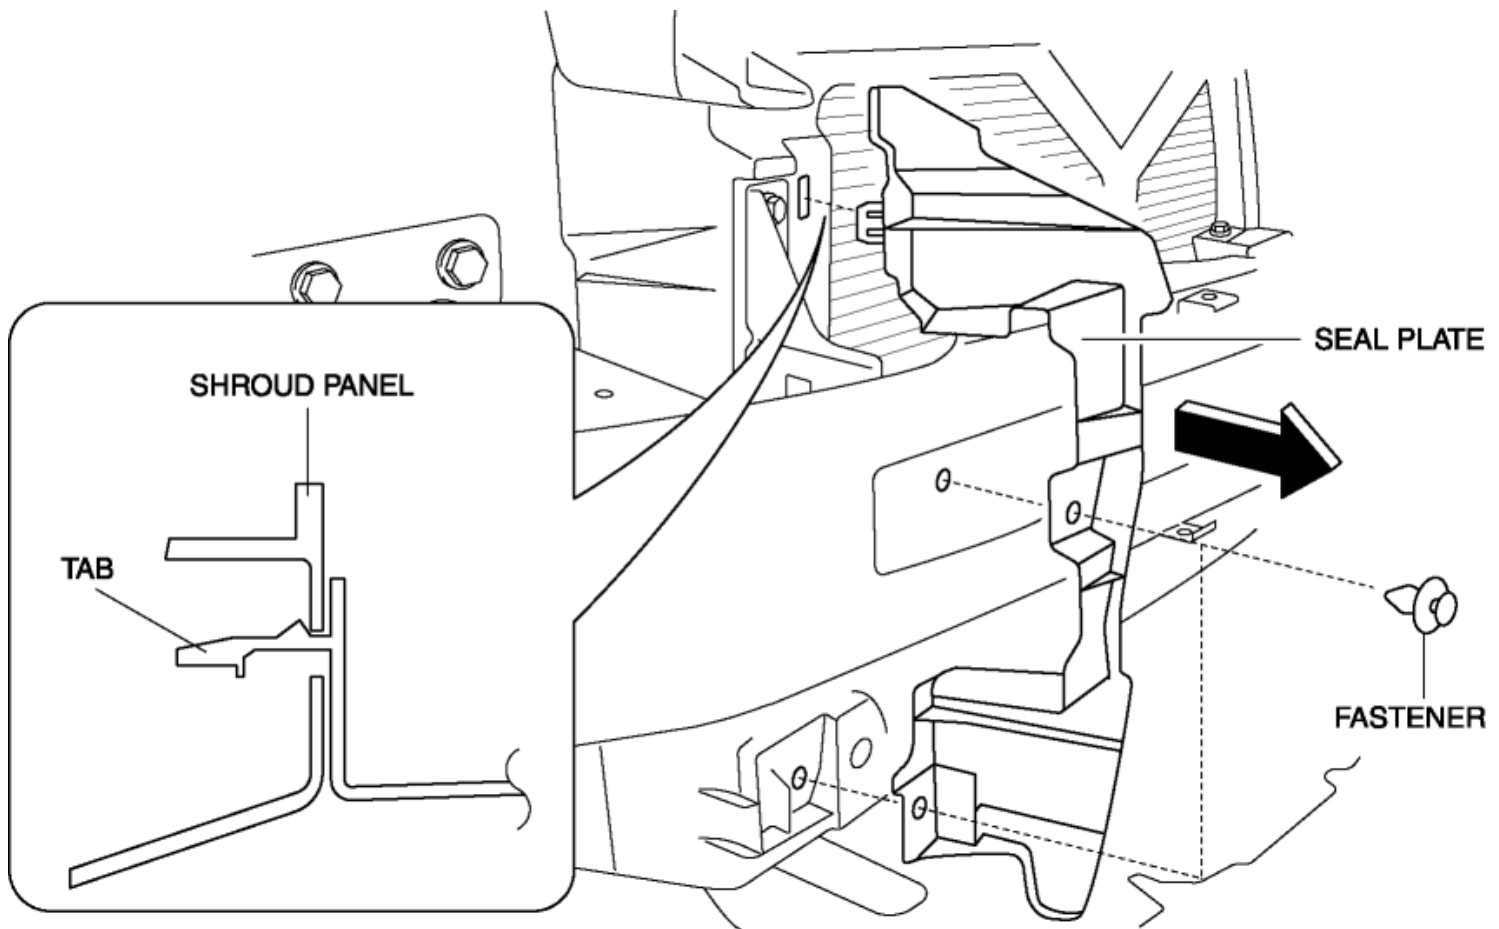


5. Pull the seal plate in the direction of the arrow shown in the figure, and then remove the tab.
6. Remove the seal plate.
7. Install in the reverse order of remove.

Left-side

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))

3. Remove the front energy-absorbing form. (See [ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION](#))
4. Remove the fasteners.

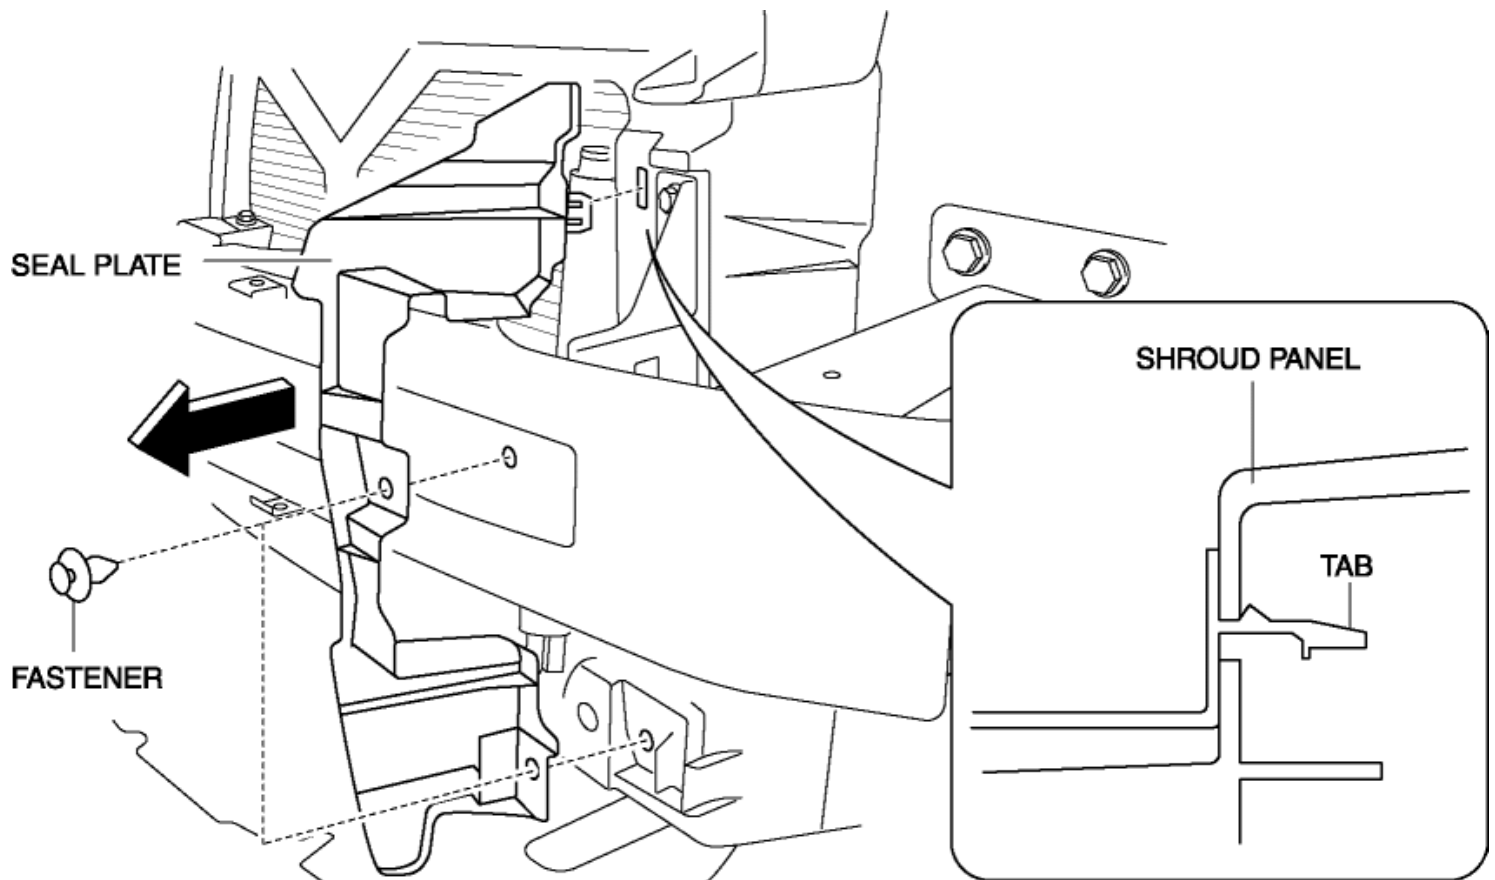

5. Pull the seal plate in the direction of the arrow shown in the figure, and then remove the tab.
6. Remove the seal plate.
7. Install in the reverse order of remove.

[< Previous](#) [Next >](#)

[Back to Top](#)