


2012 - Mazda6 - Body and Accessories

HOOD DISASSEMBLY/ ASSEMBLY

1. Disassemble in the order indicated in the table.

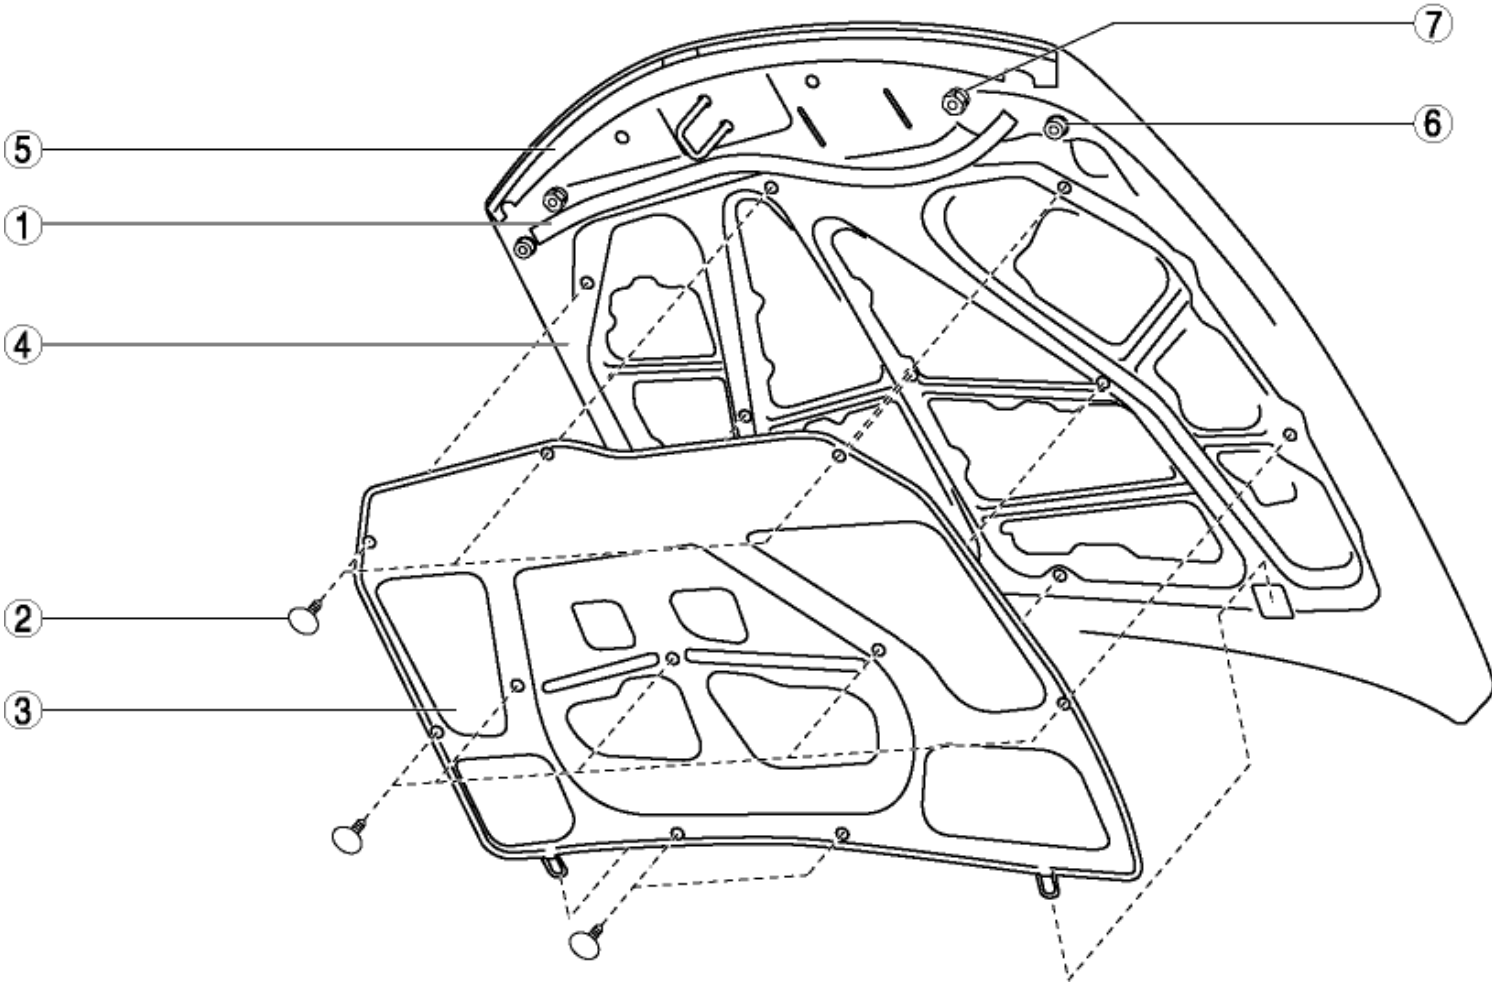

1	Shroud seaming welt
2	Fastener
3	Hood insulator
4	Hood component
5	Parting seal seaming welt
6	Stop rubber A
7	

7	Stop rubber B
---	---------------

2. Assemble in the reverse order of disassembly.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

HOOD DISASSEMBLY/ ASSEMBLY

1. Disassemble in the order indicated in the table.

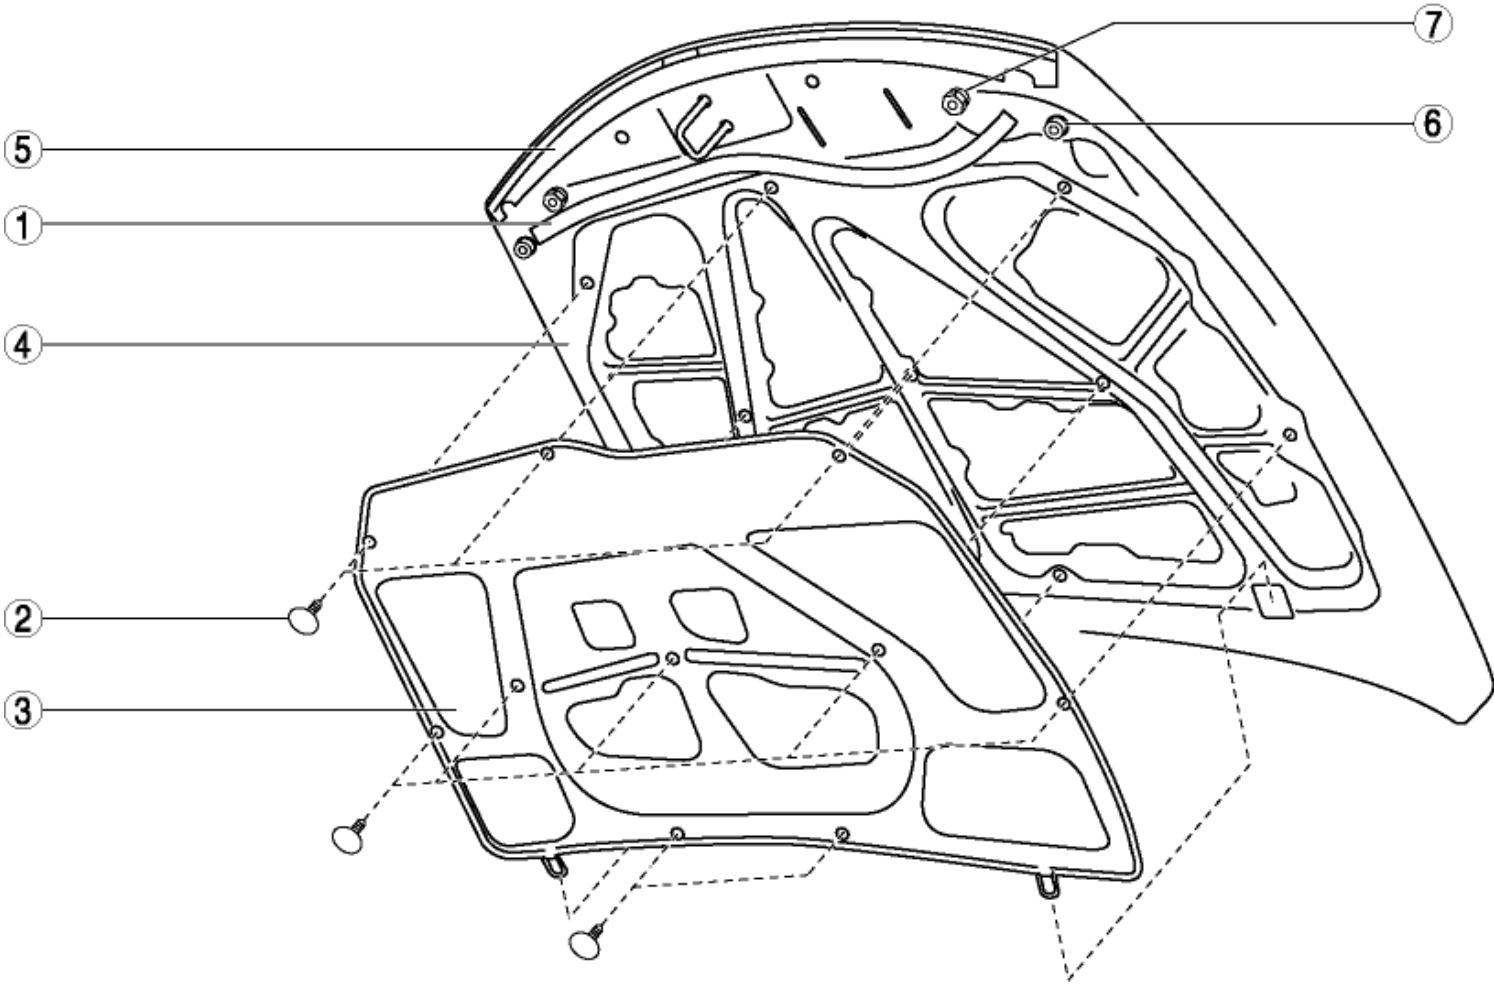

1	Shroud seaming welt
2	Fastener
3	Hood insulator
4	Hood component
5	Parting seal seaming welt
6	Stop rubber A
7	

7	Stop rubber B
---	---------------

2. Assemble in the reverse order of disassembly.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)