


2012 - Mazda6 - Body and Accessories

REAR DOOR HOLE COVER REMOVAL

WARNING:

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
1. Remove the rear door trim. (See [REAR DOOR TRIM DISASSEMBLY/ ASSEMBLY](#).)
 2. Remove the sealant around the rear door hole cover using a utility knife.

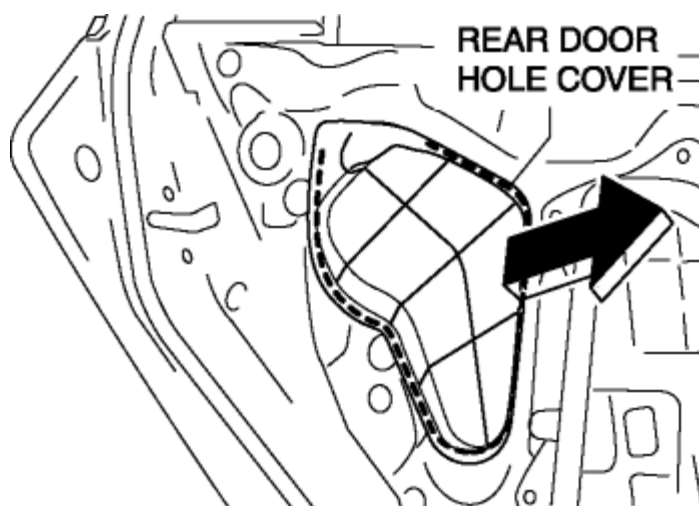


3. Remove the hole cover.

2012 - Mazda6 - Body and Accessories

REAR DOOR HOLE COVER REMOVAL

WARNING:

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
1. Remove the rear door trim. (See [REAR DOOR TRIM DISASSEMBLY/ ASSEMBLY](#).)
 2. Remove the sealant around the rear door hole cover using a utility knife.

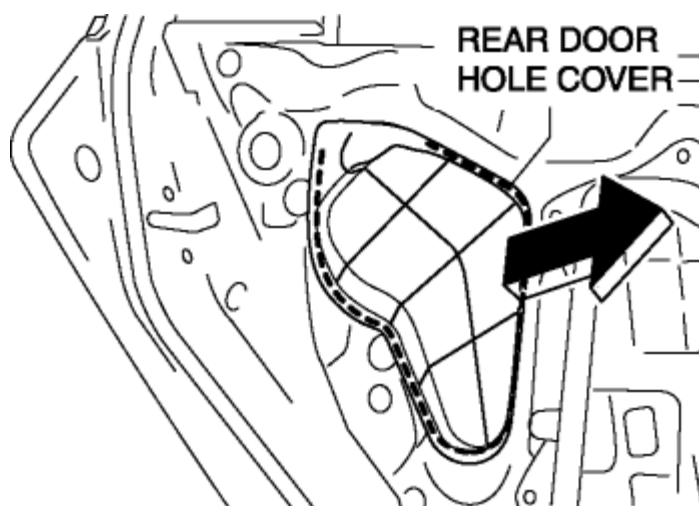

3. Remove the hole cover.