


2012 - Mazda6 - Body and Accessories

REAR DOOR HOLE COVER INSTALLATION


WARNING:

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
1. Remove the sealant along the perimeter of the rear door hole cover using a utility knife. (When reusing the rear door hole cover)
 2. Apply sealant to the area of the rear door hole cover surface as shown in the figure.


SEALANT SHALL NOT PROTRUDE
OVER THIS AREA

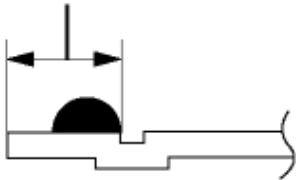

SEC. A—A

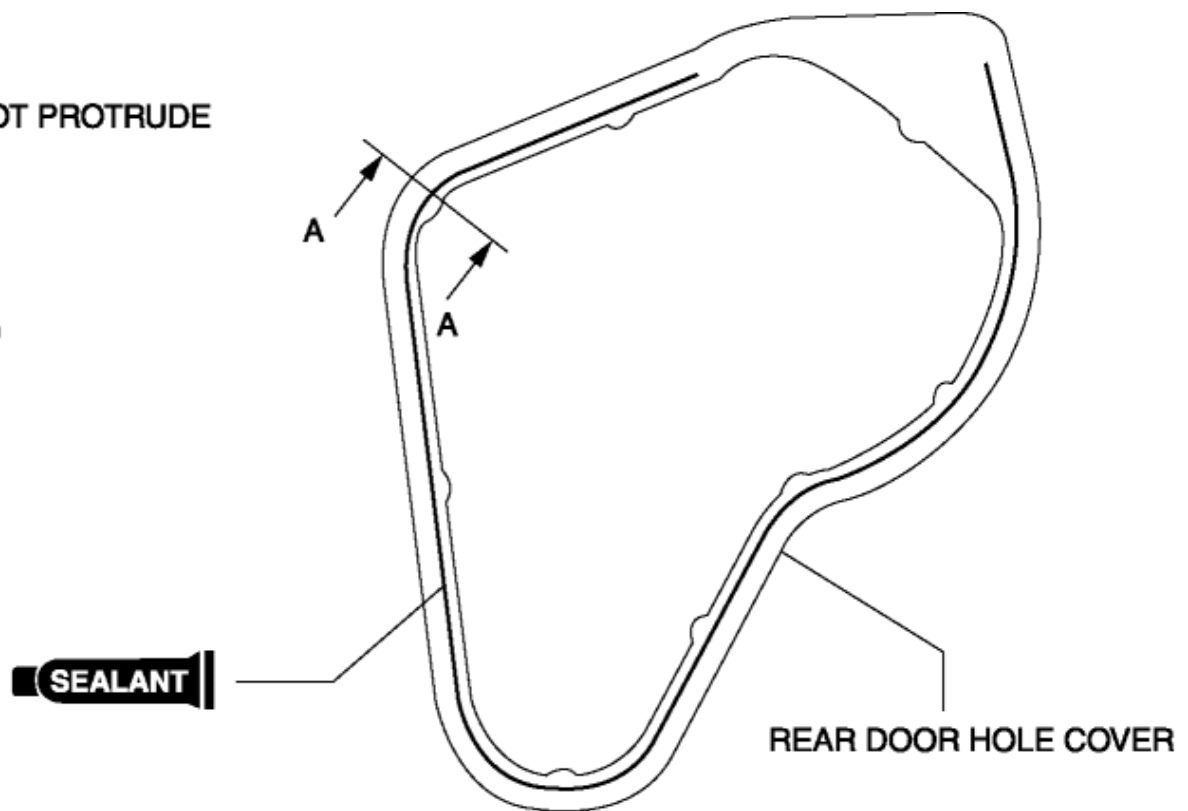

3. Press along the perimeter of the rear door hole cover.

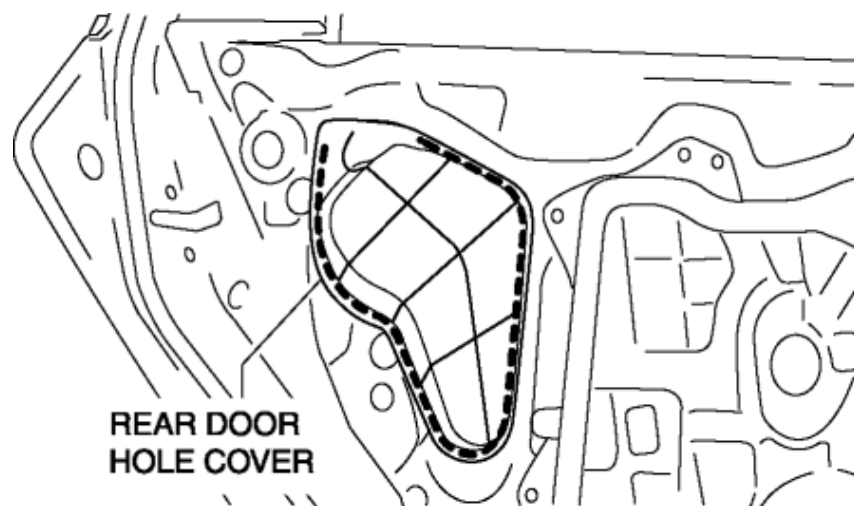

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

REAR DOOR HOLE COVER INSTALLATION


WARNING:

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
1. Remove the sealant along the perimeter of the rear door hole cover using a utility knife. (When reusing the rear door hole cover)
 2. Apply sealant to the area of the rear door hole cover surface as shown in the figure.


SEALANT SHALL NOT PROTRUDE
OVER THIS AREA

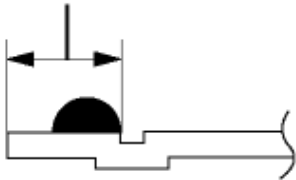

SEC. A—A

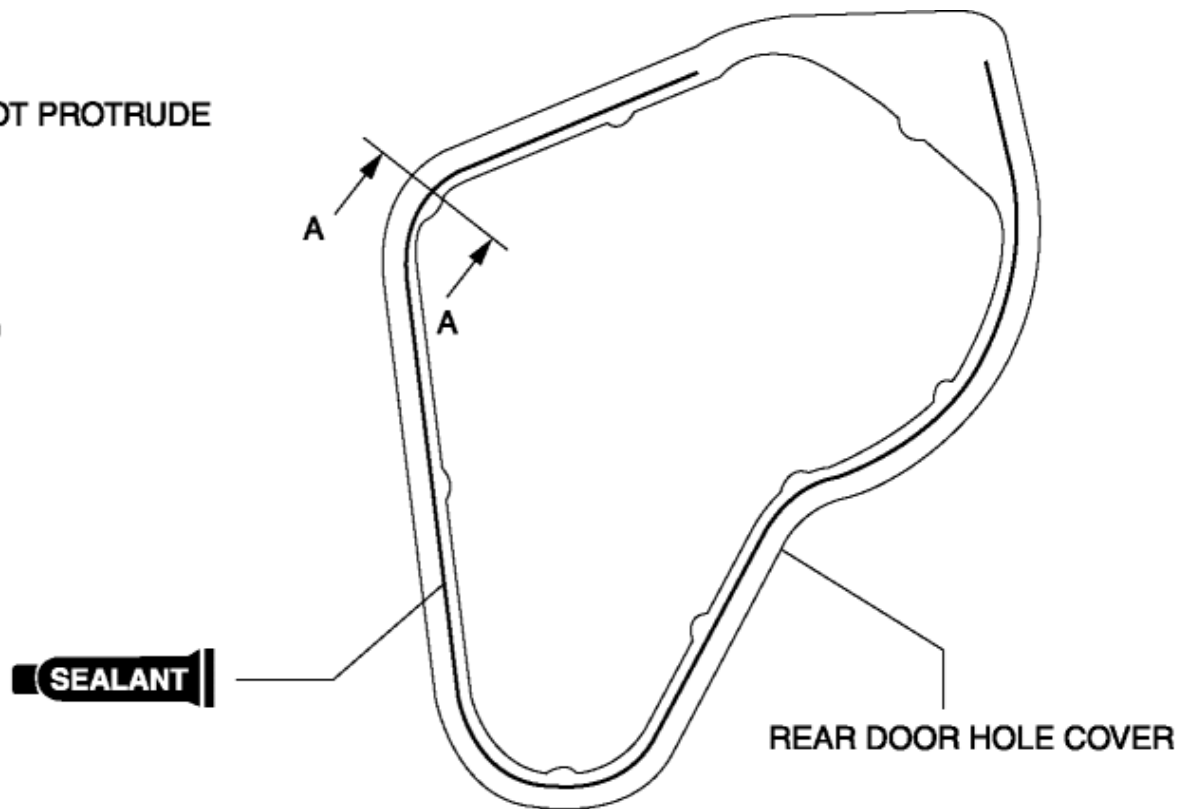

3. Press along the perimeter of the rear door hole cover.

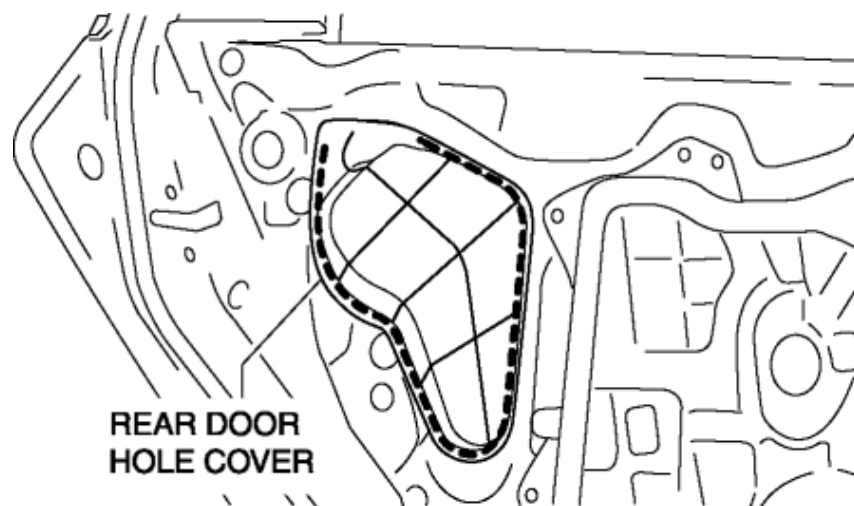

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.