


2012 - Mazda6 - Body and Accessories

DOOR AND LIFTGATE LOCATION INDEX

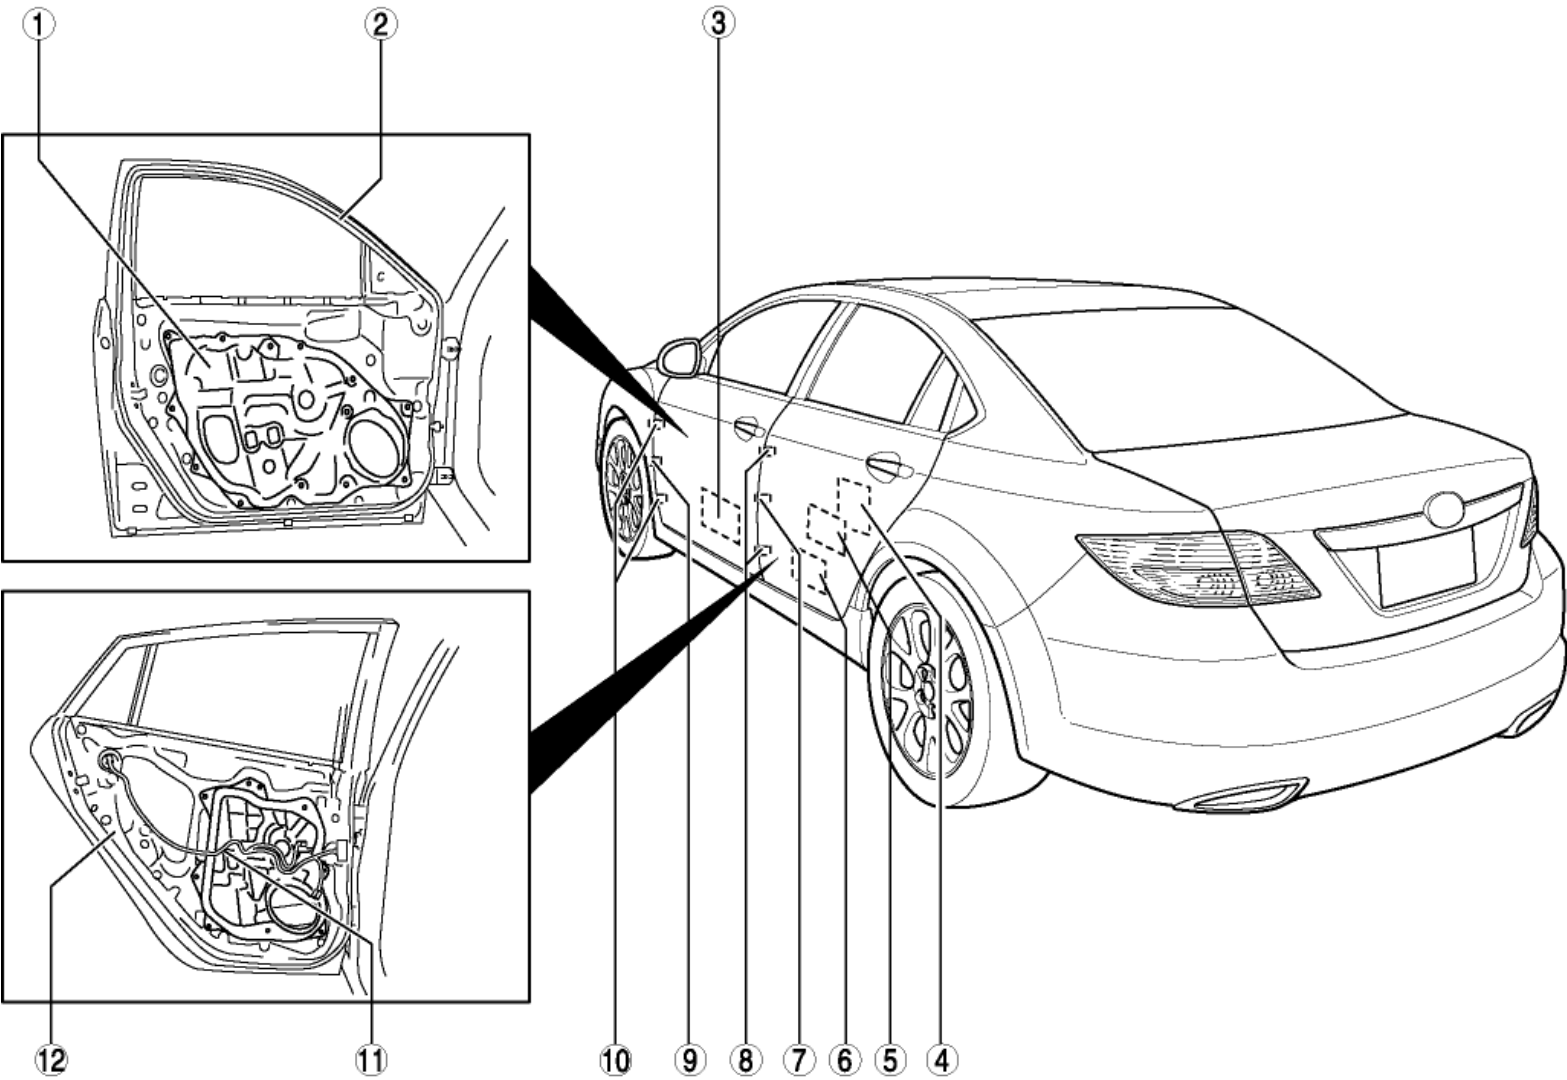


1	Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/ INSTALLATION.)
2	Front door (See FRONT DOOR REMOVAL/ INSTALLATION.) (See DOOR ADJUSTMENT.)
3	Front door pad (See FRONT DOOR PAD REMOVAL/ INSTALLATION.)
4	Rear door Hole cover (See REAR DOOR HOLE COVER REMOVAL.) (See REAR DOOR HOLE COVER INSTALLATION.)

5	Rear door pad No. 1 (See REAR DOOR PAD REMOVAL/ INSTALLATION.)
6	Rear door pad No. 2 (See REAR DOOR PAD REMOVAL/ INSTALLATION.)
7	Rear door checker (See REAR DOOR CHECKER REMOVAL/ INSTALLATION.)
8	Rear door hinge (See REAR DOOR HINGE REMOVAL/ INSTALLATION.)
9	Front door checker (See FRONT DOOR CHECKER REMOVAL/ INSTALLATION.)
10	Front door hinge (See FRONT DOOR HINGE REMOVAL/ INSTALLATION.)
11	Rear door module panel (See REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.)
12	Rear door (See REAR DOOR REMOVAL/ INSTALLATION.) (See DOOR ADJUSTMENT.)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

DOOR AND LIFTGATE LOCATION INDEX

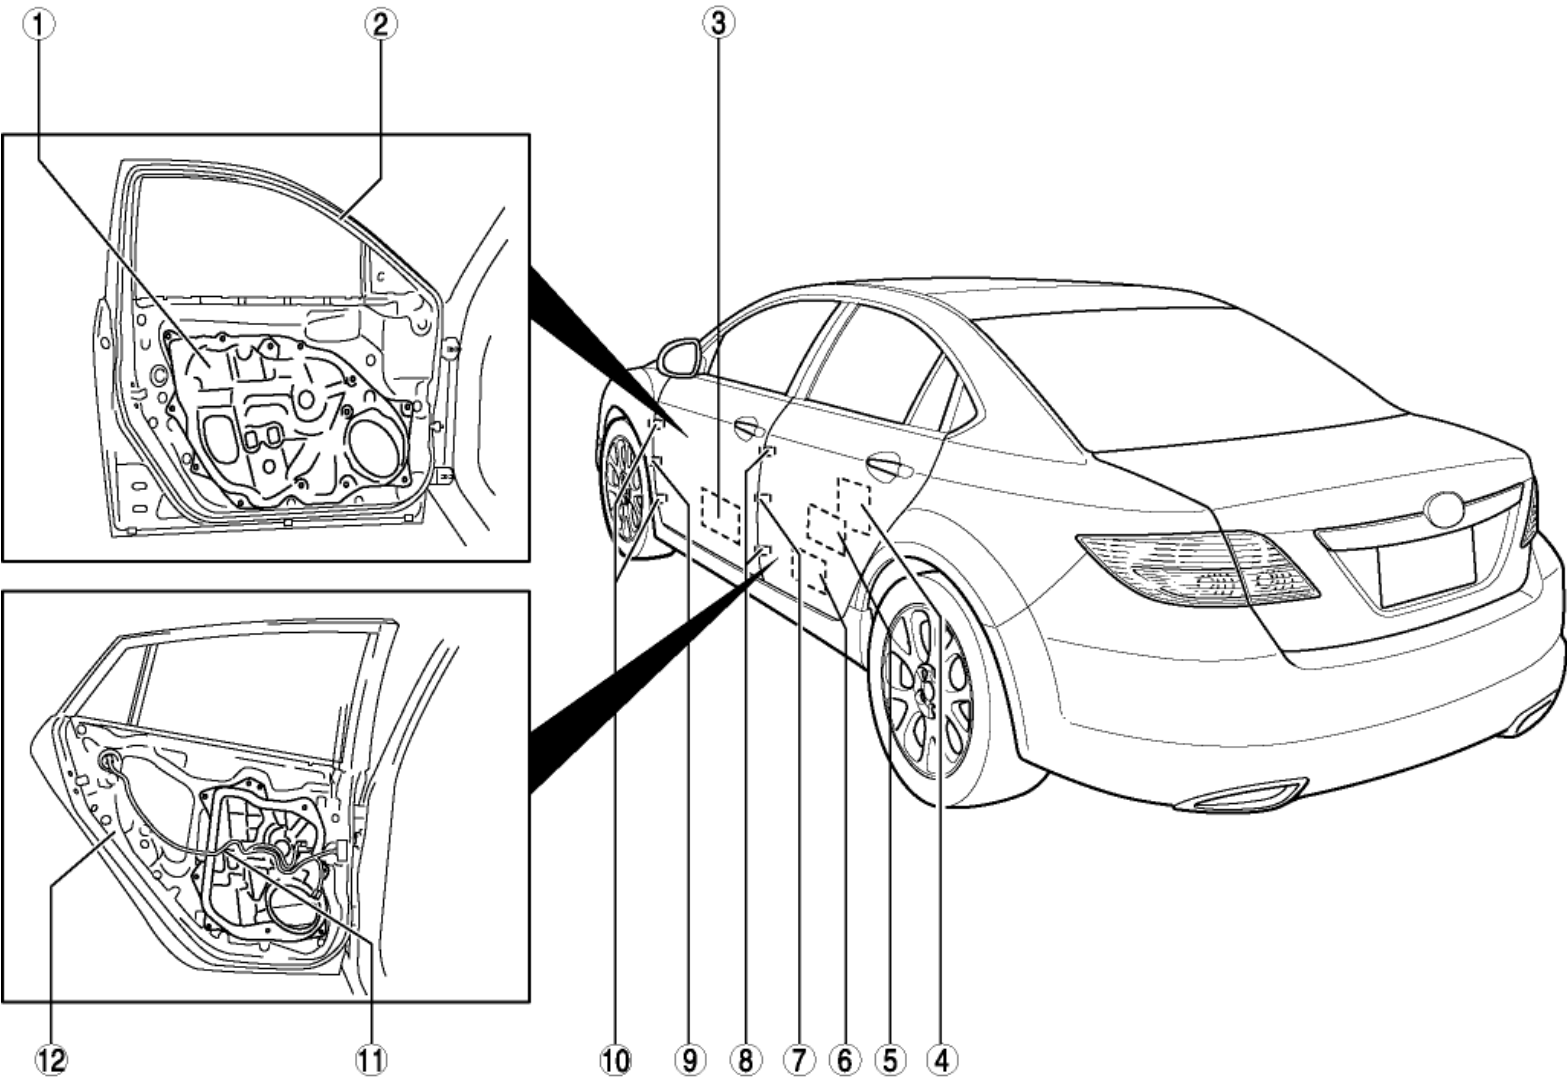

1	Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/ INSTALLATION.)
2	Front door (See FRONT DOOR REMOVAL/ INSTALLATION.) (See DOOR ADJUSTMENT.)
3	Front door pad (See FRONT DOOR PAD REMOVAL/ INSTALLATION.)
4	Rear door Hole cover (See REAR DOOR HOLE COVER REMOVAL.) (See REAR DOOR HOLE COVER INSTALLATION.)

5	Rear door pad No. 1 (See REAR DOOR PAD REMOVAL/ INSTALLATION.)
6	Rear door pad No. 2 (See REAR DOOR PAD REMOVAL/ INSTALLATION.)
7	Rear door checker (See REAR DOOR CHECKER REMOVAL/ INSTALLATION.)
8	Rear door hinge (See REAR DOOR HINGE REMOVAL/ INSTALLATION.)
9	Front door checker (See FRONT DOOR CHECKER REMOVAL/ INSTALLATION.)
10	Front door hinge (See FRONT DOOR HINGE REMOVAL/ INSTALLATION.)
11	Rear door module panel (See REAR DOOR MODULE PANEL REMOVAL/ INSTALLATION.)
12	Rear door (See REAR DOOR REMOVAL/ INSTALLATION.) (See DOOR ADJUSTMENT.)

[< Previous](#) [Next >](#)